
Owner's Manual

Version 2.0

HYDRASYNTH

✦ EXPLORER ✦



Polytouch®

ASM

HYDRASYNTH

✦ EXPLORER ✦

SOFTWARE LICENSING AGREEMENT

Thank you for choosing products by Ashun Sound Machines!

THE FOLLOWING IS THE SOFTWARE LICENSING AGREEMENT BETWEEN YOU, THE END USER, (REFERRED TO IN THIS AGREEMENT AS "YOU" OR "YOUR") AND ASHUN SOUND MACHINES, INC. (REFERRED TO IN THIS AGREEMENT AS "ASM") FOR YOUR USE OF THE SOFTWARE IN THIS PRODUCT AND OUR SUPPORT SERVICES TO YOU ("SOFTWARE" MEANS ALL OF THE INFORMATION WITH WHICH THIS AGREEMENT IS PROVIDED, INCLUDING BUT NOT LIMITED TO ASM OR THIRD PARTY SOFTWARE FILES AND OTHER COMPUTER INFORMATION, MAC/PC SOFTWARE OR THE HYDRASYNTH FIRMWARE). THE ENCLOSED SOFTWARE PROGRAM IS LICENSED BY ASM TO YOU AS THE ORIGINAL PURCHASER FOR USE ONLY ON THE TERMS SET OUT HEREIN.

UNLESS YOU HAVE READ AND ACCEPT ALL TERMS SPECIFIED IN THIS AGREEMENT, YOU MAY NOT DOWNLOAD, INSTALL OR USE THE SOFTWARE AND RELATED SERVICES. ANY BEHAVIOR INCLUDING DOWNLOADING, INSTALLING, USING, OBTAINING AN ACCOUNT, LOGGING IN, ETC. SHALL BE DEEMED THAT YOU HAVE READ AND AGREED TO THE TERMS OF THIS AGREEMENT.

1. GRANT OF LICENSE AND COPYRIGHT

ASM grants you, the original purchaser, the non-exclusive right to use the program and the data file constituting this software and the upgrade program(s) as well as the data file(s) which may be distributed to you from time to time (hereinafter referred to collectively as "Licensed Program") on associated ASM product(s) and/or a single computer under your control and used by only one person at a time.

The SOFTWARE and its copyrights are the property of ASM and are protected by all international copyright laws and treaties.

Therefore, you must treat the SOFTWARE like any other copyrighted material. All rights that are not provided for herein are reserved by ASM.

2. RESTRICTIONS

You shall not engage in any of the following acts in the course of using the Software except as permitted by law or by ASM's written permission:

Delete the copyright information on the Software and its copies;

Conduct reverse engineering, reverse assembly and reverse compiling on the Software, or any other attempts to discover the source code of the Software;

Use, lease, lend, copy, modify, link, reproduce, compile, release, publish, or establish a mirror site for the content for which ASM owns the intellectual property rights;

Copy, modify, add, delete and mount the data stored in any terminal memory by the Software or during the operation of the Software, the interactive data between the client and the server during operation of the Software, and the system data necessary for operation of the Software, or

create any derivative works by using plug-ins, add-ons or third-party tools/services unauthorized by ASM to access to the Software and related systems;

Add, delete, or change the functions or operating effects of the Software by modifying or forging the instructions and data, nor operate or disseminate to the public the software and methods used for the purposes described above, regardless of whether such acts are for commercial purposes;

Login or use ASM Software and Services through any third-party software, plug-in, add-on or system that was not developed or authorized by ASM, nor produce, publish, or disseminate these tools;

Interfere with the Software and its components, modules, or data on your own, nor by authorizing others or third-party software to do so;

Other acts not expressly authorized by ASM.

3. TREATMENT FOR BREACH OF AGREEMENT

If ASM finds or receives a report or complaint from others against the user regarding a violation of this Agreement, ASM is entitled to take immediate action, and announce the results of treatment.

You understand and agree that ASM is entitled to, based on reasonable judgment, penalize any act violating relevant laws and regulations or provisions of this Agreement, take appropriate legal action against any user in violation of laws and regulations, and preserve relevant information in accordance with related laws and regulations to report to relevant departments etc. The user shall bear all the resulting legal responsibilities.

You understand and agree that you shall be solely liable for any claims, requests or losses arising out of or in connection with your breach of the

provisions of this Agreement or relevant terms of the Services. You shall also be liable for the compensation of any losses caused to ASM.

4. TERMINATION

This agreement takes effect on the date you have received the Licensed Program. The license granted in this agreement will terminate automatically without notice from ASM in the event that you breach any provision of this agreement or in any way infringe ASM's copyright in the Licensed Program.

In such event you must destroy the Licensed Program and any backup copies immediately.

5. LIMITATIONS ON LIABILITY

In no event shall ASM be liable to end-users for any damages whatsoever, including but not limited to financial damages for any loss of profits or information arising from the use of or inability to use this product. The foregoing provision is effective even if ASM has been advised of the possibility of such damages. Even if the SOFTWARE has any material, verifiable, and reproducible program errors, ASM shall have no liability to modify such errors.

6. THIRD PARTY SOFTWARE

ASM may on occasion supply software programs, data files and/or documentation belonging to a third party or parties (hereinafter collectively referred to as "Third Party Software").

If supplied in conjunction with any ASM instrument or equipment, such Third Party Software shall only relate to the non-essential functions of such instrument or equipment.

In the event that Third Party Software is supplied, you agree to be bound by and to observe any terms and conditions relating to the use of such Third Party Software.

ASM shall not be obliged to provide support services for any Third Party Software supplied (whether relating to operating methods, defects, or otherwise).

ASM provides no warranty in relation to any Third Party Software supplied, and all warranties whether express or implied as to the condition, quality, performance, merchantability, or fitness for purpose of the Third Party Software or any part of the same are (in so far as may be permitted by law) hereby excluded.

ASM furthermore disclaims all responsibilities for direct, derivative, collateral, or consequential damages caused by the use of or the inability

to use the Third Party Software (including but not limited to damage of data, lost commercial profit, interruption of work, or lost commercial information), regardless of the degree of damages, and even if ASM was aware of the possibility of such damages in advance.

7. SUPPORT SERVICES

Support services such as technical support or upgrade support for this product are provided according to the support service policies of ASM's distributors applicable in each country.

ASM reserves the right to amend any such policies from time to time at its absolute discretion.

8. GENERAL

The license created by this agreement is personal to you, and you may not assign or otherwise transfer your rights or obligations under this agreement without the prior written consent of ASM.

If any part of this Agreement is found by a court of competent jurisdiction or other competent authority to be invalid, unlawful, or unenforceable then such part shall be severed from the remainder of this Agreement which will continue to be valid and enforceable to the fullest extent permitted by law.

This agreement is governed by and construed under the local law of the country where this product has been purchased.

SPECIAL THANKS

DESIGN & DIRECTION

- Glen Darcey

PRODUCT MANAGER

- Dominic Au

ENGINEERING

- Chen Jiejun (engine)
- Banner Xu (firmware) • Yang Zhihang (software)
- Ye Haipeng (electronic) • Chen Si (electronic) • Luo Liangsheng (electronic)
- Fu Jieming (Mechanics) • Liang Weiming (Mechanics)
- Zhou Peng (Mechanics) • Fan Xiaoxian (Mechanics)

INDUSTRIAL DESIGN

- Gao Chao • Long Ping

TESTING

- Zheng Wei Cheng • Ken “Flux” Pierce • Maria Zhang • Randy Lee • Leng An

SOUND DESIGN

- Drew Anderson • Jim Cowgill • Mord Fustang • Ken “Flux” Pierce • Ben Scheffler
- Dominic Au • Glen Darcey • Boele Gerkes • Matt Pike • Paul Schilling
- Roger Austli • Daniel Fisher • Rob Jervons • Aquila Rift • Matia Simovich

MANUAL

- Randy Lee (author) • Nancy Lee (design & layout)

© Ashun Sound Machines – 2025 – All rights reserved.

www.AshunSoundMachines.com

Information contained in this manual is subject to change without notice and does not represent a commitment on the part of Ashun Sound Machines. The software described in this manual is provided under the terms of a license agreement or non-disclosure agreement. The software license agreement specifies the terms and conditions for its lawful use. No part of this manual may be reproduced or transmitted in any form or by any purpose other than the purchaser’s personal use, without the express written permission of Ashun Sound Machines.

All other products, logos or company names quoted in this manual are trademarks or registered trademarks of their respective owners.

IMPORTANT SAFETY INSTRUCTIONS

Save Your Ears!

The product and its software, when used in combination with an amplifier, headphones or speakers, may be able to produce sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high level or at a level that is uncomfortable.

If you encounter any hearing loss or ringing in the ears, please consult an audiologist.

Precautions Include, but Are Not Limited to, the Following:

1. Read and understand all the instructions.
2. Always follow the instructions on the instrument.
3. Before cleaning the device, always remove the USB and DC cable. When cleaning, use a soft and dry cloth. Do not use gasoline, alcohol, acetone, turpentine or any other organic solutions; do not use a liquid cleaner, spray or cloth that's too wet.
4. Do not use the device near water or moisture, such as a bathtub, sink, swimming pool or similar place.
5. Do not place the device in an unstable position where it might accidentally fall over.
6. Do not place heavy objects on the device. Do not block openings or vents of the device; these locations are used for air circulation to prevent the device from overheating. Do not place the device near a heat vent at any location with poor air circulation.
7. Do not open or insert anything into the device that may cause a fire or electrical shock.
8. Do not spill any kind of liquid onto the device.
9. Always take the device to a qualified service center. You will invalidate your warranty if you open and remove the cover, and improper assembly may cause electrical shock or other malfunctions.
10. Do not use the device with thunder and lightning present; it may cause electrical shock.
11. Do not expose the device to direct sunlight or extreme temperatures.
12. Do not use the device when there is a gas leak nearby.
13. Refer to all manufacturers' instructions regarding the proper installation, use, and disposal of batteries.
14. Ashun Sound Machines is not responsible for any damage or data loss caused by improper operation of the device.

Specifications Subject to Change

The information contained in this manual is believed to be correct at the time of printing. However, Ashun Sound Machines reserves the right to change or modify any of the specifications without notice or obligation to update the hardware that has been purchased.

Before Requesting Service...

Please study this manual carefully and consult your dealer before requesting service. Service charges incurred due to a lack of knowledge relating to how a function or feature works (when the product is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owner's responsibility.

About Ratio	29	The LFOs	44
Window	29	What's an LFO?	44
Pulse Width modulation	29	LFO features	44
PW-Orig	30	LFOs 1 and 2	44
PW-Squeez.	30	LFO parameters: page 1	44
PW-ASM [Warp]	30	LFO parameters: page 2	45
Harmonic	30	LFO parameters: page 3	45
PhazDiff	31	LFO parameters: page 4	46
Ring-Noise Module	31	The Step LFO	46
Waveform List	32	LFO Shortcuts	49
The Mixer Module	33	The Effects	50
Mixer parameters: pages 1-2	33	Pre- and Post-FX	50
Setting Levels	33	Bypass	50
The Solo Function	33	Chorus	50
Mixer parameters: pages 3-4	33	Flanger	50
Set the Pan Positions	34	Rotary	51
Mixer parameters: pages 5-6	34	Phaser	51
Filter Routing of Sources	34	Lo-Fi	51
Filter Configuration	34	Tremolo	52
The Filters and their Controls	35	EQ	52
Filter 1	35	Compressor	52
Filter 1 types	35	Distort	53
Compensated vs. Uncompensated filters	35	Delay Types	53
Filter 1 parameters: page 1	35	Delay Parameters	53
Filter 1 parameters: page 2	36	Reverb Types	54
Filter 1 parameters: page 3	37	Reverb Parameters	54
Filter 2	37	Freeze the Reverb	54
Filter 2 parameters: page 1	37	Mod Route Shortcut	54
Filter 2 parameters: page 2	38	Global FX Bypass	54
The Amp Module	39	The Voice Module	55
How the Parameters Interact	39	Voice Parameters: page 1	55
LFO 2 Amount	39	Polyphony settings	55
Velocity Envelope (Vel Env)	39	How does Analog Feel?	55
Amp Level	39	Density & Detune	55
The Envelopes	40	Voice Parameters: page 2	55
What's an Envelope?	40	Stereo mode, Stereo width	55
Envelope features	40	Random Phase	56
Envelopes 1 and 2	40	Warm mode	56
Envelope parameters: page 1	40	Voice Parameters: page 3	56
Envelope parameters: page 2	41	Pitch Bend	57
Envelope parameters: page 3	41	Vibrato settings	57
Envelope parameters: page 4	42	Voice Parameters: page 4	57
Envelope parameters: pages 5-6	43	Glide settings	57
Envelope Shortcuts	43	Voice Parameters: page 5	58
Copy Env A to Env B	43	Key Lock	58
Create a direct Mod route	43	Snap	58

Select a Scale	58	Clock	73
Custom Scale	58	CVs and Arpeggios	73
Microtonality	59	Patch Management	74
Voice Parameters: page 6	59	Using the Browser	74
Sustain Pedal options	59	Browse parameters: page 1	74
VoiceMod Edit	60	Sort Methods	74
The Arpeggiator Section	62	Browse parameters: page 2	74
Arp Edit Mode	62	Compare	75
Arp parameters: page 1	62	Favorite Assign...	75
Arp parameters: page 2	62	Browse Favorites	75
Arp parameters: page 3	63	Save the Patch	75
Arp parameters: page 4	64	Patch Protection	75
Additional Arp Features	65	Save parameters: page 1	76
Latch and Sustain	65	Name the Patch	76
Initialize the Arp.	65	Select a Category	76
The Arpeggiator & MIDI	65	Save parameters: page 2	76
Mastering the Macros	66	Macro Options	76
Home Page	66	Choose a Color	77
Make a Macro	66	Patch Backup	77
Assign a Destination	66	The System Setup Pages	78
Name the Macro	67	Operational Notes	78
Save the Patch: Macro Options	67	Navigation	78
Macro Button Response	67	Access, Action	78
Preset Macro Name List	68	Saving the Settings	78
The Mod Matrix	69	Save System State	78
Creating Mod Routes	69	Notes About Notes	78
The Whole Process	69	Master: Page 1	78
The Shortcut	69	Master: Page 2	78
Direct Assignment	70	Light Menu	78
Notes About Mod Routes	70	Master: Page 3	79
More Shortcuts	70	Knob Mode	79
Clear a Mod Slot	70	Knob Speed	79
Clear the Entire Mod Matrix	70	Tempo Lock	79
Be Random	70	Macro Button	79
Modulation Sources	70	Master: Page 4	79
Modulation Destinations	71	Safe Edit	79
The CV / Gate Section	72	Battery type	80
Basic Concepts	72	FX Bypass Menu	80
A Few More...	72	Microtuning Menu	80
CV/Gate Polyphony	72	Keys: Page 5	81
Clocks and Sync	72	Velocity settings	81
Compatibility	72	Keys: Page 6	81
Output Connectors	73	Aftertouch settings	81
Pitch	73	MIDI: Page 7	82
Gate	73	Clock Sync	82
Mod 1 and 2	73	Local	82
		MIDI: Page 8	82

Aftertouch Transmit	82
MIDI: Page 9	82
What is MPE?	82
MIDI: Page 10	83
Parameter send/receive options	83
What's a NRPN?	83
Send Patch / All Patches	83
MIDI: Page 11	83
Overflow	83
Arp TX	84
Pgm Chg TX / RX	84
CV – Pitch Gate: Page 12	84
CV – Pitch Gate: Page 13	84
CV – Clock: Page 14	84
Clock Division	85
CV – Mods: Page 15	85
Calibration: Page 16	85
Calibrate Strips	85
System: Page 17	85
OS: Page 18	85
Control Combinations	86
[INIT] + Button X	86
[INIT] + Control Button X	86
[RANDOM] + Button X	86
[SHIFT] + Button X	87
[SHIFT] + Control Knob X	87
[SHIFT] + Control Button X	87
Scales	88
Preset Standard Scales	88
Preset Microtuning Scales	89
The Phrases	90
MIDI CC Charts	94
Sorted by Module	94
Sorted by CC Number	95
Specifications	97
Physical	97
Connections: Rear Panel	97
CV/Gate/Clock outputs:	97
Control Voltages	97
Gate Output	97
Clock Output	97
Declaration of Conformity	98
USA	98
CANADA	98
EUROPE	98

===== WELCOME TO HYDRASYNTH EXPLORER!

Everyone at Ashun Sound Machines would like to thank you for choosing one of our Hydrasynth instruments. We're very proud of what we have created, and are confident they will take you into musical realms that have never been explored.

Every aspect of these ground-breaking devices has been carefully considered, from the way the sounds are generated and processed, to the intuitive layout of the controls and displays. Everything from impulse to performance has been optimized to unleash the creative potential of these instruments in your hands.

Main Features

This chapter will only list the main features of Hydrasynth Explorer. But there are many more, and each feature and its related parameters will be described in the pages ahead. Advanced users might find quick answers to important questions in [Specifications \(p. 97\)](#).

User interface

- Intuitive workflow, perceived at a glance
- Top-panel controls for instant access to important features
- Easy shortcuts for mod route construction
- Two independent OLED displays
- 4 Control knobs and 4 Control buttons around the Right display
- 8 assignable Macros per patch, accessible on Home page
- Arpeggiator: 8 modes with direction, octave, chord, and phrase options
- Patch browser: Organize by Name, Category, or Patch number
- Memorize / instantly recall up to 32 Favorites
- Overflow mode can link two units for expanded polyphony

Patch features

- 8 banks of 128 patches each
- Mono and Unison voice modes, with unison detune
- Glide and glissando with programmable time, curve, trigger mode
- Mod Matrix with 32 routes per patch
- Programmable Analog Feel emulates the behavior of analog circuits
- Randomize function for individual modules or an entire patch

Sound engine

- 8 voices, with three oscillators per voice
- Analog modeling (Osc 1-3) and WaveScan synthesis (Osc 1+2)
- Select from hundreds of waveforms and then morph / mutate / warp them at will
- Preset scales with microtonal options and the ability to import custom scales
- Filter 1: 16 filter types, including vocal formant filters
- Filter 2: classic state-variable 12dB / octave with two modes
- Filters can be placed in series or parallel
- Loopable ADSR envelopes with Delay and Hold stages
- Curve and BPM value for each segment
- Each envelope can have up to 4 trigger sources

Effects

- Delay: five types, including Left-Right-Center and reverse
 - All delays can sync to tempo
- Reverb: four types, with pre-delay and damping parameters
 - Reverb lengths to 90 seconds, plus "Freeze"
- Independent Pre/Post FX: Chorus, Flanger, Rotary, Phaser, Lo-Fi, Tremolo, EQ, Compressor, Distortion
- Global bypass of any or all FX modules

Hardware

- MIDI In/Out
- USB type B port, class-compliant
- CV/Gate and outputs for integration with modular synthesizers
- Headphone output
- Stereo 1/4" outputs (balanced)
- Sustain pedal input (polarity-sensing)
- LED Brightness controls for darkened rooms
- Kensington lock port
- 37 mini-key, semi-weighted Polytouch® keyboard with polyphonic aftertouch and velocity sensitivity (note on/off)
- Dedicated controls for Filter and Arpeggiator sections
- Pitch bend strip and Modulation strip with LED depth indicator
- Octave Down / Up buttons
- Chord mode with dedicated button
- Can be powered by 8 AA batteries for hours of portable creativity

Inside the Box

Your Hydrasynth Explorer was carefully packed at the factory with the following items:

- The Hydrasynth Explorer
- This manual
- The power supply (12VDC / $\geq 1A$)

Save Your Receipt!

Ashun Sound Machines designed and constructed your Hydrasynth Explorer with extreme attention to detail. Our quality assurance personnel test each unit thoroughly before it goes out.

But in the unlikely event of a hardware problem, you will need to present your original receipt in order to obtain warranty service. This will help the service center to confirm your warranty coverage. So please be sure to save your receipt in a safe location!

Plug It In

Power

Before switching the unit on, please lower the volume of your speakers or mute the input channels on your mixer. This will help prevent any damage to your speakers or ears.

There are two options for powering the Hydrasynth Explorer: the included power supply or 8 AA batteries (optional). In either case it is essential to **use only the recommended sources**:

- DC power: Use only the power supply that was in the box with your Hydrasynth Explorer (12 Volts DC, ≥ 1 Amp). Make sure the power switch is in the OFF position before making this connection.
- Batteries (optional): Use only 1.5V alkaline or 1.2V Ni-MH rechargeable batteries. An icon in the upper right corner of the Left display indicates the power source type and battery levels (when used). To ensure an accurate indication of battery level, be sure to specify the type of battery being used on [Master: Page 4 \(p. 79\)](#).

Important notes about using battery power:

- DO NOT MIX BATTERY TYPES; all 8 batteries must be the same type.
- A separate device must be used to recharge the Ni-MH batteries. Do not attempt to recharge alkaline batteries.
- Replace all batteries at the same time with new (or freshly recharged) batteries of the same type, model, and manufacturer.
- Insert all batteries according to the +/- polarity markings inside the battery compartment.

- Always remove the batteries once they are depleted, or if you do not plan to use the Hydrasynth Explorer for an extended period of time. (We know; that's hard to imagine!)

Audio

Using a mixer or audio interface

After muting the channel inputs or lowering the volume of your speakers, connect a pair of 1/4" cables from the rear-panel output jacks of the Hydrasynth Explorer to the inputs of your mixer or audio interface. Then set the Hydrasynth Explorer power switch to the ON position.

Note: The USB connection is not an audio output.

Using headphones

If you plan to connect headphones to the Phone jack on the Hydrasynth Explorer, turn the unit on first and then connect the headphones. The headphone level is controlled by the Master Volume knob.

Master Volume control

The Master Volume knob controls the overall output level of the Hydrasynth Explorer. It's an analog control, which means it does not communicate its position or movements digitally via USB or MIDI.

But Master Volume does respond to MIDI CC #7 via USB and MIDI. So if you are using the Hydrasynth Explorer with a computer, for example, remember that you'll need to adjust its level using a MIDI track in your DAW.

USB

Hydrasynth Explorer is a USB class-compliant device, so there are no drivers to install. Just plug it into your computer and it will be available immediately as a MIDI input/output device.

CV/Gate

Your Hydrasynth Explorer has a row of connectors that are used to interface with modular synthesizers. Each one can be configured to match the

MIDI

The Hydrasynth Explorer has two 5-pin MIDI connectors to allow you to interface with other MIDI devices. MIDI Out sends data from the Hydrasynth Explorer and MIDI In receives data from other MIDI devices.

voltages and signal types of the most popular formats. For details, see [The CV / Gate Section \(p. 72\)](#).

Make Some Noise!

By now you've already played the instrument and tweaked the controls. Now let's take a quick tour of some of the main features.

To get started, press the Home button. This will exit any page and take the Hydrasynth Explorer to the top level of the patch.

Select Patches

There are several ways to explore the patch banks inside the Hydrasynth Explorer. The simplest way is to turn the Patch knob (the big one in the middle). This will move you through the bank one patch at a time. You'll see the patch name, bank, and number in the Left display.

You can also hold [SHIFT] and turn the Patch knob to jump between the banks. This can save a lot of scrolling if you know the location of the patch you're looking for.

The Browse button opens the patch browser in the Right display. You'll want to read the section [Using the Browser \(p. 74\)](#) to learn about things

like Categories, Favorites, and other search techniques.

Octave shift

If you want to hear a sound in a higher or lower range than the keys currently reach, you can shift the range quickly by one or more octaves. The Hydrasynth Explorer keyboard has dedicated buttons above the pitch/mod strips that flash faster as the range moves further from center; at maximum shift the buttons are lit solid. To reset the range, press both buttons.

Arpeggiator basics

Arpeggiators can turn a great sound into a whole performance! So when you're ready, press the Arpeggiator [ON] button to activate the arpeggiator. Then hold down two or more keys while experimenting with the other controls in the Arpeggiator section. Here's a quick description of each.

Control	Function
Mode	Determines the arpeggiator direction and other behaviors.
Octave	Sets the range of the arpeggiator.
Division	Selects the basic time division of the arpeggiator relative to the tempo.
Swing	Eight settings allow you to add a certain amount of "shuffle feel" to the arpeggio.
On	This toggles the arpeggiator on and off. Use it with [SHIFT] to enter Edit mode.
Latch	Lets you take your fingers off the keys and use both hands to adjust parameters. It works whether an arpeggio is running or not.
Triplet	Subdivides the selected Division setting into triplets.
Tap Tempo	Tap several times to set the tempo.

There are words in orange letters under two of the buttons: EDIT and SUSTAIN. These are used with the [SHIFT] button to access their secondary functions. We'll describe those and the other arpeggiator features in [The Arpeggiator Section \(p. 62\)](#).

Tweaking the sounds

The Right display provides information about what is happening and what the options are, no matter what you're doing with the Hydrasynth. We'll dig down into every parameter eventually, but for now let's start at the top again. So please press [HOME] to make sure you're seeing what we're describing.

The Home page: Macro City

When Hydrasynth Explorer is on the Home page the Control knobs and Control buttons become modulation sources for the Macros. Each Macro can alter as many as eight parameters at one time by activating a single control. Every patch has eight Macros available.

Macros allow you to achieve complex results, but they're easy to create. When you're ready to try that, see [Mastering the Macros \(p. 66\)](#).

The rest of the Master Control section has buttons that will be useful in the near future. We'll cover them in [Master Control Section \(p. 19\)](#).

The Filter section

This section has two buttons and three knobs. The buttons select which of the two filters the knobs will control, after which the knobs can do their thing.

Knobs 1 and 2 are the same for either filter: they control Cutoff and Resonance, respectively. If Filter 1 is selected the third knob controls the Drive amount for that filter; if Filter 2 is selected the third knob allows you to "morph" the characteristics of that filter.

Those descriptions barely scratch the surface, though. To delve more deeply into what the Hydrasynth Explorer filters can do, read [The Filters and their Controls \(p. 35\)](#).

Saving

In the process of tweaking a sound you will often create something you'd like to keep. If that has already happened, jump ahead to the Patch Management chapter and follow the instructions in [Save the Patch \(p. 76\)](#).

Check for Updates

Be sure to visit www.AshunSoundMachines.com soon, and often! It's your source for important things such as:


- Firmware updates for your Hydrasynth Explorer
- An interactive version of this manual
- Banks of new patches from our top-notch sound design team
- Tutorial videos to help you master the intricacies of the Hydrasynth Explorer
- The original factory banks
- Our free patch librarian, ASM Manager
- ...and more!

That's Enough Reading for Now.

We've covered the basics. Now let your creativity go wild!

The Hydrasynth Explorer represents a perfect balance of instant access, intuitive workflow, powerful features, and great sound, all with a single aim: to make the creation and performance of mind-blowing music easier and more fun.

Top Panel: Hydrasynth Explorer

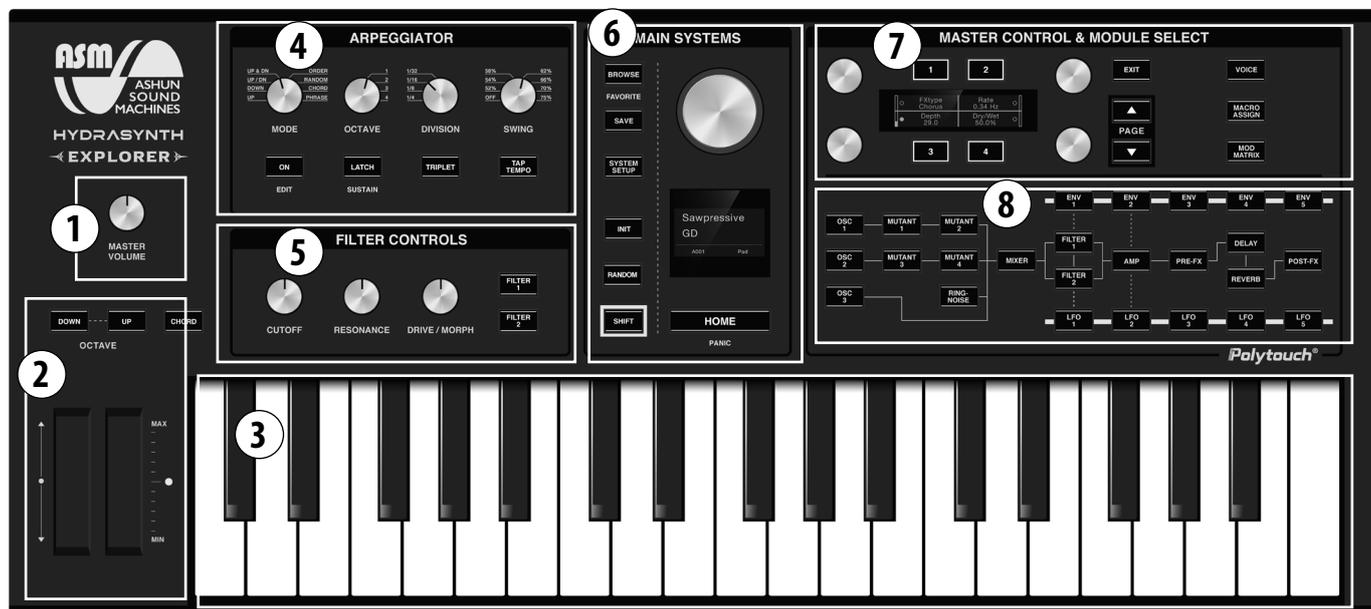

Section	Name	Section	Name
1	Master Volume	5	Filter Controls section
2	Pitch / Mod strips, Octave / Chord buttons	6	Main Systems section
3	Keyboard	7	Master Control section
4	Arpeggiator section	8	Module Select section

General Concepts

Access buttons

The Access buttons are located in several areas of the top panel. Many of the buttons in the Main Systems and Master Control sections and all of the buttons in the Module Select section are Access buttons. Their purpose:

- Press an Access button and the main parameter page for that feature appears in the Right display for editing.
- If more pages exist, one or both Page buttons will point to the other pages.
- Pressing an Access button repeatedly will also scroll through its pages.

Function buttons

These are the white-lettered buttons, and they make instant changes (switch filters, toggle something, activate a Macro, etc.). It might help to remember that

- buttons with orange letters **select** things and
- buttons with white letters **do** things.

For example: To enable the Arpeggiator, press the [ON] button. To exit any page, press [EXIT] or [HOME].

Control knobs

There are two knobs on either side of the Right display. They are “endless encoders”: parameters are edited from their current value, rather than jumping to another value that was based on the position of the knob.

The Control knobs play different roles depending on the page that has been accessed:

- On the Home page they are used as Macro controls.
- On a parameter page they are used to adjust parameter values.

A vertical bar next to each Control knob indicates value and range; the bar can be unipolar or bipolar, depending on the parameter. If the parameter is bipolar, the middle point of the bar = 0.0; values above or below that show an increase or decrease in the value.

Control buttons

Each Control knob is paired with a Control button. Their function also depends on the page that has been accessed.

- On the Home page they can affect a Macro in one of four ways (Toggle, Trigger, Switch, or Reset). This choice is made on System Setup [Master: Page 3 \(p. 79\)](#).
- On a parameter page they are used to:
 - select a parameter value for editing
 - toggle a value (Oscillator Solo on/off, for example), or
 - enter a lower-level editing page (i.e., Wavelist Edit for a WaveScan oscillator).

A dot next to each Control button indicates the toggle status of certain items (Macro enabled/disabled, Solo on/off, etc.).

Module Select buttons

These buttons access the parameter pages of the selected Module (Osc 1, Delay, LFO 5, etc.) The signal path generally moves from left to right, but vertical lines between two buttons indicate:

- a pre-wired connection (Env 1 / LFO 1 to Filters, Env 2 / LFO 2 to Amp), or
- the ability to be routed in Series or Parallel, as with the Filters, or
- order of operations, such as the output of the Delay is fed to the input of the Reverb.

You can also use the Module Select buttons as a quick way to set up a Mod Matrix route: Hold one (source) and press another (destination). For information about that, see [The Mod Matrix \(p. 69\)](#).

Knob types

Selection knobs

These are only found in the Arpeggiator section. A “selection knob” clicks between positions to select a value. Of these four, only the Swing parameter can be set to intermediate values (see [Swing \(p. 62\)](#)).

Variable knobs

Hydrasynth uses two types of variable knobs:

- 270° encoders: The range has an upper and lower limit. Examples: Master Volume, Filter Cutoff
- Endless encoders: These have no range limits, so an edit always starts from the current value.

The displays

At the center of it all are two high-resolution OLED displays, also known as the Left display and the Right display. They serve different purposes:

- The Left display is for Patch selection and helpful graphics.
- The Right display is for parameter selection and adjustment. Each quadrant shows the value and status of the current parameter:
 - A vertical bar shows value and range; it can be unipolar or bipolar, depending on the parameter. If it is bipolar, the middle point = 0.0; values above or below that show an increase or decrease in the value.
 - A dot shows the status of certain items (Macro enabled/disabled, Solo on/off, etc.).

When an Access button is pressed, the Right display and its surrounding controls change functions to allow instant access to the most-used parameters. The Page up/down buttons put all other parameters within easy reach.

Main Systems



Patch selection

One of the major functions of this section is patch selection. There are several methods, and you might use them all at different times depending on what you're doing.

Patch knob

From the Home page you can select an adjacent patch by turning the Patch

knob a single click in either direction. You can also jump between the banks if you hold [SHIFT] while turning the knob.

Browse

This page lets you alter the way the patches are presented in each bank. There are three different sort orders: By Patch #, by Name, or by Category.

The Browse page also contains a robust Compare feature, as well as a sub-menu where you can designate a patch as a Favorite. You can stash up to 32 patches in your Favorites bank for instant access.

For details on each of these functions, see [Using the Browser \(p. 74\)](#) in the Patch Management chapter.

Favorites (Shift + Browse)

When you need to find your best sounds immediately you can jump straight to your Favorites bank from any other page.

- Hold [SHIFT] and press [BROWSE] to access your Favorites
- Use the Page Down/Up arrows to move between the eight banks of Favorites
- Press the Control button next to the patch name to select it.

The HOME button

The Home button is in the center of the top panel. It provides instant access to the Home page. Four of the eight Macros are located here; press [Home] again to reach the second set of Macros.

All Notes Off

Sometimes MIDI signals are disrupted and a note becomes stuck. If that happens, hold [SHIFT] and press [HOME] to transmit an "All Notes Off" command. This will silence any stuck notes.

The SAVE button

Whenever you've made an edit that you'd hate to lose, press [SAVE] to access the Save page. You'll be able to select a new location for the edited patch, rename it, and choose a category for the sound (Bass, Pad, etc.). You can even decide which color the knob will be when the patch is selected.

There's another feature that determines whether the positions of the Macro knobs will be stored as-is, returned to zero, or saved as edits to the parameters they control.

For details on each of these functions, see [Save the Patch \(p. 76\)](#).

System Setup

This section has 18 pages. It holds all of the global settings for the keyboard, the knobs, MIDI functions, the CV/Gate section, etc.

[SAVE] and [SYSTEM SETUP] are used together to specify the boot-up patch for the Hydrasynth.

For details about each page, see [The System Setup Pages \(p. 78\)](#).

The INIT button

Reset a parameter

The INIT button will reset any parameter to its default value: just hold [INIT] and press the Control button next to that parameter's value. The Control button will light up next to any parameter that has been edited, which helps you know which one to press.

Initialize a Module

You can reset the parameters for an entire Module using a similar method:

- Hold [INIT].
- Press the Access button for the desired module.
- Confirm the decision by pressing [INIT] again.
- If you decide not to initialize, press [EXIT] to cancel the procedure.

Initialize a Patch

If you want to build an entire patch from scratch, press [INIT] twice in a row. This will erase the contents of the Edit buffer, so be sure to save any edits you don't want to lose.

The RANDOM button

If you're the adventurous type, you will love this button! It can randomize the value of any parameter, any module, or even an entire patch.

Randomize a parameter

To randomize a single parameter, hold [RANDOM] and press the Control button next to that parameter's value. The Control button of every available parameter will light up, so you'll know which ones not to press (the dark ones won't do anything).

Randomize a Module

You can randomize the parameters for an entire Module using a similar method:

- Hold [RANDOM].
- Press the Access button for the desired module.
- Confirm the decision by pressing [RANDOM] again.
- If you decide not to randomize, press [EXIT] to cancel the procedure.

Random Patch generation

You can even randomize every value, including the Effects! There are two ways:

- Press [RANDOM] twice. The Left display shows "GENERATE" after the first press, and after the second press a random selection of values is generated.
- Hold [SHIFT] and press [RANDOM] twice. The Left display shows "PATCHRND" after the first

press, and after the second press a random selection of values is pulled from other patches.

Sometimes the results can be strange, but that's okay; just try it again. Once you get something interesting, you can save it like that or tweak it as needed.

Percent of Randomization

The Random feature can specify how much randomization happens in each module. Press [RANDOM] and use these three Pages to set the randomization limits for each.

Page	Modules	Range
1	OSC 1-3, Mutant 1-4, Mixer, Filters	0-100%
2	Macro, ModMtrx, ENV, LFO	0-100%
3	Voice, Amp, FX, Arp	0-100%

Note: a limited Range means the randomization selects from a smaller range of values when you randomize a specific parameter (e.g., the OSC Wave).

The SHIFT button

The Shift button is used in combination with various buttons and knobs to access secondary functions. When these are available the secondary functions are indicated with a row of orange text under the control.

In some cases [SHIFT] is used to accelerate value selection. For example, if you hold [SHIFT] and turn the Patch knob you can jump between Patch banks, as opposed to the standard operation of +/- 1 patch.

You can also use [SHIFT] to help fine-tune a value that has a large range. For example, if you want to set a precise value for filter resonance, hold [SHIFT] and turn the appropriate Control knob.

For a complete list of the available Shift functions, see [Control Combinations \(p. 86\)](#).

Master Control Section



If you like to make your own patches, you might

enjoy this top-panel section the most. When a Module is accessed the parameter values are shown in the Right display, selected with the Control buttons, and adjusted with the Control knobs. The Page Up/Down buttons provide access to more parameters whenever a Module offers more than four. We'll cover the parameters of each Module in [Understanding the Modules \(p. 23\)](#).

The Master Control section is also a lot of fun when you're on the Home page, thanks to the powerful Macro controls. For live performance or on-the-spot creativity, the Macros can kick everything into high gear. See [Mastering the Macros \(p. 66\)](#).

EXIT button

This button will light as soon as you enter any page. It will take you back to the previous page, and it can cancel a process if you decide not to do something (Initialize, Randomize, Save, etc.). The Home page is the only page where [EXIT] is not lit, because that's the top level of the patch.

PAGE Up / Down buttons

These two buttons are lit if the selected module has more than one page. If one of those buttons is lit that means there are pages available in that direction. If both are lit then pages are available in both directions. If neither is lit, there are no additional pages to select.

Access buttons can be used to flip between pages too, which works great if there are only a few pages. But if the module has a lot of pages and the parameter you want is more than a few pages away, hold [SHIFT] and press one of the lit arrows to jump to the first or last page. Then use the Page Up/Down buttons to reach the desired page.

VOICE button

This Access button takes you into a set of patch-level features like Pitch bend range, Vibrato settings, Mono/Poly/Unison voice modes, and the Glide settings. This is also where the Scale is defined for the keyboard.

Perhaps more subtle but equally important, the Voice module is also home to the Analog Feel and Random Phase settings. These can really bring a patch to life.

Arpeggiator Section



The Hydrasynth Explorer provides a comprehensive, cutting-edge set of arpeggiator features that you can enjoy immediately.

If you'd like more information, there's a chapter dedicated to the ins and outs (or "ups and downs", if you will) of [The Arpeggiator Section \(p. 62\)](#).

See [The Voice Module \(p. 55\)](#) for specific information.

MACRO ASSIGN button

This Access button opens a page that is like a hallway with eight doors, and behind each one is a lab that makes a powerful performance control called a Macro. You can define up to eight modulation routes for each Macro, and then use the Control knobs and Control buttons to manipulate the Macros from the Home page. Each patch has its own set of 8 Macros.

To learn more about what's on the other side of those doors, see the chapter [Mastering the Macros \(p. 66\)](#).

MOD MATRIX button

The Mod Matrix button reveals a digital patch bay that provides up to 32 sets of modulation routes per patch. These are in addition to the Macros, although they can be controlled by them (and vice versa).

- Potential sources for the modulation routes include LFOs, Envelopes, Velocity, the Sustain pedal, and any MIDI CC # (Continuous Control number).
- Destinations can be almost any Hydrasynth parameter, including any Mod Matrix route. Additional destinations include the Macros, the Mod 1 and Mod 2 CV outputs, and any MIDI CC #.

There's a lot to say about this topic, so you'll want to read [The Mod Matrix \(p. 69\)](#).

Filter Controls




Sweeping the filter frequency of a sound is a great way to heighten the emotional impact of the music. This is especially true during an arpeggio or a sequenced passage.

Hydrasynth Explorer offers several controls for exactly this purpose. You can sweep the filter frequency, adjust the resonance, and increase the drive amount of Filter 1, for example, and then switch to Filter 2 and perform similar

actions. However, for Filter 2 the third knob does not control the drive amount; instead it “morphs” the filter between three states (Low Pass / Band Pass / High Pass or Low Pass / Notch / High Pass, depending on the selected Type). For details, refer to [The Filters and their Controls \(p. 35\)](#).

Module Select

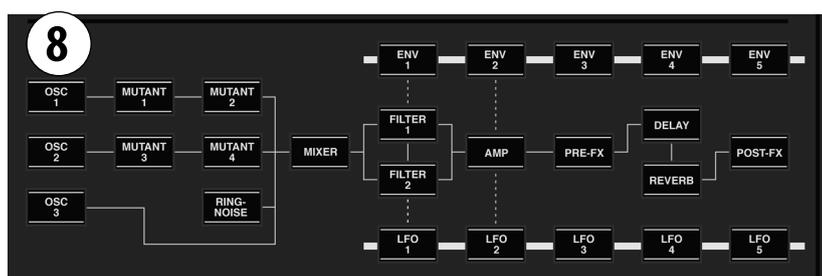

The Module Select section has 26 Access buttons which are used to view and edit the parameters for each patch. Their placement provides a visual

reference for the signal flow, which starts with the Oscillators, moves through the Filters, proceeds through the effects, and is sent to the outputs.

Pressing a Module button will reveal the first page of parameters for that module. If more than one page exists, the Page buttons are used to access

the other pages, as described earlier in [PAGE Up / Down buttons \(p. 20\)](#). Full details about the parameters of each Module are found in the chapters ahead.

Performance Controls

The Hydrasynth Explorer was designed to encourage the spontaneous exploration of sound and rhythm. Whether live or in the studio, the potential for unique performances is enhanced by the Macro controls on the Home page, as well as dedicated Filter and Arpeggiator controls. Along with those are a host of other interactive features, such as 37 PolyTouch® keys, pitch/mod strips, Octave buttons, Chord mode, and a headphone jack. And thanks to its portability and a healthy number of CV outputs, the outside world can join in on the fun!

We offer several models with identical voice architecture and editing methods. And if you will forgive the shameless plug, if you buy any one of the other models you can combine their polyphony by enabling [Overflow \(p. 83\)](#). It's a very cost-effective way to multiply the creative potential of your system.

Twice the fun for less than twice the price!

Chord mode


A single key can play up to 8 notes at once by activating the [CHORD] button. But a chord must be created before the button can be used.

To create a chord, hold [CHORD] and it will flash. Then play the notes you want the chord to contain. You can press them all at once or one at a time, which allows you to build chords that are outside your normal reach. The lowest note you enter will become the root note. When you're done, release the button.

There are a few things to remember about Chord mode:

- A chord can contain between 2-8 notes; <2 notes are not stored; notes >8 are ignored.
- The chord is not saved with a patch, and will be erased when the Hydrasynth Explorer is power-cycled.
- Chord mode puts the keyboard into mono mode (last note priority).
- All notes in the chord will be quantized to notes within the selected scale. (See [Select a Scale \(p. 58\)](#) in [The Voice Module \(p. 55\)](#).)
- The chord is not transmitted over USB or MIDI. A slaved device will only receive the played note.

Rear Panel

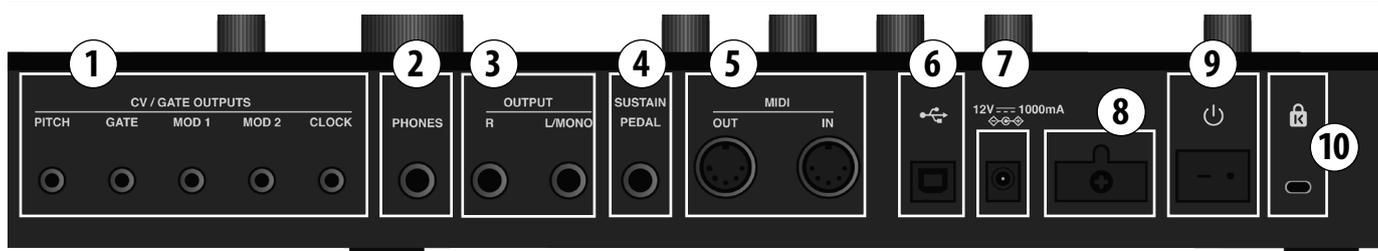

Section	Name	Description
1	CV / Gate connectors	Interface with modular synthesizers
2	Phones output	Compatible with a wide range of impedance ratings
3	Outputs	Left (mono), Right (for stereo)
4	Sustain pedal input	Polarity sensing on startup
5	MIDI connectors	In, Out
6	USB connector	Type B for computer connection
7	DC power connector	12 volts DC, $\geq 1A$
8	Power cable guard	Helps prevent accidental disconnection
9	Power switch	Gets the creative juices flowing!
10	Kensington lock	Helps prevent unwanted relocation

CV/Gate connectors

These five connectors allow the Hydrasynth Explorer to interface with the wild and wonderful world of modular synthesizers. There are five outputs (Pitch, Gate, Mod 1, Mod 2, and Clock), and each one sends voltages and signals that can control external devices.

The range of each voltage and what type of signals are sent are defined in [The System Setup Pages \(p. 78\)](#), and information about how to use them is in [The CV / Gate Section \(p. 72\)](#).

Outputs

Headphones

The headphone volume is controlled with the Master Volume knob.

Stereo Outputs

Connect the Left output if monaural signal is desired; connect both outputs if stereo signal is preferred.

Sustain pedal input

Connect a momentary footswitch here. Its polarity is detected on power-up, so any brand of pedal can be used.

MIDI

The Hydrasynth Explorer has two MIDI connectors to let you interface with other devices that might not have a USB port or CV / Gate connectors.

- **MIDI Out** sends data from the Hydrasynth Explorer to another MIDI device
- **MIDI In** receives data from another MIDI device

USB

Use this port to connect to your computer.

Power

Cable lock

The cable lock provides an additional level of protection for the power supply cord.

On/off switch

There are only two options here: O=Off and |=On.

Kensington lock

Let's face it: the music you make with your Hydrasynth Explorer will take people places! And just in case they get a bit carried away, we've included the Kensington lock system so you can keep your Hydrasynth Explorer from also being carried away.

UNDERSTANDING THE MODULES

The orange-lettered Access buttons select particular modules for editing, and can also be used to create new mod routes. They are arranged in the order of signal flow, from left to right: [Osc] > [Mixer] > [Filter] > [Amp] > [FX]. The top panel graphics indicate this, and also show the interactions and independence of the modules.

The Voice module is the lone exception to the signal flow rule. Located in the upper right corner, it provides features such as the Unison modes and Scale.

Module Groups

We'll only touch briefly on the modules here; most have their own chapters. Their purpose here is to introduce operations that can be performed by any two modules from any module group.

Oscillator group

The Oscillator group includes Oscillators 1-3, the four Mutant modules, and the Ring-Noise module. After the waveforms are generated by Oscillators 1 and 2 they pass through their respective Mutant modules before heading to the Mixer module, where they are joined by the outputs of Oscillator 3 and the Ring-Noise module.

The modules that are in the Oscillator group are described in [The Oscillator Group \(p. 26\)](#).

Mixer module

This module has some simple but important functions, including the relative levels and panning of the oscillators, how they are routed through the filters, and whether the filters are in a series or parallel configuration. Full details are in [The Mixer Module \(p. 33\)](#).

Filter group

Filter 1 and Filter 2 are similar in name and function but their features are very different.

- Filter 1 has 16 different filter models, including Low- / High- / Band Pass and vocal formant options.
- Filter 2 is a multi-mode filter with two types: Low Pass / Band Pass / High Pass and Low Pass / Notch / High Pass. Each type can morph between the three states.

The filters can be placed in parallel or series. Full details are in [The Filters and their Controls \(p. 35\)](#).

Envelope group

All five Envelopes have identical parameters, and each can be triggered by up to four sources.

Dotted lines connect ENV 1 to the Filter group and ENV 2 to the Amp module, which means they have pre-wired connections that show up as parameters in those modules. But all Envelopes can be used as modulation sources for any destination, and Envelopes 3-5 can be used as additional modulation sources for the Filters and the Amp module.

Note that Envelope 2 does not show up by name inside the Amp module, but its input level is controlled by the AmpLevel parameter.

LFO group

All five LFOs have identical parameters. Dotted lines connect LFO 1 to the Filter group and LFO 2 to the Amp module, which means they have pre-wired connections that show up as parameters in those modules. But all LFOs can be used as modulation sources for any destination, and LFOs 3-5 can be used as additional modulation sources for the Filters and the Amp module.

Amp module

The Amp module contains only three parameters:

- LFO 2 Amount adjusts the amount and polarity of the effect LFO 2 has on the Amplitude of the patch.
- Velocity controls the velocity response of the Amplitude stage. Negative values invert the response: increased velocities reduce the amplitude.
- Amp Level can be used to compensate for quieter or louder output from the oscillators and filters.

For information about how these parameters interact, see [The Amp Module \(p. 39\)](#).

FX group

Rounding out each patch is a healthy array of effects processors, from pitch effects to spatial emulations and much more. With these a raw sound can become sweet or angry, pure or distorted, straightforward or mangled.

Once the rest of the synth has had its way, the signal flow is [Pre-FX] > [Delay] > [Reverb] > [Post-FX] > Output. For specific details read [The Effects \(p. 50\)](#).

Module Shortcuts

The top panel buttons can do a lot more than access parameters for editing. For example, they can be used to create a mod route within seconds, or to copy parameters between similar modules.

Create Mod routes

There's a shortcut to set up one or more mod routes very quickly. Instead of accessing the Mod Matrix through its button and navigating to the right page and field, try this from the Home page:

- Press and hold the module button for the desired [Modulation Sources \(p. 70\)](#)
- Press the module button for the destination you want to modulate. See [Modulation Destinations \(p. 71\)](#)

If you've chosen valid components for the route the Right display will jump directly into the Mod Matrix at the first empty modulation slot, with the first parameter of the destination module highlighted. From there you can select a different parameter within that module using Control knob 2 and set the modulation amount with Control knob 4. If the destination parameter has a top panel knob available, turning that will select it as the destination.

This technique can also be used inside the Mod Matrix pages. The advantage to doing it there is that when you hold a source button, all of the potential mod route destinations will light up. They don't do that from the Home page.

The Mod Matrix will be covered more fully in [The Mod Matrix \(p. 69\)](#).

Select Macro Destinations

When Hydrasynth Explorer is on the Home page the Control knobs and Control buttons are capable of the simultaneous manipulation of up to eight parameters each. The module buttons make it easy to set these up.

Voice module

Though it isn't located in the Module Select section, the Voice module has a significant impact on each patch. It determines how many notes are available, which ones will play, and how they sound, through parameters such as Polyphony, Detune, Analog Feel, Random Phase, Glide, and Scale. These are fully described in [The Voice Module \(p. 55\)](#).

First the Hydrasynth Explorer must be on the Macro Assign page, where the module buttons become shortcuts to select the parameters you want to control. This is significantly faster than scrolling through all of the other modules to reach the one you want.

Everything you need to know about setting up Macros is in the chapter [Mastering the Macros \(p. 66\)](#).

Copy / Paste settings

Some modules are identical, and their parameter values can be copied from one module to another. For example, you can copy the settings from Oscillator 1 to Oscillator 2, or vice versa, because their data is interchangeable.

Some modules have unique features and capabilities and their data is not interchangeable. For example: you can't copy the settings from Oscillator 3 to Oscillator 1 because their parameters are very different.

Copy / paste procedure

The process of copying the settings between compatible modules is simple:

- Press and hold the Save button: All modules that are potential copy sources are lit
- Select the copy source: Only potential paste destinations remain lit
- Select the paste destination. The process will execute and all buttons will become unlit, indicating success.

Here's a real-life example: Let's say you want to copy the settings from Envelope 1 to Envelope 2, and then make some slight adjustments so Envelope 2 comes in more slowly and fades out sooner. It's easy: Hold [SAVE], press [ENV1], and then press [ENV2]. Release the Save button and you're ready to edit Envelope 2.

Modules that will

When the Save button is held some of the Module buttons are lit. These are the ones that can be copied and pasted. There are limitations, of course; the parameters of an Oscillator cannot be pasted to one of the Filters, for example. Here's a chart that shows the possible combinations.

Modules	Copy/Paste is possible between...
Oscillators	Oscillators 1 and 2
Mutants	Mutants 1, 2, 3, or 4
Envelopes	Envelopes 1, 2, 3, 4, or 5
LFOs	LFOs 1, 2, 3, 4, or 5

Modules that won't

When the Save button is held some of the Module buttons are not lit. These have unique parameters and can not be copied and pasted.

Modules	Copy/Paste NOT possible...
Oscillators	Oscillator 3, Ring-Noise
Filters	Filter 1, Filter 2
Effects	Pre-FX, Delay, Reverb, Post-FX
Others	Mixer, Amp

THE OSCILLATOR GROUP

Oscillators are the foundation of a patch. They generate the most basic component of the sound, which is then shaped by other components such as Mutants, Filters, Envelopes, etc.

Hydrasynth Explorer has 3 oscillators per voice. Oscillators 1 and 2 can operate in two different modes: Single and WaveScan. Oscillator 3 operates only in Single mode. The same waveforms are available in both modes, but the features of each mode are very different.

The Mutant modules affect an oscillator the same way a mask or lipstick affect a face: they change the way the underlying component is presented to the world. The Ring-Noise module does a similar thing: it produces a sound based on the sum and the difference of two input signals.

The Oscillator, Mutant, and Ring-Noise modules form the Oscillator group. We'll cover them all in this chapter.



Settings can be copied between identical modules (Osc 1 and 2, Mutants 1-4): Hold [SAVE], press and release the source, and then press and release the destination. Then release [SAVE].

Oscillators 1 and 2

The features of these oscillators are identical, so the following descriptions apply to both. For a list of the available waveforms see the [Waveform List \(p. 32\)](#) at the end of this chapter.

Switching modes

To change an oscillator from Single mode to WaveScan mode or vice versa, access [OSC 1] or [OSC 2] and use Control knob 1.

Single mode

Single mode provides only a single waveform to the sound, hence the name. There's a lot you can do with a single waveform, though: the Mutant modules and the Ring Modulator make sure of that.

Page	Control	Parameter	Range	Description
1	1	Mode	Single, WaveScan	Select the oscillator mode
1	2	Semi	+/- 36 semitones	Coarse tuning of oscillator pitch [1]
1	3	Wave	219 options [2]	Choose a waveform as the starting point
1	4	Cents	+/- 50 cents	Fine tuning of oscillator pitch
2	2	BitRedux	(various)	Controls oscillator resolution; see Oscillator Bit Reduction (p. 27) .
2	3	Keytrack	0–200%	Sets keyboard pitch tracking. [3]

[1] Use [SHIFT] to jump by 12 semitones.

[2] See [Waveform List \(p. 32\)](#)

[3] 0 = fixed pitch; at 200% a 1-octave difference on the keyboard changes the pitch by 2 octaves. Default = 100%.

WaveScan mode

This mode offers all of the same waveforms found in Single mode, but then allows you to select up to eight of them in a Wavelist. WaveScan will morph gradually between the positions in the Wavelist, using an LFO or some other source through the Mod Matrix.

We'll list the parameters first and describe them in detail later. Some are also present in Single mode:

Page	Control	Parameter	Range	Description
1	1	Mode	Single, WaveScan	Select the oscillator mode.
1	2	Semi	+/- 36 semitones	Coarse tuning of oscillator pitch [1]
1	3	WaveScan	1.0 to 8.0 in steps of 0.1	Select the starting position of the WaveScan. [2]
1	4	Cents	+/- 50 cents	Fine tuning of oscillator pitch
2	1	Wavelist Edit...	(access)	Press Control button 2 to access the list. (See Wavelist Edit page below.)
2	2	BitRedux	(various)	Controls oscillator resolution; see <i>Oscillator Bit Reduction</i> below.
2	3	Keytrack	0-200%	Sets keyboard pitch tracking. [3]

[1] Use [SHIFT] to jump by 12 semitones.

[2] Hold [SHIFT] to jump by whole numbers. An intermediate value morphs between two waveforms, as seen in the Left display.

[3] 0 = fixed pitch; at 200% a 1-octave difference on the keyboard changes the pitch by 2 octaves. Default = 100%.

Wavelist Edit page

This lower-level page lets you pick a waveform for each of the 8 WAV locations. Options include OFF, Silence, and any one of the 219 waveforms. Note: Wave 1 can't be set to OFF or Silence.

The eight WAV slots correspond to the x.0 positions of the WaveScan parameter on page 1 of the upper level: WAV 1 = position 1.0, WAV 2 = position 2.0, etc. A WaveScan value of 1.5, for example, is derived by "morphing" halfway between WAV 1 and WAV 2.

Two additional features make waveform selection

and auditioning very easy:

- Press the corresponding Control button to solo that WAV position. The dot next to the Control button will flash slowly to indicate the wave being auditioned.
- Hold [SHIFT] and turn a Control knob to change that waveform and all that follow it. For example,
 - Hold [SHIFT] and turn Control knob 3.
 - As WAV 3 selects waveform X, WAV 4 selects waveform X+1, WAV 5 selects waveform X+2, etc.



When a WAV is set to OFF, any WAV after it is treated as if it were located in an earlier position. For example, if WAV 7 = OFF but WAV 8 = Pulse4, the Hydrasynth handles Pulse4 as if it were WAV 7.

Oscillator Bit Reduction

Bit reduction degrades a digital signal by reducing its resolution. At its most extreme settings the original sound is unrecognizable. It's like a pixelated photograph for the ears!

The Hydrasynth Explorer oscillator resolution can be reduced gradually to 2 bits, with many intermediate values. This can be done independently for each oscillator, but let's try a simple example using only Oscillator 1:

1. Initialize the patch by pressing [INIT] twice.
2. Press [OSC 1] to access its module.

3. Use Control knob 3 to set the Wave to Triangle.
4. Press the Down arrow to access page 2.
5. Hold a low note and use Control knob 3 to audition the BitRedux settings.
6. Note how the sound first becomes 'crispy', and then gradually degrades as the value approaches 2 bits.
7. Experiment with different waveforms and BitRedux values. Every combination has its own character!

BitRedux includes standard binary values such as 16-, 8-, 4-, and 2 bits. But timbres ranging from the beautiful to the malevolent lurk in less-explored bit depths of 10, 7, and 3, etc. Apply BitRedux to your favorite patch and see what happens!

Oscillator 3

Oscillator 3 operates in Single mode only, so it does not have the Mode select option in edit field 1. See the description of Single mode in [Oscillators 1 and 2 \(p. 26\)](#).



While creating a patch it can be useful to solo an oscillator to see what it is contributing to the sound. This feature is located on the first page of [The Mixer Module \(p. 33\)](#). Ring & Noise can also be soloed.

Mutants 1–4

Each of the Mutant modules is identical so we will describe them all at the same time. They are arranged in pairs: two for Oscillator 1 and two for Oscillator 2. Depending on the selected mode, the output of one of the Mutants in a pair can be fed into the next Mutant and/or into any other Mutant, including itself. In some modes the Mutants are dedicated to the oscillators with which they are paired.

The first edit field of the Mutant module selects the mode. There are eight:

Mode	Description
FM-Lin	Modulate the oscillator frequency with the selected Source
WavStack	Adds phase-shifted copies of the waveform; simulates many oscillators using only one
OSC Sync	Force the harmonics of the oscillator to synchronize with those of the selected Source
PW-Orig	Classic method of adjusting the pulse width of a waveform
PW-Sqeez	Time-compressed pulse width modulation method
PW-ASM	Customizable pulse width modulation via FM; targets specific sections of the waveform
Harmonic	Emphasizes individual harmonics in the waveform, de-emphasizes all others
PhazDiff	Generates the difference of the source wave and an inverted, phase-shifted copy

FM-Lin

This module provides a type of synthesis known as Linear FM (Frequency Modulation). Each voice is the equivalent of a 2-operator stack, with a carrier and a modulator. Unlike the most famous synth of the mid-1980s, which used only sine waves, the Hydrasynth Explorer can use any of its 219 waveforms as both the carrier and the modulator. The FM Source can also be generated by the Mutant itself (Sine or Triangle), another Mutant module, or the Ring-Noise module.

Page	Control	Parameter	Range	Description
1	1	Mode	8 species (focus: FM-Lin)	See list of Mutants in previous section
1	2	Ratio [1]	0.250-64.000; increments vary	Relative tuning of Source & oscillator
1	3	Depth	0-128 in increments of ~0.1	FM input level to oscillator
1	4	Dry/Wet	0-100%	Osc/Mutant mix; 100% = pure Mutant
2	1	Source	11 options [2]	Selects FM source
2	3	Feedback	0-150%	Feeds FM output into itself

[1] Only visible when Source = Sine or Triangle. Hold [SHIFT] to jump by harmonics.

[2] Potential modulators: Sine, Triangle, Osc 1-3, Ring Mod, Noise, Mutant 1-4

WavStack

This mode stacks five detuned copies of the waveform on top of itself, which makes for a fat sound using only a single oscillator. Pro tip: Spreading out multiple voices with the StereoWidth parameter ([VOICE] page 1) can make the sound HUGE.

Depth controls the amount of detuning between each of the five copies. Dry/Wet adjusts the balance between the unprocessed input and the mutated output.

OSC Sync

Oscillator Sync is a classic analog synthesizer technique where an oscillator is forced to align its harmonics with another oscillator. Traditionally this is done with simple waveforms, and with the second oscillator affecting the first. Hydrasynth Explorer provides many more options, including the use of all 219 waveforms in either position, the ability to sync Osc 1 and/or Osc 2, and the ability for any of the three oscillators to be used as the sync source.

Page	Control	Parameter	Range	Description
1	1	Mode	8 species (focus: Osc Sync)	See list of Mutants on previous page
1	2	Ratio	0.250-64.000; increments vary	# of times wave resyncs in one cycle [1]
1	3	Depth	0-128 in increments of ~0.1	Controls strength of sync effect
1	4	Dry/Wet	0-100%	Mix raw waveform + sync result; 100% = pure Mutant
2	1	Source	Osc 1, Osc 2, Osc 3	Select sync source
2	2	Window	0-128 in increments of ~0.1	Applies Hann window to sync source
2	3	Feedback	0-150%	Feeds sync output into itself

[1] Hold [SHIFT] to jump by whole numbers.

The Ratio parameter is unusual for oscillator sync. Normally the sync operates at a 1:1 ratio: the synced oscillator conforms to a single cycle of the host waveform, and that's that. But the Ratio parameter sets the number of times the oscillator will resync within that single cycle. See the next section for a more complete explanation.

About Ratio

The Ratio parameter is part of what makes the Hydrasynth voice engine unique. It gives you control over how many times PWM or Oscillator Sync happens during a single waveform cycle, instead of happening only once per cycle as with other synthesizers. It may help to think of it like this:

- 1:1 = one process for one cycle of the wave.
- 2:1 = two processes for one cycle of the wave.

So at 2:1 the PWM is happening twice in a cycle instead of once (the way "normal" PWM does); the Oscillator Sync is happening twice in the cycle.

The ratio can be as high as 64:1 or as low as 0.250:1. This means that the mutation process can occur as many as 64 times in the space of one waveform cycle, or as few as one time in the space of four waveform cycles.

Window

A Hann window applies a sort of "bell curve" filter to the Osc Sync source. It rolls off the high and low input frequencies at ~18dB / octave, which can help tame any harshness in the output

Pulse Width modulation

Pulse Width Modulation (PWM) alters the basic shape of the waveform by shifting its internal structure over time, making some areas narrower and others wider. This is usually done to square waves, but the Hydrasynth Explorer voice engine can apply PWM to any of its 219 waveforms.

And there's more! Hydrasynth Explorer takes PWM in entirely new directions by providing not one, but *three* types of PWM. Each has the same parameters (with one exception as noted below), but the results of each type can be radically different!

Page	Control	Parameter	Range	Description
1	1	Mode	8 species (focus: PW-Orig / -Squeez / -ASM [Warp])	See list of Mutants on previous page
1	2	Ratio	0.250-64.000; increments vary	# of times PWM happens in one cycle.[1]

1	3	Depth	0-128 in increments of ~0.1	Controls harmonic range of PWM
1	4	Dry/Wet	0-100%	Mix raw waveform + PWM result; 100% = pure Mutant
2	3	Feedback	0-150%	Feeds sync output into itself
2	4	Custom Edit (PW-ASM only)	(access)	Press Control button 7 to access Warp points. See <i>PW-ASM [Warp]</i> below.

[1] Hold [SHIFT] to jump by whole numbers.

PW-Orig

This is the “vintage” PWM used by many analog polysynths in the ‘70s and ‘80s: a waveform is fixed at its center and both of its edges are moved to compress or expand its width. The PWM source is often an LFO, though an Envelope or other sources can yield excellent results.

PW-Squeez

This form of Pulse Width modulation grabs the start and end points of the modulation and then squeezes them to the right. It might help to think of this as “time-warping” a waveform: It makes the oscillator go slow at first and then go fast, all in the space of a single cycle.

PW-ASM [Warp]

PW-ASM mode divides the selected waveform into 8 sections that are framed by Warp points. The values chosen for each Warp point determine how warped each section of the waveform can become.

Here’s an example of PW-ASM mode in action.



Each Warp point can be a destination in the Mod Matrix, so timbral changes can be as subtle or wild as you like. For example, use synced LFOs as mod sources and various Warp points as destinations.

Harmonic

At its maximum Depth and impact (100% wet) the Harmonic mutator emphasizes individual harmonics in a waveform and de-emphasizes the others. Its effect is heard more obviously on waveforms rich in harmonics, like a sawtooth wave, than on a simpler waveform such as a sine wave.

Page	Control	Parameter	Range	Description
1	1	Mode	8 species (focus: Harmonic)	See list of Mutants 1–4 (p. 28)
1	2	Ratio	0.250-64.000; increments vary	Selects emphasis harmonic. [1]
1	3	Depth	0-128 in increments of ~0.1	Controls harmonic range
1	4	Dry/Wet	0-100%	Mix raw waveform + harmonic; 100% = pure Mutant
2	3	Feedback	0-150%	Feeds harmonic output into itself

[1] Hold [SHIFT] to jump by whole numbers.

1. Press the Page Down arrow to access page 2.
2. Press Control button 4 to access Custom Edit.
3. Hold the low C key and turn Control knob 2 slowly.
4. Listen and watch the display as Warp2 changes from 0 to 128 and back. Note how the waveform is affected only in one specific area (i.e., Warp point 2).
5. Press the Page Down arrow to access Warp points 5-8.
6. Repeat steps 7 and 8 with one or more Warp points at various values.
7. Also try different settings for Ratio, Feedback, and Dry/Wet. The sonic potential is nearly limitless.

PW-ASM mode is actually a form of Frequency Modulation (FM). It allows you to draw your own modulator waveform by selecting different values for each of the 8 Warp points. Construct a slope, a valley, a mound, jagged peaks, pseudo-random, etc.; your design will become an FM source (i.e., the modulator).

Try this experiment to see how the Harmonic mutator affects different waveforms:

1. Initialize the patch by pressing [INIT] twice. This provides a Single mode saw wave from oscillator 1.
2. Access [MUTANT 1] and turn Control knob 1 to select the Harmonic mode.
3. Set the Depth parameter to 0.0.
4. Set the Dry/Wet parameter to 100% so only the effect will be heard.
5. Hold the lowest C until step 8. You should hear almost nothing at this point.
6. Slowly increase the Depth to 128. Each of the frequencies in the harmonic series is emphasized.
7. Return the Depth slowly to 0. Gradually all harmonics disappear, even the fundamental.
8. Release the note.
9. Access [OSC 1] and change the Wave to Square.
10. Access [MUTANT 1] and repeat steps 5-8. You will hear a limited set of harmonics emphasized.

Here's why they were different: As the depth increased the Harmonic effect revealed the harmonics that are present in each waveform. A sawtooth wave contains all harmonics, but a square wave contains only odd-numbered harmonics.

Try the experiment with other waveforms. It's a good way to learn why the various waveforms sound different: each contains a different set of harmonics in varying strengths.

PhazDiff

PhazDiff generates the difference of the incoming wave and a version that is inverted and phase-shifted.

Parameter	Range	Description
Depth	0-128 in increments of 0.1	Controls the phase of the output waveform
Feedback	0-150%	Feeds the phase-shifted output back into itself
Dry/Wet	0-100%	Mix raw and phase-shifted waveforms; 100% = pure Mutant

Here's how to explore this Mutant. But be careful with high Feedback values in step 5! The results can be very loud.

1. Initialize the patch by pressing [INIT] twice.
2. Press [MUTANT 1] to access that Mutant module.
3. Use Control knob 1 to select the PhazDiff mode.
4. Use Control knob 4 to set the Dry/Wet control to 50%. This provides an equal blend of the raw wave and its mutation.
5. Experiment with different values of Depth and Feedback to hear what they do.
6. Try step 5 with other waveforms, and try different Dry/Wet values.

This is especially fun to watch in the display as the waveform peaks are shifted and inverted. The changes are easier to see with simpler waveforms such as Horizon5 or Spect A1, but the results are always audible. Modulating the Depth via the Mod Matrix is a great way to introduce subtle shifts in the sonic landscape, too.

Ring-Noise Module

This module contains two additional sound sources that can be blended with the oscillators to make sounds that are even more interesting.

Ring Modulation (Ring Mod or RM) takes two audio signals and generates a sound based on the sum and the difference of their frequency content. Depending on the sources the result can be

bell-like and pure, or it can be wiry, robotic, trashy, and/or pleasingly unnatural.

A noise generator produces random, simultaneous frequencies across a broad range. The different colors represent specific frequency ranges and power levels.

Page	Control	Parameter	Range	Description
1	1	Source 1	Osc 1-3, Noise, Mutant 1-4	Selects first input source
1	2	Source 2	Same as Source 1	Selects second input source
1	3	RM Depth	0-128 in increments of ~0.1	Depth of Ring Modulation
1	4	Ring Vol	0-128 in increments of ~0.1	RM volume [1]
2	1	Noise Type	White, Pink, Brown, Red, Blue, Violet, Grey	Selects noise type
2	2	Noise Vol	0-128 in increments of ~0.1	Noise volume [2]

[1] Parameter is shared with Mixer page 2, edit field 1; changing one also changes the other.

[2] Parameter is shared with Mixer page 2, edit field 2; changing one also changes the other.

Waveform List

Waveform group	Waveforms	Waveform group	Waveforms
Classic	Sine, Triangle, TriSaw, Saw, Square	Particl	Particl 1-3
Pulse	Pulse 1-6	Vokz	Vokz 1-6
Horizon	Horizon 1-8	Flux	Flux 1-5
SyncLav	SyncLav 1-5	Alweg	Alweg 1-8
Esquire	Esquire 1-4	Tronic	Tronic 1-6
ChriMey	ChriMey 1-6	Duotone	Duotone 1-6
Spect A	Spect A 1-7	Bobanab	Bobanab 1-4
Spect X	Spect X 1-7	Melotic	Melotic 1-7
Klangor	Klangor 1-5	Cluster	Cluster 1-8
Induct	Induct 1-3	Micoten	Micoten 1-5
Scorpio	Scorpio 1-9	Orland	Orland 1-8
Belview	Belview 1-5	Neuton	Neuton 1-7
Chendom	Chendom 1-8	Xfer	Xfer 1-7
Glefan	Glefan 1-7	Resyn	Resyn 1-4
Sqarbel	Sqarbel 1-2	Sano	Sano 1-4
Obob	Obob 1-3	SquRoo	SquRoo 1-15
Ingvay	Ingvay 1-3	Harmon	Harmon 1-23

THE MIXER MODULE

This module has six pages of parameters which perform simple but important functions.

Mixer parameters: pages 1-2

Page	Control	Parameter	Range	Description
1	1	Osc 1	0-128	Osc 1 level
1	2	Osc 2	0-128	Osc 2 level
1	3	Osc 3	0-128	Osc 3 level
1	4	Solo	On/Off	First press: all 5 sources are active. Use Control buttons to solo a source. [1]
2	1	Ring	0-128	Ring mod level
2	2	Noise	0-128	Noise level
2	4	Solo	On/Off	First press: all 5 sources are active. Use Control buttons to solo a source. [1]

[1] Pages 1 and 2 share this parameter; changing one also changes the other.

Setting Levels

To set the relative levels of the sources, access [MIXER]. Page 1 contains the levels for Oscillators 1-3, and the levels for Ring and Noise are on page 2. Use the appropriate Control knob to adjust the level of each item, and use [SHIFT] + Control knob X to fine-tune the level.

The Solo Function

When creating a patch you may want to hear one of the sources on its own while making adjustments to that source. Rather than setting the other levels to zero temporarily and restoring them later, Hydrasynth Explorer includes a Solo function.

It's easy to use:

- On pages 1 and 2, use Control button 4 to toggle Solo from Off to On. Those pages share this parameter, so changing it on one page changes it on the other.
- When Solo is engaged the Control buttons for all 5 sources will light on their respective pages. This means they are still active.
- Press the Control button of the source you want to hear. Its Control button will become brighter than the others.
- Press another Control button to solo that source. The first Control button will dim and the selected one will brighten.
- You can switch between pages 1 and 2 and solo any one source on either page.
- Press Control button 4 on either page 1 or 2 to defeat the Solo function.

Mixer parameters: pages 3-4

Page	Control	Parameter	Range	Description
3	1	Osc 1 pan	-/+ 64	(as named)
3	2	Osc 2 pan	-/+ 64	(as named)
3	3	Osc 3 pan	-/+ 64	(as named)
4	1	Ring pan	-/+ 64	(as named)
4	2	Noise pan	-/+ 64	(as named)

Set the Pan Positions

Osc 1-3 Pan

To set the stereo placement of the oscillators, access [MIXER] and use the Page Down arrow to select page 3. Control knobs 1-3 contain the pan positions for Oscillators 1-3. Use the appropriate Control knob to adjust the pan position of each item, and use [SHIFT] + Control knob X to fine-tune the value.

Ring + Noise Pan

To set the stereo placement of the Ring modulator and Noise generator, access [MIXER] and use the Page Down arrow to select page 4. Control knobs 1 and 2 contain the parameters Ring Pan and Noiz Pan, respectively. Use the appropriate Control knob to adjust the pan position of each item, and use [SHIFT] + Control knob X to fine-tune the value.

Mixer parameters: pages 5-6

Page	Control	Parameter	Range	Description
5	1	Osc1Filt	100:0 - 0:100	Ratio of Osc 1 fed to the two filters
5	2	Osc2Filt	100:0 - 0:100	Ratio of Osc 2 fed to the two filters
5	3	Osc3Filt	100:0 - 0:100	Ratio of Osc 3 fed to the two filters
5	4	Filter Routing	Series, Parallel	Places the filters in Series or Parallel configuration [1]
6	1	Ring Filt	100:0 - 0:100	Ratio of Ring mod fed to the two filters
6	2	Noise Filt	100:0 - 0:100	Ratio of Noise source fed to the two filters
6	4	Filter Routing	Series, Parallel	Places the filters in Series or Parallel configuration [1]

[1] Pages 5 and 6 share this parameter with Filter 1 page 3; changing one also changes the other.

Filter Routing of Sources

Osc 1-3 Filter routing

To adjust the routing of each oscillator between Filter 1 and Filter 2, access [MIXER] and use the Page Down arrow to select page 5. Control knobs 1-3 contain the filter routing values for Oscillators 1-3. Use the appropriate Control knob to adjust the filter routing of each item:

- 100:0 sends the source only to Filter 1.
- 0:100 sends the source only to Filter 2.
- Intermediate values send the source to both filters in varying amounts.

Use [SHIFT] + Control knob X to fine-tune the values. Control knob 4 sets the Filter configuration (see below).

Filter Configuration

This setting specifies whether the filters operate in Series or Parallel mode. When they are in Series, Filter 1 always passes through Filter 2. When they are in Parallel, sources can be routed so they pass through only one of the filters or through both filters in varying amounts (as described above in [Filter Routing of Sources \(p. 34\)](#)).

Pages 5 and 6 share this parameter with Filter 1 page 3, edit field 1; changing one also changes the other.

Ring + Noise Filter routing

To adjust the routing of the Ring modulator and Noise generator between Filter 1 and Filter 2, access the [MIXER] module. Hold [SHIFT] and press the Page Down arrow to jump to page 6. Control knobs 1 and 2 contain the parameters RingFilt and NoizFilt. Use the appropriate Control knob to adjust the filter routing of each item:

- 100:0 sends the source only to Filter 1.
- 0:100 sends the source only to Filter 2.
- Intermediate values send the source to both filters in varying amounts.

Use [SHIFT] + Control knob X to fine-tune the values.

THE FILTERS AND THEIR CONTROLS

Filters are second only to oscillators in defining the sound of a patch. If the oscillators were passengers in a car, for example, then the filters would be the doors: Some open and close luxuriously to reveal the occupants; others have more grit and meet a different need. The Hydrasynth Explorer filters cover the range from a silky Lamborghini to a rugged Jeep, with all the sophistication and aggression implied by those extremes. You're ready for any sort of musical journey with Hydrasynth Explorer.

There are two filters available, each with its own characteristics. They can be used in series, with Filter 1 feeding Filter 2, or used in parallel, where each filter has a direct path to the output.

Filter 1

This filter is actually a collection of filter types. Each one has its own character, and some may be similar to analog filters you have encountered. But we didn't want Hydrasynth Explorer to sound like a clone of any instrument, so we took some of the flavor of the original filters and made something new. As with the oscillators, you will find that the Hydrasynth Explorer filters add their own signature to the sound.

Filter 1 types

Name	Description	Name	Description
LP Ldr12	12dB Uncompensated Ladder filter	HP 3-Ler	The High Pass flavor of a boutique modular synth
LP Ldr24	24dB Uncompensated Ladder filter	LP Stn12	Our version of a popular 12dB Low Pass filter
LP Fat12	12dB Compensated Ladder filter	BP Stn12	Our version of a popular 12dB Band Pass filter with dual 6dB slopes
LP Fat24	24dB Compensated Ladder filter	HP Stn12	Our version of a popular 12dB High Pass filter
LP Gate	Low Pass Gate filter	LP 1 Pole	A gentle 6dB Low Pass filter
LP MS20	Low Pass filter with an MS-20 flair	LP 8 Pole	A steep 48dB Low Pass filter
HP MS20	High Pass filter with an MS-20 flair	Vowel	Vocal formant filter
LP 3-Ler	The Low Pass flavor of a boutique modular synth		
BP 3-Ler	The Band Pass flavor of a boutique modular synth		

Compensated vs. Uncompensated filters

Filter compensation could be an unfamiliar concept. It's another way in which ASM has adapted the sonic profile of various analog synthesizers. Here's the difference:

- Uncompensated filters: As resonance increases the low frequency content of the sound is reduced.
- Compensated filters: The bass response is *not* reduced as resonance is increased.

Filter 1 parameters: page 1

All of the Filter 1 types have the same parameters, with one exception as noted. Access [FILTER 1] and turn Control knob 1 to select the Type, then adjust these parameters as needed:

Control	Parameter	Range	Description
1	Type	16 options	See <i>Filter 1 types</i> above
2	Cutoff	0.0-128.0	Cutoff frequency for most; vowel control for Vowel filter
3	Control (type = Vowel only)	0.0-128.0	Formant control
4	Resonance	0.0-128.0	Controls resonance or Q

Control

This parameter is visible only when the Filter type is set to Vowel. It provides control over location and spread of the formants, which are certain peaks and nodes in the filter frequencies that help to approximate the resonance of the human vocal apparatus. Use this with the Cutoff, Resonance, and Vowel Order parameters for greater precision.

Cutoff

This controls the Cutoff frequency for every filter type except the Vowel filter, for which it becomes the vowel control. When Filter 1 is selected on the top panel, the Cutoff knob also controls this parameter.

Filter 1 parameters: page 2

Control	Parameter	Range	Description
1	ENV 1 amount	+/- 64.0	Sets amount & polarity of Env 1 effect on filter
2	LFO 1 amount	+/- 64.0	Sets amount & polarity of LFO 1 effect on filter
3	Vel Env	+/- 64.0	Allows velocity to set maximum range of filter envelope
4	Keytrack	+/- 200%	Scales filter response across keyboard; C2 = center note

ENV 1 amount

This parameter defines the amount and polarity of the effect Envelope 1 will have on Filter 1. There is a similar, separate parameter for Filter 2.

Envelope 1 has a pre-wired connection to the Filter section, which saves a mod route. But a different envelope can be used to control the filter if you want; just set this value to 0 and create a new route via [The Mod Matrix \(p. 69\)](#).

Keyboard model only: When Filter 1 is selected on the top panel, the ENV 1 knob in the Filter Controls section also controls this parameter.

LFO 1 amount

This parameter defines the amount and polarity of the effect LFO 1 will have on Filter 1. There's a similar, separate parameter for Filter 2.

LFO 1 has a pre-wired connection to the Filter section, which saves a mod route. But a different LFO can be used to control the filter if you want; just set this value to 0 and create a new route via [The Mod Matrix \(p. 69\)](#).

Keyboard model only: When Filter 1 is selected on the top panel, the LFO 1 knob in the Filter Controls section also controls this parameter.

Resonance

This adjusts the resonance of the filter. When Filter 1 is selected on the top panel, the Resonance knob in the Filter Controls section also controls this parameter.

Vel Env

This is an abbreviation for "Velocity to Envelope". It adjusts the depth of the filter envelope based on note velocity: notes played at maximum velocity allow Envelope 1 to have maximum impact on the filter frequency, within the range set by the Env 1 amount parameter. It can be set negatively, so that higher velocities reduce the range of a positive-going filter envelope or increase the range of a negative-going filter envelope.

There is a similar, separate parameter for Filter 2.



Vel Env operates within the range set by the Env 1 Amount parameter; if you have no envelope amount set, the parameter will do nothing.

Keytrack

This parameter scales the filter response across the keyboard, with C2 as the center note. A positive value means that notes above the center note increase the filter cutoff frequency, and notes below the center note decrease the filter cutoff frequency. A negative value means that notes above the center note decrease the filter cutoff frequency, and notes below the center note increase the filter cutoff frequency. There is a similar, separate parameter for Filter 2.

Filter 1 parameters: page 3

Control	Parameter	Range	Description
1	Filter Route	Series, Parallel	Places filters in Series or Parallel configuration
2	Drive	0.0-128.0	Drive amount
3	Vow Order (type = Vowel only)	8 orders	Changes formant order during frequency sweeps
4	Drive Route	Pre, Post	Drive placement in signal path

Filter Route

This setting specifies whether the filters operate in Series or Parallel mode. When they are in Series, Filter 1 always passes through Filter 2. When they are in Parallel, sources can be routed so they pass through only one of the filters or through both filters in varying amounts (as described in [Filter Routing of Sources \(p. 34\)](#)).

The setting is linked to the parameter on Mixer page 3, edit field 4; changing one also changes the other.

Drive

To add extra warmth or grit to a patch, try adjusting the Drive parameter. As the value climbs the waveform begins to clip, and at the highest settings the waveform can be radically distorted. The Drive route setting determines the point at which the overdrive is applied (see below).

When Filter 1 is selected on the top panel, the Drive parameter is shared with the Drive / Morph knob in the Filter Controls section.

Drive Route

There are two configurations for routing the Drive effect: Pre or Post. The difference is whether the waveform is boosted before it hits the filter or whether the filter output is boosted before it reaches the Amp stage.

- **Pre** places the Drive effect between the waveform and the filter.
- **Post** places the Drive effect after the filter.

Vowel Order

This parameter is only visible when the Vowel filter type is selected. It provides eight different arrangements of the vocal formants, ranging from AEIOU to UIEAO. Combined with creative use of the Cutoff and Resonance parameters, nearly any vowel or diphthong can be achieved.

Filter 2

Filter 2 is our adaptation of a classic 2-pole state-variable filter. True to form, Filter 2 can toggle between two filter types: Low Pass / Band Pass / High Pass and Low Pass / Notch / High Pass. Each provides a perfect complement to Filter 1.



The filters can be used in Series or Parallel. This setting is found on page 3 of Filter 1.

Filter 2 parameters: page 1

Control	Parameter	Range	Description
1	Type	LP-BP-HP, LP-NO-HP	Selects filter type
2	Cutoff	0.0-128.0	Cutoff frequency
3	Morph	0.0-128.0	Adjusts filter: 0 = LP, 64 = BP or NO, 128 = HP, with gradual changes
4	Resonance	0.0-128.0	Controls resonance or Q

Filter 2 Types

Filter 2 provides two filter types, each with Low Pass and High Pass modes to process the high and low frequencies. The major difference is what happens in the middle, as Morph approaches a value of 64:

- Band Pass emphasizes the middle frequencies, in a range defined by the Resonance setting.
- Notch reduces the middle frequencies, in a range defined by the Resonance setting.

The differences are more pronounced with higher resonance values. You'll also notice that the Band Pass and Notch filters affect the Low Pass and High Pass modes differently as you sweep the filter frequency. Between these two filter types the Hydrasynth can achieve an astonishing variety of sounds.

Filter 2 parameters: page 2

Control	Parameter	Range	Description
1	ENV 1 amount	+/- 64.0	Sets amount & polarity of Env 1 effect on filter
2	LFO 1 amount	+/- 64.0	Sets amount & polarity of LFO 1 effect on filter
3	Vel Env	+/- 64.0	Allows velocity to set maximum range of filter envelope
4	Keytrack	+/- 200%	Scales filter response across keyboard; C2 = center note



Set up mod routes quickly from an Envelope or LFO to the Filter: Hold the module button for the desired source, then press the module button for the destination.

Morph

This parameter adjusts the filter between its various states, with a Low Pass filter at one extreme, a High Pass filter at the other, and a Band Pass or Notch filter at the middle setting. Along the way there are hundreds of intermediate settings. As the value changes, a graphic indicates the filter character.

When Filter 2 is selected on the top panel, the Morph parameter is shared with the Drive / Morph knob in the Filter Controls section.

The rest of the Page 1 parameters are identical in function to the same parameters in Filter 1 (Cutoff, Resonance, ENV 1 amount, LFO 1 amount, Velocity, and Keytrack). Please refer to [Filter 1 parameters: page 1 \(p. 35\)](#) for their descriptions.

The Amp module is relatively simple, and has only three parameters.

Control	Parameter	Range	Description
1	LFO 2 amount	+/- 64.0	Sets amount & polarity of LFO 2 effect on amplitude
3	Vel Env	+/- 64.0	Lets velocity set maximum range of Amp envelope
4	Amp Level	0.0-128.0	Controls pre-FX level of patch

How the Parameters Interact

All three of the parameters in the Amp module work together. The LFO 2 amount and Velocity Envelope parameters operate within the limits set by the Amp Level setting.

LFO 2 Amount

This parameter adjusts the amount and polarity of the effect LFO 2 has on the Amplitude of the patch. It uses the current value of the Amp Level parameter as its starting point.

A negative value for LFO 2 Amount literally inverts the phase of the LFO waveform. For example, if the LFO 2 wave is set to Saw Up, it will behave like a Saw Down wave when the LFO 2 Amount is set to a negative value.

The Amp Level setting also sets the upper limit of the amplitude modulation. In other words, a bi-polar LFO waveform will not cause the amplitude of the patch to rise higher than the Amp Level value. This helps prevent unwanted clipping of the signal as it heads into the Effects section.

Velocity Envelope (Vel Env)

The Vel Env parameter determines how much the amplitude envelope will respond to note velocity. Negative values invert the response, so that an increase in velocity reduces the amplitude envelope response.

When Vel Env is set to 0 the amplitude envelope will not respond to changes in velocity. However, other parameters might still respond to velocity, depending on the settings in the Mod Matrix and elsewhere in the signal path.

As the Vel Env value is increased the amplitude will decrease if a note is played at less than maximum velocity. What the Vel Env parameter does is create "headroom" for the velocity-to-amplitude response.

In other words, the Amp Level parameter sets the upper limit for the velocity response. That way a note cannot push the amplitude of the patch higher than the Amp Level value. This helps prevent unwanted clipping of the signal as it heads into the Effects section.

Amp Level

The Amp Level parameter is the boss, or at least "middle management"; it sets the maximum output level for the signal path before it heads into the Effects section. This helps prevent a situation that could cause the Amp Level output to exceed a value of 128 and cause clipping in the Effects.

Another way to think of the Amp Level parameter is that it can be used to compensate for quieter or louder output from the oscillators and filters.

What's an Envelope?

An envelope defines the shape of a modulation: how it begins, how it ends, and how big it will be in the middle. Hydrasynth Explorer has 5 envelopes that can be used to shape any available parameter through the Mod Matrix. All 5 have identical parameters, so every description applies equally to all.

Envelope features

ADSR plus

A Hydrasynth envelope provides the classic ADSR form factor (Attack, Decay, Sustain, and Release). But they've been enhanced with delay and hold stages, so technically the form factor is DAHDSR.

Adjustable curves

The Attack, Decay, and Release segments have curves that can be adjusted gradually from Logarithmic to Linear to Exponential. They can be snappy, lazy, or anything in-between. This allows you to specify exactly how you want the patch to proceed from start to finish.

Time-based segments

Envelopes can operate in one of two modes: synchronized or unsynchronized. If the BPM Sync option is On each segment can occupy a specific rhythmic value. If the BPM Sync option is Off the duration of each segment is measured in seconds (or milliseconds). Every envelope and segment will last exactly as long as you want.

Note that the BPM Sync setting affects all stages except Sustain, which is merely a level (i.e., a place, not an event).

The wonderful thing about triggers

Hydrasynth envelopes can be triggered by as many

as four sources once a voice is active. Once it is triggered an envelope can run freely (Freerun: On), reset with each new note (Reset: On), or reset only if all other notes have been released (Legato: On).

It's easier to hear an envelope reset with a monophonic patch than with a polyphonic patch. For an example see the description of [Reset \(p. 42\)](#).

Looping envelopes

Hydrasynth envelopes can loop a specific number of times or indefinitely.

Modulation and interaction

An envelope can be used as a modulation source for any destination, and individual envelope segments can be modulated (shortened or lengthened) by LFOs or by other envelopes.

Thanks to the Mod Matrix, envelopes and LFOs can interact and evolve in a nearly infinite number of ways. For a quick tip on how to do this, see [Envelope Shortcuts \(p. 43\)](#) at the end of this chapter.

Envelopes 1 and 2

Hydrasynth Explorer has pre-wired connections linking ENV 1 to the Filters and ENV 2 to the Amp module. This is because every sound has amplitude and timbre, even if a distinct pitch is not present. More envelopes can be routed to these destinations as needed through [The Mod Matrix \(p. 69\)](#).

Envelope parameters: page 1

Control	Parameter	Range	Description
1	Attack	[1]	After delay period, the time Env takes to reach full amplitude
2	Decay	[2]	After hold period, the time Env takes to reach sustain level
3	Sustain	0.0 to 128.0	The resting level prior to note off
4	Release	[2]	The time Env takes to reach the zero point after note off

[1] BPM = Off: 0 ms to 36.0 seconds; BPM = On: 0, 1/64T to 64' (16 measures)

[2] BPM = Off: 0 ms to 60.0 seconds; BPM = On: 0, 1/64T to 64' (16 measures)



To set the length of an envelope segment quickly: While on page 1, hold [SHIFT] and press the appropriate Control button for the desired length of time. This works with BPM On or Off.

Envelope parameters: page 2

Control	Parameter	Range	Description
1	Delay	[1]	The time before onset of attack segment
3	Quantize	(various)	Reduces envelope resolution
2	Hold	[2]	The time between attack and decay segments
4	BPM Sync	Off, On	Toggles all segments from seconds to beats/bars

[1] BPM = Off: 0ms - 32.0s; BPM = On: 0, 1/64T - 64'

[2] BPM = Off: 0ms - 36.0s; BPM = On: 0, 1/64T - 64'

Envelope Quantize

The Quantize option can add a stepped effect to the Envelope output. For example, it can make a complex attack very easily.

1. Press [INIT] twice.
2. Press [FILTER 1] and set Cutoff to 20.
3. Press [FILTER 1] again and set ENV1amt 64.
4. Press [ENV 1] and set Attack to 272 ms.
5. Play a midrange note below middle C. You'll hear a basic brass sound.
6. Press [ENV 1] again to reach page 2.
7. Use Control knob 3 to set Quantize to 9.
8. Play staccato notes and listen to the attack. It has a bit of "spit", like a real trombone.
9. Back on Env page 1, set Attack to 1.53 seconds.
8. Hold the note and listen. The quantized attack is easier to hear.
9. Try different Quantize values. OFF is completely smooth; other values have steps.

BPM Sync settings

When the BPM Sync parameter is set to On, all of the segments with durations are measured in rhythmic values. This includes the Delay, Attack, Hold, Decay, and Release stages of the envelope. A duration can be set to 0, which means it happens instantly and therefore has no rhythmic value.

All other settings have a quantized duration ranging from 1/64T (a sixty-fourth note triplet) to 64' (64 quarter notes, or 16 measures in 4/4 time). Dotted values are also available. The chart on the right has examples of how the values are shown:

Value	Duration
1/16	Sixteenth note
1/16Dot	Dotted sixteenth note
1/16T	Sixteenth note triplet
1/1	Whole note, or one measure
8'	Eight quarter notes, or two measures
64'	Sixty-four quarter notes, or sixteen measures

Envelope parameters: page 3

Control	Parameter	Range	Description
1	AtkCurve	[1]	Sets attack segment curve
2	DecCurve	[2]	Sets decay segment curve
4	RelCurve	[2]	Sets release segment curve

[1] Exp (-64) > Lin (0) > Log (64)

[2] Log (-64) > Lin (0) > Exp (64)

Envelope curves

Adjacent logarithmic curves look like a mound: The attack segment rises quickly and its rate of change slows as it nears the peak; the decay and release segments start falling slowly and accelerate until they reach the resting state.

Exponential curves are the opposite of logarithmic curves: The attack segment starts rising slowly and accelerates upward; the decay and release

segments start falling quickly and decelerate until they reach the resting state.

A linear curve rises and falls at the same rate throughout its duration. However, linear changes seem less natural or "musical" to the human ear than the other curves.

Envelope parameters: page 4

Control	Parameter	Range	Description
1	Legato [1]	Off, On	On = Env won't reset until all notes are released
2	Reset [2]	Off, On	On = Env resets when polyphony is exceeded
3	Freerun	Off, On	On (note held): Env runs from Delay to Sustain stage On (note released): Env runs from Delay through Release stage
4	Env Loop	Off, 2-50, Infinite	Toggles Env looping, sets # of loops

[1] Legato is hidden if Voice mode = Poly.

[2] If Legato = On the Reset parameter is hidden.

Legato

When sheet music uses the term "Legato" it means to play a passage smoothly, with no rests between the notes. Likewise, when this parameter is set to On, the envelope will not retrigger if previous voice has not been released. This allows a filter envelope to remain at its sustain stage when a series of notes are played, for example, which can help a solo or a bass line to be more expressive.

Reset

The Reset parameter is only available when Legato is Off. When Reset is On an envelope will reset when a new note is played, even if the previous note has not been released.

The difference between Reset On and Off is easy to hear with a monophonic patch. But with a polyphonic patch the behavior is more obvious after the available polyphony has been exceeded. You'll need a sustain pedal for the following example.

1. Set speaker/headphone levels low; this could be loud.
2. Press [INIT] twice to initialize the patch
3. Access [FILTER 1] and set Type to HP MS20
4. Set Cutoff to 50, Resonance to 100, and ENV1 amount to 64
5. Access [ENV 1] and set Attack and Decay to ~1 second
6. Hold down the sustain pedal
7. Play 7 notes on the lowest C
8. Wait for the filter to reach the sustain level for all 7 voices
9. Play the 8th note and listen as the filter sweeps through all frequencies

10. Wait until the filter stabilizes for voice 8, then play C again.

11. Listen as the filter sweeps from the sustain level, not the lowest frequencies.

12. Release the pedal.

13. Press the Page Down arrow and set Reset to On.

14. Repeat steps 6-12.

15. The difference: The filter sweeps through all frequencies for all notes, not just the first 8.

In summary, here's what to expect with a polyphonic patch:

- **Reset = On:** The 9th voice starts the envelope from its beginning.
- **Reset = Off:** The 9th voice starts the envelope from the sustain level.

Freerun

An envelope set to Freerun passes through all segments, even if the note is released before the end of the decay segment. If the note is held then the envelope proceeds to the sustain level and remains there until the note is released, after which the envelope proceeds through the release segment.

Envelope loop

This parameter enables an envelope to loop a specific number of times (between 2 and 50), and when set to Infinite it can loop forever. This means an envelope can even be used as a complex LFO (if 5 LFOs aren't enough!). The loop includes the attack, hold, and decay segments.

Envelope parameters: pages 5-6

Page	Control	Parameter	Range
5	1	TrigSrc1	OFF [1], Note On, LFO 1-5, Rbn On, Rbn Release, SusPed On
5	2	TrigSrc2	OFF, Note On, LFO 1-5, Rbn On, Rbn Release, SusPed On
5	3	TrigSrc3	OFF, Note On, LFO 1-5, Rbn On, Rbn Release, SusPed On
5	4	TrigSrc4	OFF, Note On, LFO 1-5, Rbn On, Rbn Release, SusPed On
6	3	Tap Trigger	Tap button to trigger envelope. It does not sustain while the button is held.

[1] In order for audio output to be possible, TrigSrc1 of Envelope 2 is set to Note On and cannot be changed. All four TrigSrc values can be changed for the other envelopes.

Envelope Shortcuts

These are described in greater detail in other chapters, but they're so easy and useful we've included them here too.

Copy Env A to Env B

1. Hold [SAVE]
2. Press and release the source (Envelope A)
3. Press and release the destination (Envelope B)
4. Release [SAVE].

Create a direct Mod route

To set up a mod route to a specific parameter from inside a module:

1. Hold [ENV X] to select the source
2. Press the Control button for the desired destination parameter, then release both buttons
3. Those items appear in the first open Mod Matrix slot as the source and destination, respectively
4. Set the modulation amount with the lower Control knob.

What's an LFO?

LFO is an abbreviation for Low Frequency Oscillator. LFOs are the cause of familiar effects like vibrato and tremolo, but they can be used in very complex ways (as the presets will attest). Hydrasynth Explorer has 5 LFOs that can modulate any available parameter through the Mod Matrix. All 5 have identical parameters, so every description applies equally to all.

LFO features

These LFOs might be more flexible than any you have encountered. Here are some highlights:

- Delayed onset through the Delay and Fade-in parameters
- Adjustable phase: start the modulation from any point in the LFO waveform
- Synchronized or unsynchronized modes
- A wide range of rates, from slow to audio
- Independent LFO per voice
- LFOs can modulate themselves, each other, and/or anything else
- Trigger an LFO once or loop it indefinitely.
- Design your own LFO, arpeggio, or mini-sequence with the Step LFO features



The Vibrato feature is a sixth LFO dedicated to the mod strip. It is not available as a source or destination in the Mod Matrix. For details, see the [Vibrato settings \(p. 57\)](#) of the Voice module chapter.

LFOs 1 and 2

Hydrasynth Explorer has pre-wired connections linking LFO 1 to the Filters and LFO 2 to the Amp module. More LFOs can be routed to these destinations as needed through [The Mod Matrix \(p. 69\)](#).

LFO parameters: page 1

Control	Parameter	Range	Description
1	Wave	Sine, Triangle, Saw Up, Saw Down, Square, Pulse27%, Pulse13%, S&H, Noise, Random, Step	Selects LFO waveform. "Step" is user-defined
2	Rate	BPM = Off: 0.02 to 150.0 Hz BPM = On: 0, 64' to 1/64T	Sets duration of LFO cycle
3	Phase	0° - 360°	Defines starting point of LFO
4	Level	0.0 - 128.0	Maximum amplitude of LFO



There's a quick way to set the LFO rate: While on page 1, hold [SHIFT] and then hold Control button 2 for the desired period of time. This works with BPM On or Off.

Phase

An LFO doesn't need to start at a zero-crossing point. This parameter allows you to specify the exact point at which it will begin, as measured in degrees from zero to 360.

Level

You may wonder why this parameter is needed, when the Mod Matrix allows you to set a level for

each modulation route. That's a good question with a great answer.

For example, imagine that an LFO is routed to multiple destinations in the Mod Matrix (which is often the case). This parameter makes it possible to adjust all of those routes with a single edit, rather than needing to adjust each mod route separately. The LFO Level parameter is a fine-tune control that allows you to dial in a modulation amount with precision.

LFO parameters: page 2

Control	Parameter	Range	Description
1	Delay	BPM = Off: 0 ms to 32.0 seconds BPM = On: 0, 1/64T to 64' (16 bars)	The time before LFO begins
2	Fade In	BPM = Off: 0 ms to 5943 ms BPM = On: 0, 1/64T to 64' (16 bars)	The time LFO takes to reach full amplitude
3	BPM Sync	Off, On	Toggles LFO rate from Hz to beats/bars
4	TrigSync	Poly, Single, Off	Poly: independent LFO per voice Single: One LFO affects all voices; each new note retriggers that LFO Off: One LFO affects all voices & runs freely

BPM Sync option

When the BPM Sync parameter is set to On the LFO rates are represented by rhythmic values. These range from 1/64T (a sixty-fourth note triplet) to 64' (64 quarter notes, or 16 bars in 4/4 time). Dotted values are also available. Here are some examples of how the values are shown:

Value	Duration
64'	Sixty-four quarter notes, or 16 bars
8'	Eight quarter notes, or two bars
1/1	Whole note, or one bar
1/16Dot	Dotted sixteenth note
1/16	Sixteenth note
1/16T	Sixteenth note triplet

LFO parameters: page 3

Control	Parameter	Range	Description
1	Smooth	0-127	Slows waveform changes [1]
2	One-Shot	Off, On, Step	On = LFO runs 1 cycle and stops, Step = advance LFO by one step per trigger [2]
3	Quantize	(various)	Reduces LFO resolution

[1] When One-Shot = Step the Smooth setting has no effect. It is applied when One-Shot = ON or OFF.

[2] The Step option is only visible when Wave = Step on page 1.

Smooth

Also known as "slew", this parameter softens the transitions from one amplitude of an LFO to the next. When a waveform with abrupt changes is selected (Saw, Square, S&H, Step) the Smooth parameter makes the LFO "glide" between adjacent values. At the highest setting the square and triangle LFO waveforms are identical.

One-Shot

An LFO will run its course only once if this

TrigSync

This parameter governs whether an LFO resets with each new note or operates independently per voice.

- **Poly:** Each new note triggers its LFO independently. Use this for lush pads, etc.
- **Single:** One LFO affects all voices; each new note retriggers that LFO.
- **Off:** The LFO runs freely and affects all voices. It could be anywhere in its cycle when it appears.

parameter is set to On. For example, it could:

- allow a single warble from a sine wave LFO
- give a short burst from the Noise waveform
- When One-Shot = Step, the Step LFO sequence will advance by one step with each trigger.

"Step LFO sequence?" For an explanation, see [The Step LFO \(p. 46\)](#). To learn how One-Shot mode and Step LFOs work together, see [One-Shot LFOs: Step Advance \(p. 47\)](#).

LFO parameters: page 4

Page 4 is only visible when the LFO wave is set to Step.

Control	Parameter	Range	Description
1	Steps	2-64	Sets # of steps within the LFO
3	SemiLock	Off, On	On = use semitone values in Step Edit pages
4	Step Edit..	(access)	Enters the Step Edit page

LFO Quantize

The Quantize option can add a stepped effect to the LFO output. For example, it can turn a sine wave into a complex LFO.

1. Press [INIT] twice.
2. Hold [LFO 1] and press [OSC 1] to create a mod route.
3. Set the mod depth to 120.0 with Control knob 4. Hold [SHIFT] to fine-tune the value.
4. Press [LFO 1] to access that module.
5. Use Control knob 2 to set Rate to 0.50 Hz.
6. Press [LFO 1] twice to access page 3.
7. Hold a note and turn Control knob 3 slowly through the Quantize values.
8. When Quantize = 9 the LFO becomes a 2-octave diminished arpeggio.
9. Try other Quantize values, waveforms, and rates. The results can be very complex!

The Step LFO

Page 4 of the LFO module only appears when the LFO wave is set to Step. This page contains the Step LFO parameters, which let you define up to 64 stages through which the LFO will pass.

There are three parameters on page 4: Steps, SemiLock, and Step Edit. Those are described briefly in the previous chart, and we'll cover SemiLock more thoroughly in a later section. Let's work with SemiLock Off for now.

1. Press [INIT] twice to initialize the patch
2. Hold [LFO 1] and press [OSC 1] to create a mod route
3. Use Control knob 4 to set Depth to 128.0
4. Access [LFO 1]
5. Use Control knob 1 to select the Step wave
6. Hold [SHIFT] and press the Page down arrow to reach page 4
7. Leave the Steps value at 8 for now.

8. Use Control button 4 to access the Step Edit page
9. Notice that steps 1, 2, and 3 are set to 60.0, -60.0, and 0.0, respectively. Note: Multiples of 5 provide specific pitches, but intermediate values can be used.
10. Hold a note. Three octaves of the same pitch will play. The third pitch is longer because the last six steps are set to the same value.
11. Keep holding the note and notice that the 8-step sequence repeats.
12. Enter values on the other steps to see how that affects the Step LFO output.

Let's dive deeper into the Step LFO.

SemiLock

SemiLock displays the steps inside the Step Edit page in semitone values. This makes it easy for an LFO to play standard 12-tone pitches. Let's try an example with SemiLock On this time.

1. Press [INIT] twice to initialize the patch
2. Hold [LFO 1] and press [OSC 1] to create a mod route
3. Use Control knob 4 to set Depth to 128.0
4. Access [LFO 1]
5. Use Control knob 1 to select the Step wave
6. Hold [SHIFT] and press the Page down arrow to reach page 4
7. Leave the Steps value at 8 for now.
8. Use Control knob 3 to set SemiLock to On
9. Use Control button 4 to access the Step Edit page
10. Notice that steps 1, 2, and 3 are set to +12semi, -12semi, and 0semi, respectively. These are the chromatic equivalents of the non-SemiLock values.
11. Hold a note. Three octaves of the same pitch will play.
12. Enter values on the other steps to see how that affects the Step LFO output.

But what if a step value isn't a multiple of 5?
Continuing with the previous example:

1. Press [EXIT] and use Control knob 3 to set SemiLock to Off
2. Access the Step Edit page via Control button 4 and set any step to a value that is not a multiple of 5 (e.g., 9.9)
3. Press [EXIT] and use Control knob 3 to set SemiLock back to On
4. Access the Step Edit page again (Control button 4). The non-multiple step has an asterisk (e.g., +1semi*)
5. As the related Control knob is turned the value changes to exact semitone values and the asterisk disappears.

Now let's try a Step LFO with more than 8 steps.

1. Press [EXIT] and use Control knob 1 to select a different number of Steps
2. Enter the Step Edit page via Control button 4
3. Use the Page up/down buttons to access steps 5-8, 9-12, etc.



You might hear the wrong pitch at first if you hold Control button 1 and play a note to set the semitone value for step 1. The reason: LFO1 starts as step 1 is entered, and it restarts with every new note (unless TrigSync = Off). The result: double-transposition of the first note. The right pitch will play when the LFO loops.

One-Shot LFOs: Step Advance

LFO One-Shot mode has a third option: Step. When both the LFO Wave and One-Shot mode are set to Step, each time that LFO is triggered it advances to the next Step in the sequence.

Other parameters affect how this works. But for now, let's set up a crazy little Step LFO:

1. Press [INIT] twice, then press [LFO 1].
2. Select Wave = Step with Control knob 1.
3. Press [LFO 1] twice to access page 3.
4. Select One-Shot = Step with Control knob 2.
5. Press [LFO 1] again to access page 4.
6. Use Control knob 3 to set SemiLock to ON. This provides semitone values in the Step Edit menu.
7. Press Control button 4 to enter the Step Edit menu.
8. Select values between -12 semi and +12 semi on pages 1 and 2.
9. Hold [LFO 1] and press [OSC 1] to set up a mod route.

4. Select semitone values for each step as needed.

To dive even deeper, press [EXIT] and try different settings for Smooth, Rate, BPM = On, etc. With 64 steps available and a synced LFO rate of 1/16, for example, an LFO can play a 4-bar melody!

Remember, in order for the Step LFO semitone values to quantize to the chromatic scale, be sure to do the following:

- Set the LFO output level to 128.
- In the Mod Matrix, route the LFO to the pitch of an oscillator with a depth of 128.

With those conditions met, the Step LFO semitone values will always match the 12 pitches in the chromatic scale.

Keyboard entry

You can select semitone values inside the Step Edit page with the keyboard. Simply hold the Control button for the desired step, then press a key inside the two lowest octaves to set the value.

10. Set a mod depth of 128 using Control knob 4.
11. Play the same note 8 or more times. Each time the LFO is triggered the sequence advances by one Step!

Here are some important notes about Step LFOs:

- Review the [SemiLock \(p. 46\)](#) section for other ways to make the Step LFO sequence conform to the chromatic scale.
- When One-Shot = Step the Smooth setting has no effect. It is applied only when One-Shot = ON or OFF.
- Step LFOs advance differently depending on the Stereo Mode setting on page 2 of the Voice module. See the next section for details.

Step Advance options


In this section we'll learn about different ways to make the Step LFOs advance.

LFO TRIGSYNC SETTINGS

The LFO TrigSync settings are found and described in [LFO parameters: page 1 \(p. 44\)](#). In this section we'll focus on two of those settings (Single and


Poly) and how they are used to advance a Step LFO sequence. Remember, there are 5 LFOs, and it's possible to have each one configured differently.

TrigSync: Single means that all voices share the selected LFO. Triggering any voice advances that Step LFO sequence for all voices.

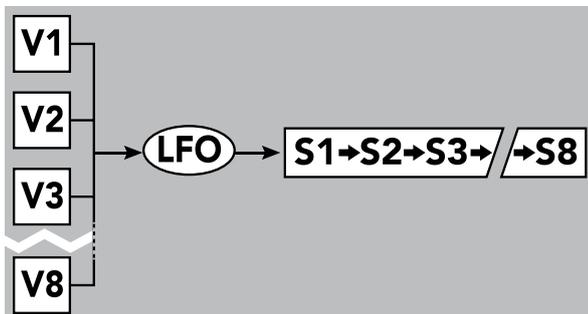

TrigSync: Single (V = Voice, S = Step)

TrigSync: Poly means that each voice has its own copy of the selected LFO. Triggering a voice advances the Step LFO sequence only for that voice, and only for that copy of the LFO.

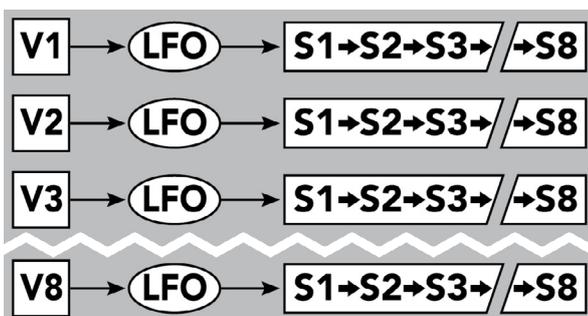

TrigSync: Poly (V = Voice, S = Step)

When TrigSync = Poly the StMode settings have a big impact on Step Advance behavior. Be sure to read the information in the next section to get the full picture.

VOICE: STMODE SETTINGS

The LFO TrigSync settings also interact with the Stereo mode settings in the Voice module. The full descriptions are here: [Stereo mode, Stereo width \(p. 55\)](#). In this section we'll focus on two of those settings (Alter and Rotate) and how they are used to advance a Step LFO sequence. Remember, there are 5 LFOs, and it's possible to have each one configured differently.

Note: When TrigSync = Single the shared Step LFO advances the same way regardless of the StMode setting. So for these descriptions we will assume that TrigSync = Poly. Remember, this is the setting where each voice has a dedicated copy of the selected LFO.

StMode: Alter allocates the voices based on how many voices are already active. If you start by playing only one note, you're playing Voice

1. If you hold that note and play another one you're playing voice 2, and so on. So when you're working with a Step LFO and want the sequence to advance for Voice 1, play only one note and play it repeatedly. If you want the sequence to advance for Voice 2, hold Voice 1 and play a second note, and so on.

To summarize:

- If the first note is played staccato by itself, Voice 1 is triggered each time and its dedicated LFO outlines the sequence with each successive trigger.
- If the first note is held and another note is played, Voice 2 is triggered and its dedicated LFO begins its sequence with the same results, and so on through all available voices and their LFOs.

StMode: Rotate. The One-Shot: Step setting is voice-independent, which means that with TrigSync = Poly each of the voices will follow its own LFO step pattern. And when StMode = Rotate, every note you trigger will take the first available voice, and make that LFO advance by one step for that specific voice.

So for example, when the patch is first selected:

1. The first triggered note uses Voice 1 and LFO step 1
2. The second triggered note uses Voice 2 and LFO step 1 (not step 2)
3. The third triggered note uses Voice 3 and LFO step 1, etc.

After you cycle through all of the voices and return to Voice 1, it plays LFO step 2, then Voice 2 plays step 2, Voice 3 plays step 2, etc.

To put it another way:

- If one note is played staccato by itself, it must be played 8 times before the LFO sequence advances to the next step. This is because the Hydrasynth Explorer is cycling through all available voices, and each one has a dedicated LFO that will follow the sequence order independently from the other voices.
- If a note is held and another is played, that note must be played 7 times before its LFO advances to the next step because the engine is cycling through the 7 remaining voices, and so on.

More Step LFO ideas

Here are more ways to use the Step LFO:

- The maximum Step values are +/- 64.0, so

the total range is a little wider than an octave above and below the root pitch.

- Try using one or more oscillators with a Step LFO and BPM set to ON. Different Rate values provide interesting rhythms.
 - Osc 1 and 2 could play step sequences while Osc 3 drones on the root pitch, for example.
 - Use different values of the Steps parameter to create odd time signatures like 5/4, 6/8, 7/8, etc.
 - To hold a pitch for one or more steps, use the same value as the previous step or the next one.
- For longer step sequences, set the LFO 2 Delay so it comes in after LFO 1 (and set LFO 1 to One-Shot = On).
 - Try the Copy feature described below: Copy one LFO to another and make slight changes to create counterpoint or to harmonize. Be sure to copy [The Mod Matrix \(p. 69\)](#) settings also.
 - You can invert a melody with mod route level of -128.
 - Remember, if you run out of LFOs, you can use a looping envelope as an LFO.

LFO Shortcuts

These are described in greater detail in other chapters, but they're so easy and useful that we've included them here too.

Copy LFO A to LFO B

1. Hold [SAVE]
2. Press and release the source (LFO A)
3. Press and release the destination (LFO B)
4. Release [SAVE].

Create a direct Mod route

To set up a mod route to a specific parameter from inside a module:

1. Hold [LFO X] to select the source
2. Press the Control button for the target parameter, then release both buttons
3. Those appear in the first open Mod slot as the source and destination, respectively
4. Set the modulation amount with the lower Control knob.

The Hydrasynth voice engine is so powerful that it only made sense to pair it with an equally powerful effects section. There are four independent effect modules available, two of which provide awe-inspiring delay and reverb effects, while the other two are the aural equivalent of a set of Swiss Army knives. Any tool you need for your music, Hydrasynth Explorer has it.



Some parameter names are shown below in [brackets]. These are available as mod destinations for Macros and the Mod Matrix. The values for these parameters have finer increments than the others, which ensures maximum resolution when they are being modulated.

Pre- and Post-FX

The only difference between these two FX modules is that one precedes the Delay and Reverb and the other follows them. They serve different purposes due to their placement in the signal path, so they will often have different settings. But since their FX types and parameters are identical, both modules will be covered in this section.

These are the FX types available for the Pre-FX and Post-FX modules:

- Chorus
- Flanger
- Rotary
- Phaser
- Lo-Fi
- Tremolo
- EQ
- Compressor
- Distort

Each FX type has preset templates that can be used as starting points for your own creations. When the patch is saved the FX settings are preserved.

Bypass

This is the default option. To disable the effect module for the current patch, set FXtype to Bypass.

Chorus

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see list above)	Selects effect
1	2	[Rate]	0.02-10.0 Hz	Controls chorus rate
1	3	[Depth]	0.0-128.0	Controls chorus depth
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-3	Selects template
2	2	Offset	+/- 180°	Sets initial effect phase relative to input
2	3	Feedback	+/- 63	Feeds chorus into itself (positive/negative polarity)
2	4	Mono/St	Mono, Stereo	Selects output mode

Flanger

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see list above)	Selects effect
1	2	[Rate]	0.02-10.0 Hz	Controls flanger rate
1	3	[Depth]	0.0-128.0	Controls chorus depth
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-3	Selects template
2	2	Offset	+/- 180°	Sets initial effect phase relative to input

2	3	Feedback	+/- 63	Feeds flanger into itself (positive/negative polarity)
2	4	Mono/St	Mono, Stereo	Selects output mode

Rotary

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Hi-Speed]	0.02-10.0 Hz	Sets high rotor speed
1	3	[Lo-Speed]	0.02-10.0 Hz	Sets low rotor speed
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-3	Selects template
2	2	Lo-Depth	0-127	Controls low rotor depth
2	3	Hi-Depth	0-127	Controls high rotor depth
2	4	Low/High	-/+ 63	Low/high rotor balance

Phaser

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Rate]	0.02-10.0 Hz	Controls phaser rate
1	3	[Feedback]	+/- 63.0	Feeds phaser into itself (positive/negative polarity)
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-3	Selects template
2	2	Depth	0-127	Controls phase modulation depth
2	3	Phase	0-127	Adjusts lowest frequency point of phase modulation
2	4	Offset	+/- 180°	Sets initial effect phase relative to input

Lo-Fi

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Cutoff]	160-20,000 Hz	Filter cutoff frequency
1	3	[Resonance]	1.0-12.0	Filter resonance
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-2	Selects template
2	2	Filter Type	Thru, PWBass, Radio, Tele, Clean, Low	Selects filter model
2	3	Output	- 6 / + 36 dB	Gain compensation
2	4	Sampling	44,100-2,756 Hz	Sets downsampling rate

Tremolo

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Rate]	0.02-10.0 Hz	Controls tremolo rate
1	3	[Depth]	0.0-128.0	Controls chorus depth
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	1-3	Selects template
2	2	LFO shape	Sine, Square	Selects tremolo waveshape
2	3	Phase	+/- 180°	Phase relationship of left/right LFOs
2	4	Pitch Mod	0-127	Vibrato depth

EQ

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[HighGain]	- 36.0 / + 24.0 dB	High frequency cut/boost
1	3	[LowGain]	- 36.0 / + 24.0 dB	Low frequency cut/boost
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	Flat, LowBoost, Bass Cut, High Cut, Smile, Lo-Fi, Warm	Selects template
2	2	MidGain	- 36.0 / + 24.0 dB	Mid frequency cut/boost
2	3	Xover Lo	32-2,000 Hz	Sets low/mid crossover point
2	4	Xover Hi	512-16,000 Hz	Sets mid/high crossover point

Compressor

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Ratio]	1.0 :1 to 20.0 :1	Sets compressor strength above threshold
1	3	[Threshold]	-64.0 to 0.0 dB	Level at which compression begins
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Sidechain	Off, BPM Duck, Tap	Source: Arp clock, Tap Tempo
2	2	Attack	1-400 ms	Time to maximum compression
2	3	Release	5-560 ms	Time to zero compression if signal is below threshold
2	4	Output	0-512	Gain compensation

Distort

Page	Control	Parameter	Range	Description
1	1	FX Type	9 types (see Pre- and Post-FX (p. 50))	Selects effect
1	2	[Drive]	0.0-128.0	Signal level sent to distortion circuit
1	3	[Tone]	+/- 64.0	Output bandwidth: -64.0 to -0.1: high cut 0.0: bypass 0.1 to 64.0: low cut
1	4	[Dry/Wet]	0-100.0%	Sets dry signal/effect blend
2	1	Preset	Drive 1-3	Selects template
2	2	Asym	0-128	Changes how clipping is applied: 0 = balanced (symmetrical) output >0 = greater asymmetry
2	3	Curve	0-128	Changes saturation curve of distortion: 0 = overdrive >0 = increasingly harsh distortion
2	4	Output	-36 / +24 dB	Gain compensation

Delay Types

Hydrasynth Explorer offers 5 delay types, each with distinct characteristics:

- **Basic Mono** combines the stereo input signal and produces a mono delay.
- **Basic Stereo** preserves the stereo positioning of the input signal.
- **Pan Delay** alternates between the right and left input signals.
- **LRC Delay** outputs the left input, then the right input, then both, and repeats that pattern.
- **Reverse** takes whatever comes in during the delay period and plays it backward.

Delay Parameters

All of the delays have identical parameters, so we'll describe them once.

Page	Control	Parameter	Range	Description
1	1	Type	5 types (see list above)	Select delay
1	2	[Time]	BPM = Off: 1 ms to 3.00 seconds BPM = On: 0, 1/64T to 1/1 Dot	Delay period
1	3	[Feedback]	0.0-128.0	Delay fade-out time
1	4	[Dry/Wet]	0.0-100.0%	Sets dry signal/effect blend
2	1	[Wet Tone]	-/+ 64.0	Wet signal filter control: -64.0 to -0.1: Low pass 0.0: No filtering 0.1 to 64.0: High pass
2	3	[Feed Tone]	0.0-128.0	Feedback high-frequency decay
2	4	BPM sync	Off, On	Toggles delay sync

Reverb Types

Hydrasynth Explorer provides 4 reverb types, each with distinct characteristics:

- Hall
- Room
- Plate
- Cloud

Reverb Parameters

All of the reverbs have identical parameters, so we'll describe them once.

Page	Control	Parameter	Range	Description
1	1	Type	5 types (see list above)	Select reverb
1	2	PreDelay	0.5-250 ms	Length of time before reverb
1	3	[Time]	120 ms - 90 seconds, Freeze No damping = indefinite Freeze	Decay time of reverb
1	4	[Dry/Wet]	0-100.0%	Blends dry signal with effect
2	1	[Tone]	-/+ 64.0	Wet signal filter control: -64.0 to -0.1: Low pass 0.0: No filtering 0.1 to 64.0: High pass
2	2	[Hi Damp]	0.0-128.0	High-frequency decay
2	4	[Lo Damp]	0.0-128.0	Low-frequency decay

Freeze the Reverb

While on Reverb module page 1, hold [SHIFT] and press Control button 3 and the reverb time will jump to Freeze. If the Hi / Lo Damp parameters are set to zero, the Freeze setting will hold the reverb indefinitely. Any notes that are played will be added to the effect.

A Macro button can toggle the Freeze value on and off; just set the BTN VALUE to 128.0. To learn more about setting up a Macro, see [Mastering the Macros \(p. 66\)](#).

Mod Route Shortcut

Here's how to set up mod routes quickly from an Envelope or LFO to an effect:

- Hold the module button for the desired source
- Press the module button for the destination. This will create a mod route in the Mod Matrix at the first available slot with the first parameter of the effect selected.
- Change the selected parameter if needed
- Set the mod amount with the appropriate Control knob.

Remember: not all FX parameters are available as mod destinations.

Global FX Bypass

You can also enable and disable the Pre/Post FX, the Delay, and/or the Reverb for all patches (i.e., globally). See Master Page 4: [FX Bypass Menu \(p. 80\)](#).

Technically the Voice module isn't in the signal path, so it isn't located in the Module Select section of the top panel. But its functions have a significant impact. Many settings related to the playability and performance of the patch are found here.

Voice Parameters: page 1

Control	Parameter	Range	Description
1	Polyphony	Poly, Mono, MonoLo, MonoHi, Unison, UnisonLo, UnisonHi	Sets polyphony mode, note priority
2	Analog Feel	0-127	Adjusts parameter drift (see below)
3	Density	1-8	Density of voices in Unison modes
4	Detune	0-127	Detune amount in Unison modes

Polyphony settings

It's possible to stack all 8 voices on a single note, if you like. There are seven settings here, but they fall into three main groups:

Poly, Mono, Unison

The Poly setting allows all eight of the Hydrasynth Explorer voices to trigger independently. Mono and Unison modes are monophonic; they only allow you to play one note from the keys.

Lo, Hi, or both

Both Mono and Unison modes have additional Lo- and Hi- options. Here's the difference:

- **Lo** (low note priority): The only way to trigger a new note is to play one below the held note.
- **Hi** (high note priority): The only way to trigger a new note is to play one above the held note.
- If an option doesn't say "Lo" or "Hi", it's both: A new note can be triggered by any note above or below the held note.

How does Analog Feel?

Another thing that makes an analog synthesizer seem so "alive" is its inherent instability. This unpredictability is an issue not only in the tuning of the oscillators but throughout the signal path. The Analog Feel parameter allows you to dial in as much of this behavior as you like, from "a little bit" to an amount that would summon a repair tech if you hadn't done it on purpose.

Density & Detune

The Density and Detune parameters are only active when one of the Unison modes is selected. **Density** sets the number of voices that are triggered by the monophonic note. **Detune** offsets the tuning of each of those voices equally within the range set by the Detune value.

Voice Parameters: page 2

Control	Parameter	Range	Description
1	Stereo Mode	Rotate, Alter, Random	Stereo voice allocation (see below)
2	Stereo Width	0-127	Stereo dispersion for Unison and Poly modes. Has no effect on Mono mode.
3	Random Phase	Off, On	Toggles random phase per voice
4	Warm Mode	Off, On	Simulates a "warm" frequency curve

Stereo mode, Stereo width

StMode (Stereo mode) sets the voice playback order for Poly mode. It has no effect on the Unison and Mono modes.

StWidth (Stereo width) adjusts the stereo spread between the voices for Poly and Unison modes. It has no effect on Mono mode.


Note: Set Polyphony = Poly and StWidth > 0 as you try the next 3 settings (Rotate, Alter, and Random).

Rotate

This setting arranges the 8 voices in an orderly fashion across the stereo field. The Hydrasynth Explorer will change voices every time a note is played, even if the same note is repeated. The voices will play in order from left to right (1-2-3-4-5-6-7-8), with the stereo spread defined by the Stereo Width value.

Alter

With this option the voices take turns spreading further and further from center. When all notes are released the voice order resets so that the next note on will trigger voice 1 in the center. And again, the stereo spread is defined by the Stereo Width value.

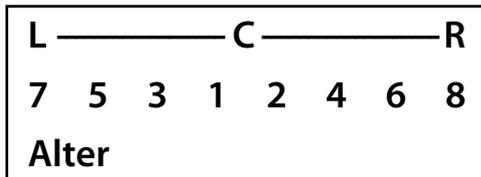

Stereo mode: Alter

Random

This option randomizes the voice selection when a note is triggered. If StWidth is > 0, the voices appear in the stereo field at the same positions they use in Rotate mode.

Rotate vs. Alter

The following table describes the differences between the Rotate and Alter settings for the Stereo mode parameter.

StMode	Method	Result
Alter	Repeat 1 note	V1, V1, V1, V1, etc.
	Repeat 4-note chord	V1-4, V1-4, etc.
	Hold note 1 Repeat note 2	V1 V2, V2, V2, etc.
Rotate	Repeat 1 note	V1, V2, V3, V4, etc.
	Repeat 4-note chord	V1-4, V5-8, etc.
	Hold note 1 Repeat note 2	V1 V2, V3, V4, etc.

The StMode setting has a big influence on how the LFOs behave, especially the Step LFOs. For more information, see [Step Advance options \(p. 47\)](#), especially the section titled **Voice: StMode settings**.

Random Phase

Part of what breathes life into the sound of an analog synth is that its oscillators are always running; waveforms could be anywhere in their cycles when they are triggered. It's the nature of their circuits; they must be told to reset. This parameter emulates that behavior by telling the digital oscillators **not** to reset their phase to 0° when they are triggered.

Warm mode

Warm Mode simulates the frequency curve of a popular "warm" synthesizer by reducing the high end a bit and boosting the low end.

Voice Parameters: page 3

Control	Parameter	Range	Description
1	Pitch Bend	0-24	Positive/negative pitch bend range in semitones
2	Vibrato Amount	0.0-12.0	Maximum depth of mod strip vibrato in semitones
3	Vibrato BPM	Off, On	Toggles Vibrato from Hz to tempo divisions
4	Vibrato Rate	BPM = Off: 0.30-10.00 Hz BPM = On: 1/4 to 1/32Dot	Sets rate of Vibrato effect

Pitch Bend

This parameter enables the pitch bend strip to cover as much as a four-octave range: two octaves up and two octaves down (+/- 24 semitones). You can set the range to a whole step, or a musical fifth, or whatever you prefer. The setting is saved when you save the patch.

Vibrato settings

The Vibrato feature provides a sixth LFO that modulates the pitch of all 3 oscillators at once. It is controlled by the mod strip. This avoids having to use a mod route to make the same connection. The mod strip can still be used for other purposes through the Mod Matrix.

The Vibrato rate locks to tempo when its BPM parameter is set to On. This enhances the musicality of the vibrato; singers and musicians do this naturally to match the music.

Voice Parameters: page 4

Control	Parameter	Range	Description
1	Glide	Off, Glide, Glissando	Toggles effect, selects type
2	Glide Time	0-127	Controls Glide rate [1]
3	Glide Curve	Exp (-64) > Lin (0) > Log (64)	Sets Glide curve [1]
4	Glide Legato	Off, On	If On, only legato playing activates Glide [1]

[1] This parameter is hidden when Glide = Off.

Glide settings

Glide vs. Glissando

Glide causes the pitch to slide between notes rather than changing in chromatic steps. Glissando provides a “stepped” glide, rather than providing a smooth glide between the start and end notes.

For extra fun, press [VOICE] again to access page 5 and use Control knob 2 to select a non-chromatic scale. The glissando follows the selected scale, which can provide excellent musical results. You may want to use the Key Lock setting, too; this is described on the next page.

When the Glide effect is enabled it reveals another three parameters on Voice page 4.

Other Glide settings

The Glide curves are similar in shape to the envelope segment curves:

- An **exponential** curve rises slowly at first and accelerates upward. When moving downward it starts falling quickly and slows down as it approaches its destination.
- A **logarithmic** curve does the opposite: It rises quickly at first and its rate of change slows as it nears the peak. In the opposite direction it starts falling slowly and accelerates until it reaches its resting state.
- A **linear** curve rises and falls at the same rate throughout its duration.

Enabling the Glide Legato setting changes the way Glide works: staccato notes will not glide; notes played in a legato fashion will glide.



Glide Legato can be less predictable when Polyphony mode = Poly. The reason: Each individual voice has its own legato, and legato playing only happens when the same voice is retriggered. For example, if voice 1 is the next one that will be triggered, playing a legato note will glide voice 1 from its current note to the new note.

Voice Parameters: page 5

Control	Parameter	Range	Description
1	Key Lock	(Chromatic octave)	Lock keyboard to specific key. No effect if Scale = Chromatic or Micro#(x).
2	Scale	Custom + 38 presets + 32 Micro scales	See Custom Scale (p. 58) ; see Scales (p. 88) for preset scale list; see Master: Page 4 (p. 79) for Microtuning info.
3	Snap	Off, On	Quicker attack, for sharp initial transients
4	Scale Edit [1] Microtuning Scale [2]	(access) [1] Scale name [2]	See [1] See [2]

[1] The Scale Edit button becomes visible when Scale = Custom. Use it to access [Scale Edit \(p. 58\)](#).

[2] This read-only field becomes visible when a microtuning scale is selected. See [Master: Page 4 \(p. 79\)](#) for Microtuning operations

Key Lock

The Key Lock parameter works with the preset scales to specify which notes the keyboard are allowed to play. It only applies to preset scales (not Custom, Chromatic, or Microtuning).

Select a Scale

There are 38 preset scales and 32 microtuning scales available. If you don't find the one you want, you can create a custom 12-tone scale inside the Hydrasynth Explorer or import new microtuning scales.

When a non-chromatic scale is selected, notes that are not in the scale are filtered out. So if you play notes outside of the selected scale, they will be quantized to the pre-determined scale notes. This

Custom Scale

The Custom scale option is located at the bottom of the scale list. To get there from Voice page 5, turn Control knob 2 fully counter-clockwise.

Scale Edit

After the Custom scale is selected, press Control button 4 to enter the Scale Edit page. Here's what you'll see:

- Control button 1: This is the first note in the custom scale, and it is based upon the Key Lock setting. The Control knob is disabled.
- Control knobs 2-4: These represent notes 2-4 of the custom scale. Press the Down arrow to access notes 5-8 of the scale.

Snap

Snap shortens the initial attack time to provide sharper initial transients. When Snap is Off the original timing on the fade in of the waveform is retained; when it's On the start time is shortened to be nearly instant. This gives bass and percussive patches more presence.

also affects the incoming MIDI notes.

However, outgoing MIDI notes are not affected; if C#3 is not in the scale and you play the C#3 key, a C#3 will be transmitted over MIDI and USB.

For a list of the scales and the notes that they contain, see [Scales \(p. 88\)](#). For information about working with microtuning scales, see [Master: Page 4 \(p. 79\)](#).

Quick assign

To assign notes quickly to the custom scale, hold Control button 1 and play the desired notes on the keyboard. The existing notes will be cleared as soon as you play the first note.

Note that if the root note is entered it will be ignored (it's the Key). It's okay to enter the notes out of order; they'll be placed in chromatic order when Control button 1 is released.

Clear a note

To clear one or more notes, hold [INIT] and press the corresponding Control button(s). You can't clear the Key selection on Control button 1; that's the root key of the scale. To change it, exit this page and adjust the Key Lock parameter.

Microtonality

Microtonal scales open up a new world of musical expression beyond the 12 tones most prevalent in the music of the West. Now you can compose and perform music from any culture or harmonic discipline.

There are 32 memories for loading custom scales. Hydrasynth Explorer includes 32 scales provided by various artists from around the world, but any of these can be replaced. You can create your own scales using a freeware application such as Scala, for example, as well as download new scales from the www.AshunSoundMachines.com web page.

Voice Parameters: page 6

Control	Parameter	Range	Description
1	SusPedal	Sustain, Sosten, Mod Only	Select sustain pedal function for the patch
2	VoiceMod Edit	(access)	Enter VoiceMod Edit page

Sustain Pedal options

The sustain pedal has three options per patch: Sustain, Sostenuto, and Mod Only.

Sostenuto

Most grand pianos have a middle "sostenuto" pedal which can sustain a note or chord without sustaining the other notes. As long as that pedal is held down, whenever the selected notes are played they will sustain while all of the other notes play normally.

Hydrasynth Explorer can do this too! This makes it possible to sustain a bass note while changing the upper chords, for example, or play a bass line under a sustained chord, etc.

Let's try it! Access page 6 of the [VOICE] module and use Control knob 1 to select "Sosten" for the SusPedal parameter. Then:

1. Hold the note or chord you want to sustain.
2. Press the pedal and release the notes. The selected notes continue to sustain.
3. Still holding the pedal, play other notes: only the pre-selected notes sustain; the others don't.

Individual note assign

If you entered a wrong note, hold the related Control button and play the correct note. The Control knob also can be used to select the note. Again, it's okay if the new note is not in chromatic order; this will be corrected after pressing [EXIT].

Selecting a Microtuning Scale

To select a microtuning scale, navigate to the Scale options on page 5 of the [VOICE] menu and use Control knob 2 to scroll through the list of scales. The 32 microtuning scales show up at the end of the list. The name of the selected microtuning scale is shown in display field 4.

For more information about working with microtuning scales, see [Master: Page 4 \(p. 79\)](#).

As long as the pedal is held the pre-selected notes are sustained and their voices cannot be stolen by another note. For example, if you use sostenuto to hold 8 notes and then try to play another note, the new note does not play. The sostenuto voices are not released until you lift the pedal, after which those voices are available again.

Note that the sustain pedal always sends MIDI CC #64. It does not send MIDI CC #66 when SusPedal = Sostenuto.

Mod Only

It is also possible to use the sustain pedal as a mod source without sustaining a patch. Here's an example:

1. Press [INIT] twice to start from ground zero.
2. Turn Cutoff all the way down.
3. Press [MOD MATRIX] and then Control button 2 to select the first mod route source.
4. Hold [SHIFT] and turn Control knob 2 until ExpPedal is selected.

5. Release [SHIFT] and turn Control knob 2 clockwise to select SusPedal as the source.
6. Press Control button 4 and then [FILTER 1] to select it as the Destination.
7. Turn Control knob 4 to a positive value of 30 or higher.
8. Play a note, press the pedal, and release the note. The filter opens and the note sustains.
9. Release the pedal, press [EXIT], and then press [VOICE] to access that module.
10. Hold [SHIFT] and press the Down arrow to reach page 6.
11. Use Control knob 1 to select "Mod Only" for the SusPedal parameter.
12. Repeat step 8. The filter opens but the note does not sustain.

The possibilities are endless: the pedal can control an LFO, a Mutant, an effect time or level, etc., without sustaining a note.



It's always possible to use the Sostenuto or Mod Only settings with the pedal, and then sustain all of the notes by holding [SHIFT] and pressing [LATCH].

VoiceMod Edit

The VoiceMod Edit menu lets you dial in a certain amount of deviation per voice, per patch. This enables the Hydrasynth to exhibit varying levels of instability like your favorite analog synths of the past. The good news is that it only shows up when you want it!

The fun starts in the VoiceMod menu, where you can define a per-voice offset to be applied via the Mod Matrix to any destination. Use it to set each voice's filter cutoff to slightly different values, for example, or to apply radically different Mutant values to each voice. Note: To hear this, be sure to map a VoiceMod source to at least one mod destination in the Mod Matrix.

In this section we'll describe how to access and change the per-voice offset values; in the next we'll explain how to route them to a destination.

- Press [VOICE] to access that module.
- Hold [SHIFT] and press the Down arrow to reach page 6.
- Press Control button 2 to enter the VoiceMod Edit menu.
- Use Control knobs 1-4 to set a positive or negative value for Voices 1-4.
- Press the Down arrow to access the second page, then use Control knobs 5-8 to set a positive or negative value for Voices 5-8.

The [INIT] and [RANDOM] buttons can be used to reset or randomize each value; hold one of those and press the Control button for the desired voice.

Per-voice offset examples

To use the VoiceMod feature you need to set up a mod route using one of these sources in the Mod

Matrix: VoiceMod (bipolar) or VoiceMd+ (unipolar). They are found in the Source list between MPE-Yrel and CC 000.

Let's try two examples, which you can use as a framework for further explorations. Results can range from subtle to schizophrenic, if you like!

Per-voice offset: Tuning

- Press [INIT] twice to initialize the patch.
- Press [VOICE] twice and set StMode to Rotate.
- Hold [SHIFT] and press the Down arrow to reach page 6.
- Use Control button 2 to enter the VoiceMod Edit menu.
- Select values that are multiples of 10 on both pages.
- Hold [VOICE] and press [OSC 1] to set up a mod route.
- Set a mod depth of 128 using Control knob 4.
- Play the same note 8 times. It plays a melody!

Per-voice offset: Waveforms

The VoiceMod feature can even be used to make each voice play a different waveform!

1. Press [INIT] twice, then press [VOICE] twice.
2. On page 2 set StMode to Rotate.
3. Hold [SHIFT] and press the Down arrow to reach page 6.
4. Use Control button 2 to enter the VoiceMod Edit menu.
5. Set each voice to a different value between +64 and -64. Do this on page 2 for voices 5-8 also.

6. Press [OSC 1] and change the Mode to WaveScan.
7. Press [OSC 1] again to reach page 2.
8. Hold [RANDOM] and press Control button 1 to randomize the Wavelist.
9. Back on page 1, hold a note and turn Control knob 3 to be sure the waveforms are obviously different. If not, repeat steps 7 and 8.
10. Set WaveScan to 4.5.
11. Hold [VOICE] and press [OSC 1] to set up a mod route.
12. Change the destination to WaveScan with Control knob 2.
13. Use Control knob 4 to set a mod depth of 128.
14. Play some notes. Each one plays a different waveform!



There are two ways to achieve zero modulation for a voice when setting up a mod route. When the mod source = VoiceMod, set the VoiceMod Edit value to 0 for that voice. If the source = VoiceMod+, use a VoiceMod Edit value of -128 instead.

THE ARPEGGIATOR SECTION

A well-designed arpeggiator can make someone who's new to music sound like a pro. Add a bit of music theory and some sound design chops to the mix and the results can be amazing. The presets make an ironclad case for that.

An overview of the Hydrasynth Explorer arpeggiator features was provided in the [Arpeggiator basics \(p. 14\)](#) section of the Quick Start Guide. The main focus of this chapter is to describe the arpeggiator parameters and how to use them.

Arp Edit Mode

To enter Arp Edit mode, hold the [SHIFT] button and press [ON] in the Arpeggiator section of the top panel. The Right display will reveal the first four parameters of Arp Edit mode. Use the Page Down arrow to access the other parameter pages.

Arp parameters: page 1

Tempo

Use Control knob 1 to adjust the tempo, or press [TAP TEMPO] three or more times to set the tempo manually. Hold [SHIFT] while turning Control knob 1 to fine-tune the tempo.

If Clock Sync is set to an external source the letters EXT will be shown instead of the tempo. This setting is found on [MIDI: Page 7 \(p. 82\)](#).

Division

Control knob 2 selects the basic time division of the arpeggiator relative to the tempo. There are 12 settings here, 4 more than the top panel controls can reach. The Triplet options are there too, and the Triplet LED will light as they are selected. You can also press [TRIPLET] to select that setting immediately.

Swing

The top panel Swing knob offers eight settings, including Off. But there are actually 26 settings between 50% and 75%. Use Control knob 3 to select a value, or use the Swing knob first and then Control knob 3 to select a nearby value.

Gate

Turn Control knob 4 to adjust the relative duration of the arpeggiator notes. The parameter range is 5% to 100%.

Arp parameters: page 2

Octave mode

This parameter is not present on the top panel. It works together with the Octave setting, which must be >1 or you may not hear a difference. Use Control knob 1 to select the options. The descriptions are based on an Octave setting of 2 except as noted:

- **Up** plays the notes in the original octave and then repeats the pattern an octave higher.
- **Dn (down)** plays the notes in the original octave and then repeats the pattern an octave lower.
- **UpDn** (Octave = 3) plays the notes in the original octave, repeats them in the next 2 octaves, repeats them in the middle octave, and starts over.
- **Alt** plays the notes in the original octave, repeats them in the next octave, and then reverses the entire pattern. The top and bottom notes are repeated.
- **Alt 2** is identical to Alt except the top and bottom notes are *not* repeated.

Octave

Use Control knob 2 to set the range of the arpeggiator. Minimum range is 1 octave; maximum range is 6 octaves.

Mode

Control knob 3 is used to specify the direction of the arpeggio and other behaviors. For the following descriptions we'll use a 3-note chord with Octave Mode = Up and Range = 2.

- **Up** plays the notes from low to high in each octave and starts again from the bottom.
- **Down** plays the notes from high to low in each octave and starts again from the top note of the low octave.
- **Up / Dn** plays the notes forward/backward in each octave and starts again from the bottom. The top and bottom notes are repeated in each octave.
- **Up & Dn** is identical to Up / Dn except the top and bottom notes are *not* repeated in each octave.
- **Order** plays the notes in the order they were played, repeats the pattern in the next octave, and starts again from the bottom.
- **Random** plays the notes in a random order in each octave.
- **Chord** plays all held notes at one time in the first octave and then plays them again in the second octave.
- **Phrase** provides preset musical phrases that repeat in each octave. There are 64 phrases (see [The Phrases \(p. 90\)](#)), and the selection is made on Arp Edit page 3.

Tip: For an arpeggio that plays the notes in order all the way up and down, use Octave Mode = Alt 2 and Mode = Up.

Length

This parameter specifies the number of notes that will be part of the arpeggio before the pattern repeats itself. When Mode = Phrase the Length setting determines how many steps of the Phrase will be allowed to play.

We'll give a couple of examples, but you'll want to try different settings to understand the way this parameter interacts with the other settings. For these examples use Mode = Up, Oct Mode = Up, and Range = 2.

- With Length = 3, hold a 4-note chord. The arpeggiator will only play the first 3 notes in the chord. To hear all four, set Length to 4. They will only play in the first octave.
- Increase Length to 5. The lowest note of the chord will appear in the second octave.

- Increase Length to 6, then 7, then 8. Gradually each note of the chord will appear in the second octave.
- Increase Length to 9. The lowest note of the chord will be repeated in the first octave and the pattern will repeat.
- Increase Range to 3. The lowest note of the chord will appear in the third octave instead of the first octave.

When Length = Default the arpeggios play their full length based on the various settings and the number of held notes.

Arp parameters: page 3

Tap Trig

When Tap Trig is enabled the arpeggiator triggers a note every time [TAP TEMPO] is pressed. This lets you walk through the pattern one note or chord at a time, depending on the Mode and other settings.

Note that Tap Trig sends signals only to the Gate output. The Clock out still runs at the selected clock rate.

Phrase

Select the Phrase here. To audition them the Mode must be set to Phrase on Arp Edit page 2. For transcriptions, see [The Phrases \(p. 90\)](#).

Ratchet

This specifies how many subdivisions of an arpeggiator step are possible (1, 2, 4, or 8). A Ratchet event is sent to the Gate output, but does not affect the clock output.

Note that Ratchet and Tap Trig work together: Ratchet events are still generated but are triggered manually.

Chance

This determines the likelihood of a Ratchet event happening on a given arpeggiator step. Its values range from 0% (no chance) to 100% (highly likely on every step).

Arp parameters: page 4

ClkLock

This locks the arpeggiator phase to the system clock so it will sync to other clocked elements such as an LFO with BPM Sync set to On.

Here's something else you might notice: With ClkLock set to Off and the Hydrasynth Explorer as the master clock source, the arpeggio starts when the first note is played. With ClkLock set to On, the arpeggio starts at the next quantized value *after* the first note is played. In this case you might

experience a slight delay between triggering a note and the onset of the arpeggio.

Tip: When synced to an external clock:

- Clock Lock On should be used when playing manually
- Clock Lock Off is best when notes are triggered from an external source (e.g., during playback from a DAW)

Arp Step Offset

This new parameter can offset an Arp pattern by up to 32 steps, forward or backward. It can be used with standard arpeggios or phrases.

Here are two examples:

1. Press [INIT] twice to initialize the patch.
2. Make sure the Arp is not running.
3. Hold [SHIFT] and press [ON] to enter Arp Edit mode.
4. Set Division to 1/4, then access page 2 and set Octave to 2.
5. Hold 3 notes and press [ON] to start the Arp. It plays notes 1, 2, 3, and repeats.
6. Press [ON] to stop the Arp, and press the Page Down arrow twice to access page 4.
7. Set StpOffset to 1 and hold the same 3 notes.
8. Start the Arp. It plays notes 2 and 3, and then repeats notes 1-3.
9. Repeat steps 5-7, but set StpOffset to 2 this time.
10. The Arp starts with note 3, and then repeats notes 1-3.



When 3 notes are being held a StpOffset value of 3 sounds the same as an offset of 0, 6, or 9 (and all multiples of 3). But when 4 notes are held a StpOffset of 3 starts with note 4, and then repeats notes 1-4. In that case, all StpOffset values that are multiples of 4 sound the same.

In the next example you'll see how the Offset works within the boundaries of the Length parameter. Starting with an Init patch and Arp off:

1. On Arp Edit page 2, use Control knob 3 to set Mode to Phrase.
2. While you're on page 2, set Length to 16 steps.
3. On Arp Edit page 3 select phrase 14, which has 32 steps.
4. Play a note. You'll hear the Arp phrase play steps 1-16 and repeat.
5. On Arp Edit page 4 set the Step Offset to 8 using Control knob 4.
6. Play a note. You'll hear the Arp phrase play steps 9-16, then repeat steps 1-16 until you release the note.



In item 5 above a StpOffset value of 8 or -8 yields the same results, because each makes the phrase start at the halfway point of the 16-step pattern. So either way, the phrase starts on step 9.

Additional Arp Features

Latch and Sustain

Press [LATCH] to activate Latch mode. This enables you to take your fingers off the keys and use both hands to adjust parameters. It works whether an arpeggio is running or not.

Use [SHIFT] + [LATCH] to activate Sustain mode. This also works whether an arpeggio is running or not. It's the same response as using a sustain pedal.

Between these two parameters there are four potential combinations, as shown in the chart. The status of the [LATCH] button LED provides a visual clue as to which settings are active.

Latch	Sustain	[LATCH] LED status
On	Off	Button lit constantly
On	On	Flashing cycle: 0.8s lit, 0.2s unlit
Off	On	Flashing cycle: 0.5s lit, 0.5s unlit
Off	Off	Button dimly lit



An arpeggio does not continue after the keys are released when the Sustain pedal is active. This lets the envelopes decay to the sustain stage, where they can loop or be retriggered. If you want the arpeggio to continue after the keys are released, use the [LATCH] button.



It can be an interesting effect for an arpeggio to be intermittent rather than constant. To do this, start the Arp, hold the Sustain pedal, and bring notes in and out as needed.

Initialize the Arp

Hold [INIT] and press the [ON] button to initialize the Arpeggiator module. All parameters will return to their defaults.

The Arpeggiator & MIDI

The setting of *Arp TX (p. 84)* determines whether the arpeggiator will transmit notes or respond to incoming notes via MIDI / USB. These two states are mutually exclusive. The following table may help illustrate the different capabilities of the Arp TX settings.

Arp TX setting	On	Off
MIDI/USB outputs will transmit the arpeggiator notes	Yes	No
Latch button will latch outgoing MIDI notes [1]	Yes	No
Incoming MIDI/USB notes will trigger and outline an arpeggio	No	Yes
Incoming MIDI/USB notes can be latched by the Latch button [1]	No	Yes
Arpeggiator can be triggered and/or latched locally	Yes	Yes
[SHIFT] + [LATCH], Sustain pedal will sustain incoming/outgoing MIDI/USB notes	Yes	Yes

[1] [LATCH] has the same effect on notes whether the arpeggiator is running or not.

MASTERING THE MACROS

Macros are powerful, expressive tools for song creation and live performance. Every factory patch has up to 8 Macros that maximize their creative potential. Each Macro is a combination of one of the Control knob / button pairs and a list of destinations, sort of like a private Mod Matrix grouped around the Right display. In fact, Macros can even control the Mod Matrix mod routes (and vice versa). You can create and modify Macros to match your music and your style.

Home Page

There are two pages of Macros on the Home page (4 per page). Each Control knob is paired with a Control button to affect up to 8 parameters at once: The knobs sweep parameter values and the buttons toggle, trigger, or reset them; see [Master: Page 3 \(p. 79\)](#). Modulation levels can be positive or negative, so a Macro can reduce values, increase them, or do both at the same time.

It's easy to see which Macros are active on the Home pages: If a Macro field displays a zero or some other number, it has at least one parameter assigned. If the Macro field has a dash, not a number, then it is empty.

Here's a handy tip when using Macros on the Home page: If you hold [INIT] and turn a Control knob, the Macro will jump to 0.0 from its current value. This prevents the generation of intermediate values.



The Macro button is exclusive; when it is engaged the Control knob is locked out temporarily. This allows you to change the Control knob "behind the scenes", so that the new Macro value is revealed after disengaging the Macro button.

Make a Macro

Press [MACRO ASSIGN] and let's explore how they work. At this point every Macro shows its name and "Edit..." whether it's empty or not. From here you can inspect or modify an existing Macro by pressing its Control button to enter the Macro Edit page. After that, here's what you'll see in the Right display:

- Destination 1 is listed in the upper left. Use the Page arrows to select Des 2-8.
- The top 2 lines on the right show the destination module and the specific parameter.
- The bottom 2 lines show the Button Value and the modulation Depth for the knob.
- Use Control buttons 2 and 4 to move up and down the right side of the display.

function.

Many orange-lettered Access buttons are lit now; these are potential destinations.

5. For this example, press [OSC 1] to select it. Instantly the right column is populated with Osc 1, Pitch, and zeroes.
6. Turn Control knob 4 to set an amount of 120.0. Use [SHIFT] to fine-tune the value.
7. Press Control button 4 to reach the Button Value field.

The bottom Control button cycles through all of the fields, and also escapes the value fields.

The Module buttons cannot change the page when a highlight cursor is visible.

8. Use Control knob 2 and [SHIFT] to set a value of 20.0.

The upper Control knob always edits the highlighted field.

9. Hold a note and use Control knob 3 and Control button 3 to audition the Macro. All 8 routes will respond.

Assign a Destination

For the purposes of this exercise, let's start with an empty Macro. We'll be working with Macro 1.

Additional information for some steps is included below in italics.

1. If you're not already there, press [MACRO ASSIGN].
2. Hold [INIT] and press Control button 1 to initialize Macro 1.
3. Release [INIT] and press Control button 1 again to enter the Macro Assign page.
4. Press Control button 2 to activate the Assign

The Macro knob/button pair you are editing will behave this way on the Home page.

10. With these settings the knob sweeps an octave; the button jumps a whole step.

The MacroBtn parameter on System Setup page 2 defines the behavior of the Macro buttons: If the setting is "Trigger" or "Reset" the button is a Trigger. When set to "Toggle" or "Switch," the button behaves as a Toggle.



When controlling a Mod route with a Macro, keep this in mind: If the Mod route Depth = 0 and the Macro Depth is +128, the first half of the Macro knob range will cover the entire mod range (0-128) and the last half of the Macro knob range won't do anything. But if the Mod route depth is -128, the Macro knob can cover the full range from -128 to +128 and there is no dead zone.

Name the Macro

Macros can be given a name with up to 8 characters, so you'll know at a glance what the Macro does. The name is displayed on the Home page and on the Macro Assign page. Here's what to do:

1. From the Home page, press [MACRO ASSIGN].
2. Select the Macro you want to edit by pressing its Control button.
3. Hold [SHIFT] and press the Page down arrow to reach page 9.
4. Control knob 1 selects the naming function: List name or Custom name.
5. **List name:** Use Control knob 2 to choose a preset name. There are 100+ of them; see [Preset Macro Name List \(p. 68\)](#) at the bottom of this chapter.
6. **Custom name:** Control knob 2 chooses characters; use Control button 2 to select the next character.

Save the Patch: Macro Options

The [SAVE] button has its own chapter, but we want point out this part of it now. While saving the patch, Control knob 1 of Save page 2 lets you specify whether the current positions of the Macro knobs will be returned to zero (Return), stored in their current positions (Save), or converted into new values for the parameters they control (Convert). For more information see [Patch Management \(p. 74\)](#).

Macro Button Response

There's a separate chapter for [The System Setup Pages \(p. 78\)](#), but this information affects how the Macro buttons behave on the Home page and while auditioning a Macro during editing.

To access the Macro Button settings, press [SYSTEM SETUP] and press the Page Down arrow twice to reach page 3. Use Control knob 4 to select one of the four options: Toggle, Trigger, Switch, and Reset.

- **Toggle:** The Macro button toggles between the Button Value setting and the current Macro knob value.
- **Trigger:** The Macro button triggers the Button Value On when pressed and Off when released.
- **Switch:** Only one Macro button can be selected at a time.
- **Reset:** The Macro button resets the corresponding Macro Knob to zero

Using a Macro button on the Home page while holding [SHIFT] changes the behavior.

When MacroBtn setting is...	[SHIFT] + Macro button response is...
Toggle	Trigger the Button Value On when pressed and Off when released.
Trigger	Hold the Button Value setting until released manually
Switch	Allow more than one Macro Button to be selected
Reset	(no response)

Preset Macro Name List

These are the preset Macro names found on Macro Edit page 4. You can also create your own Macro names; see [Name the Macro \(p. 67\)](#).

| Macro name |
|------------|------------|------------|------------|------------|
| 2nd | Crystal | Harmony | Phrase | Stretch |
| 3rd | Cutoff | Hurt | Pitch | Sub |
| 4th | CV 1 | Itch | Pressure | Swing |
| 5th | CV 2 | Jianbing | PulsWdth | Teardown |
| 6th | Darken | Level | Purr | Thicken |
| 7th | Decay | LFO Amt | PWM | Thin |
| Air | Delay | Mai Tai | Range | Time |
| Amp | Depth | Major | Ratchet | TimeDiv |
| ArpMode | Distort | MakeHuge | Rate | Twist |
| Attack | Dry/Wet | Mangle | Ratio | Velocity |
| Bacon | Env Amt | Massage | Release | Vowel |
| Bark | EQ - Hi | MIDI CC | Reso | Warp |
| BassDrop | EQ - Low | Minor | Reverb | Wavescan |
| Beef | EQ - Mid | Mod 1 | RingMod | WavStack |
| Bend | Fast | Mod 2 | Rotary | Width |
| Bite | Feedback | Mod Amt | Rumble | Wobble |
| Bleed | Filter | Morph | Scratch | Woof |
| Breath | Flanger | Noise | Slow | Wow |
| Brighten | FM | Oct - | Snarl | - |
| Buildup | Force | Oct + | Space | - |
| Chance | Funk | Oh | Speed | - |
| Chord | GateTime | Ouch | Spin | - |
| Chorus | Glide | Overdriv | Spread | - |
| Compres | Go | Pan | Stank | - |
| Crunch | Harmonic | Phase | Stop | - |

Modular synthesizers use cables to make connections. Hydrasynth Explorer has a much neater solution: an easy-to-use internal patch bay with 32 sets of modulation sources and destinations.

Creating Mod Routes

There are three ways to create a new mod route in the Mod Matrix. The first is to access one of the 32 Mod Matrix pages directly. *Additional notes are entered below some steps in italics.*

The Whole Process

1. Press [MOD MATRIX] to access the Mod Matrix pages.
2. Use the Page up/down arrows to select the desired mod route.
3. Press one of the Control buttons (top or bottom) to enter assign mode.

The orange-lettered buttons are now lit; these are the available source modules.

4. Scroll the top Control knob to select a source.

Shortcut 1: Hold [SHIFT] while turning the Control knob to jump through modules by category.

Shortcut 2: Press the desired module button to select it.

5. Press the bottom Control button to access the destination field.

The orange-lettered buttons are now lit; these are the available destination modules.

6. Scroll the top Control knob to select the destination module. Its default parameters appear in rows 2-4.

Shortcut 1: Hold [SHIFT] while turning the Control knob to jump through modules by category.

Shortcut 2: Press the desired module button to select it.

Shortcut 3: Turn one of the top-panel knobs to select that parameter.

7. Press the bottom Control button to access the next row.

8. Scroll the top Control knob to change the destination parameter...
...unless you used Shortcut 3 in step 6 already.
9. Press the bottom Control button to exit assign mode.
10. The bottom Control knob can change the modulation depth at any time during steps 4-9.

The Shortcut

Mod routes can be established quickly from almost any page:

1. Press and hold the module button for the [Modulation Sources \(p. 70\)](#).
2. Press the module button for the [Modulation Destinations \(p. 71\)](#).

The Mod Matrix opens at the first available slot with the first parameter of the destination module highlighted.

3. To select a different target parameter from that module, use the bottom Control button to enter the next field.

Shortcut: If the parameter has a top-panel knob, turn it to select that destination.

4. Use the upper Control knob to select the desired parameter.

5. Use the Control knob on the bottom row to set the modulation amount.

The modulation amount can be positive or negative.



The shortcut method works inside and outside of the Mod Matrix page. The difference: Inside the Mod Matrix the available destination module buttons light up when the source module button is held. Outside the Mod Matrix they don't.

Direct Assignment

Mod routes can be established between a source and a specific parameter using this method. After you access the page with the parameter to be modulated, hold the modulation source button and look at the Control buttons around the display: the ones that are lit are the available destinations. Still holding the mod source button, press the Control button of the target parameter. This creates a link between the source and destination in the fewest possible number of steps.

For example, here's how to route ENV 5 to the LFO 1 Amount of Filter 1:

- Press [FILTER 1] twice to access page 2.
- Press and hold [ENV 5] to select it as the mod source.
Control buttons 1, 2, and 4 are lit. These are the available mod destinations.
- Press Control button 2 to select LFO1amt as the destination.
- The mod route ENV 5 to Filter 1's LFO 1 Amount is created.
- Use the Control knob on the bottom row to set the modulation amount, and you're done!



If all 32 modulation routes are occupied and you try to add another, the Hydrasynth Explorer will show a message for two seconds that says "Mod Matrix Slots Full!"

More Shortcuts

Clear a Mod Slot

To clear a single Mod matrix slot, hold [INIT] and press its top Control button.

Clear the Entire Mod Matrix

If you want to start with all new mod routes, hold [INIT] and press the [MOD MATRIX] button. A prompt will ask you to confirm the decision. If you're sure, press [INIT] again.

Modulation Sources

These are the mod sources available in the Hydrasynth Explorer. A few may need explanation; see below the chart.

Group	Modulators
Env	Env 1, Env 2, Env 3, Env 4, Env 5
LFO [1]	LFO 1, LFO 2, LFO 3, LFO 4, LFO 5, LFO 1+, LFO 2+, LFO 3+, LFO 4+, LFO 5+
Aftertouch	MonoAftT (Channel Aftertouch), PolyAftT (Polyphonic Aftertouch)

Notes About Mod Routes

Here are some concepts to keep in mind while working with Mod Routes:

- Some modules cannot be modulation sources, such as Oscillators or Mutants.
- Some modules can be sources and destinations, such as Envelopes and LFOs. With these, the order in which you press them determines the source and the destination.
- Not all destinations can respond to polyphonic sources with independent modulation per note. For example, routing PolyAT to Reverb Time won't give different reverb times for each note. The latest input value overrides all previous values.
- Only the first two parameters and the Wet/Dry mix of the Pre-/Post-FX can be modulated.
- Some modules only have one parameter that can be modulated, such as the Ring-Noise module; in this case, there is nothing else for the upper Control knob to select when that field is highlighted.

Keytrack	Keytrack (center note = C4 for all mod sources except filter keytrack [center = C2])
Velocity	Velo On (Note On velocity), Velo Off (Note Off velocity)
Wheel	PitchWhl (Pitch wheel), ModWhl (Modulation wheel)
Ribbon [2]	RbnAbs (Ribbon Absolute bipolar), RbnAbs+ (Ribbon Absolute unipolar), RbnRel (Ribbon Relative)
Pedal	ExpPedal (Expression pedal), SusPedal (Sustain pedal)
MPE	MPE-X (pitch bend), MPE-Yabs (CC# 74 in some devices [absolute mode]), MPE-Yrel (CC# 74 in some devices [relative mode])
Voice	VoiceMod, VoiceMd+ ([+] indicates a unipolar source based on VoiceMod Edit.)
MIDI	CC [000-127]

[1] An LFO is normally a bipolar source. A plus sign [+] means that LFO will modulate the target positively or negatively without crossing the zero point. The direction is set by the mod depth.

[2] The Hydrasynth Explorer doesn't have a ribbon controller, but it will respond appropriately to another Hydrasynth model that does!

Modulation Destinations

These are the potential mod destinations in the Hydrasynth Explorer. A few may need explanation; see below the chart.

Group	Parameters
Arp	Mode, Division, Swing, Gate, Octave, OctMode, Length, Phrase, Ratchet, Chance
Osc 1-2 Osc 3 All Osc [1]	Pitch (+12/-12 semitones), Wave, WaveScan Pitch (+12/-12 semitones), Wave Pitch (+12/-12 semitones)
Mutator 1-4	Ratio, Depth, Window, Feedback, Dry/Wet, Warp [1-8]
Ring Mod	Depth
Mixer	Osc1Vol, Osc2Vol, Osc3Vol, RingVol, NoiseVol, Osc1Pan, Osc2Pan, Osc3Pan, RingPan, NoisePan, Osc1F1/2, Osc2F1/2, Osc3F1/2, RingF1/2, NoisF1/2
Filter 1 Filter 2	Cutoff, Resonance, Drive, Control, ENV1amt, LFO1amt, Keytrack Morph, Cutoff, Resonance, ENV1amt, LFO1amt, Keytrack
Amp	LFO2Amt, Level
Pre-FX Delay Reverb Post-FX	Param1, Param2, Dry/Wet Time, Feedback, Wet Tone, FeedTone, Dry/Wet Time, Tone, HiDamp, LoDamp, Dry/Wet Param1, Param2, Dry/Wet
Env 1-5	Attack, Hold, Decay, Sustain, Release
LFO 1-5	Rate, Level
ModMtrx [2]	Depth [1-32]
Macro	Macro 1- Macro 8
Voice	Detune, AnalogFL, PitchBnd, Vib Amt, Vib Rate, GlidTime
CV	ModOut 1, ModOut 2
MIDI [3]	CC [000-127]

[1] All Osc: A mod route can be applied to all three oscillators simultaneously.

[2] ModMtrx: A source can modulate the depth of any mod route. "Depth 1" targets mod route 1, etc.

[3] Incoming MIDI CCs can modulate certain parameters, and they can return the favor.

THE CV / GATE SECTION

CV/Gate connectors have a longer history in the music world than MIDI does! This is how the modules of early synthesizers were connected, using cables to carry the control voltages, gate triggers, and clock signals. And the resurgence of modular synths and Eurorack modules in the 21st century has brought these connection protocols back to the forefront of the music creation process for many musicians.

Hydrasynth Explorer is well-stocked in this area too, with three CV outputs, a Gate Out connector, and another that transmits clock signals. Each of the CV/Gate connectors can be configured to match the voltages and signal types of the most popular formats.

Basic Concepts

If you're new to the world of CVs and Gates, here are a few descriptions and ideas on how to put this stuff to work.

First, "CV" stands for "Control Voltage". It's a quick way to say "Use a change in this voltage value to control that device." A "gate" is something that opens and shuts, allowing the passage of electricity and preventing it, respectively. In practical terms, when a note is triggered by a key, Hydrasynth Explorer generates a CV (Pitch) and two Gate voltages (high and low, for "Note on" and "Note off").

This is done by converting digital data into analog voltages, which are then regulated by the System Setup preferences and supplied to the CV/Gate/Clock connectors.

The Mod Matrix is able to route almost any signal the Hydrasynth Explorer can produce to the Mod 1 and Mod 2 outputs. In other words, the keys, the pitch bend and mod strips, the LFOs and envelopes, even incoming MIDI data can be routed to the inputs of a modular synthesizer through the CV/Gate section. There has never been a better time to own a synth!

A Few More...

CV/Gate Polyphony

CV connectors are naturally monophonic, so they work best with monophonic patches. For the best results set Polyphony to Mono or Unison on [Voice Parameters: page 1 \(p. 55\)](#). To trigger the CV outs with a polyphonic patch, set the StMode to Alter. That parameter is on [Voice Parameters: page 2 \(p. 55\)](#).

Clocks and Sync

The arpeggiator can drive or be driven by external sequencers. (See [The Arpeggiator & MIDI \(p. 65\)](#) for more info). Set BPM Sync to On elsewhere too (LFOs, Envelopes, and Delay). The Clock connector in the CV/Gate section can send one of several sync rates to non-MIDI devices, as can the MIDI and USB ports. But incoming clocks must arrive via USB or MIDI. These options are set on pages 7 and 14 of [The System Setup Pages \(p. 78\)](#).

Compatibility

There are several voltage standards that companies use, so the Hydrasynth Explorer allows you to set the voltage ranges to match the source device. Those are defined on System Setup pages 12-15. More later about that.

Output Connectors

The output connectors (Pitch, Gate, Mod 1, Mod 2, and Clock) convert data from the Hydrasynth Explorer into voltages, which can then be used to trigger notes and control parameters on an external device.

Each of the five output connectors has a different purpose.

Pitch

A control voltage from this connector is intended to control the pitch on an external device. The output voltage is derived from the MIDI note number that corresponds to the key being played. This output is monophonic, so for the best results use one of the Mono or Unison options. A description of each of those modes and their note priority variations is available in the [Polyphony settings \(p. 55\)](#). The voltage ranges for this output are defined on [CV – Pitch Gate: Page 12 \(p. 84\)](#).

Gate

When a key is played, two Gate signals are generated: Gate high (note played) and Gate low (note released). The same signals are sent by the Tap Tempo button for each held note when the Tap Trig parameter is active on Arp Edit page 3.

Gate signals are normally transmitted to the same device that receives the control voltages generated by the Pitch output, and will conform to the note priority settings. Two types of gate signals are available (V-trig or S-trig); please refer to the documentation for the external device so you'll know which type to use.

The settings for this output are defined on [CV – Pitch Gate: Page 13 \(p. 84\)](#).

CVs and Arpeggios

The Hydrasynth Explorer's arpeggiator can be used to modulate external devices, too. When the arpeggiator plays a note it's the same as playing the keyboard manually: each note sends a Pitch CV and Gate signal. Again, for the best results use a monophonic voice mode (see [Polyphony settings \(p. 55\)](#)). To use the arpeggiator with a polyphonic patch, set the StMode to Alter on [Voice Parameters: page 2 \(p. 55\)](#).

Mod 1 and 2

These are also control voltage outputs. They can be used to modulate almost anything on a modular synth, but a common scenario is to route Mod 1 to a VCA (Voltage Controlled Amplifier) and Mod 2 to a VCF (Voltage Controlled Filter). The combined use of these two outputs and the Pitch/Gate outputs enable the Hydrasynth Explorer to control the entire signal path of an external monophonic device from start to finish.

The settings for these outputs are defined on [CV – Mods: Page 15 \(p. 85\)](#).

Clock

As stated earlier, four different sync rates are available for this connector. This selection and those for three related parameters are found and explained on [CV – Clock: Page 14 \(p. 84\)](#).

The process of saving a patch and finding it later are closely related, so this chapter covers both.

Using the Browser

Whether you're hunting for a specific patch or looking for something in a particular category, the Browser has several features that will help you quickly locate what you need.

Browse parameters: page 1

Press the [BROWSE] button to reveal these features:

Control	Parameter	Range	Description
1	Patch select [1]	8 banks x 128 patches	Scroll to select; [SHIFT] + scroll jump +/- 10
2	Patch name	(view only)	Shows name of selected patch
3	Category	(view only) [2]	Lead, Pad, Bass, etc.
4	Find By	Patch #, Name, Category	Sorting method (see below)

[1] Random patch selection is possible inside the Browse menu, page 1: Hold [RANDOM], press control button 1.

[2] Control knob 3 is only active when the Find By option is set to Category.

Browsing is fairly simple. This page presents all of the main functions:

- Turn Control knob 1 to select a patch (or use the big knob).
- Basic information about each patch is shown in fields 2 and 3.
- The patches will appear in a different order depending on the "Find By" selection.

Sort Methods

Patches can be sorted three ways. The patches don't move, they're just shown in a different order. This affects the Browser and the Home page: it determines the number of patches that can be selected, and the order in which they appear.

Find by Patch

This puts the patches in order first by the Bank they occupy (A-H) and then in numerical order within the Banks.

Find by Name

This option puts all of the patches in alphabetical order. As Control knob 1 or the Patch knob are turned the patch Bank and number might jump around; this is because the patches are still in their original locations.

Find by Category

This sorts the patches by their categories (Arp, Bass, FX, etc.). The categories are listed in alphabetical order, and Control knob 3 is used to scroll through them. Note that Control knob 3 is only active when Find By Category is selected.

Control knob 1 or the Patch knob are used to select individual patches within the selected category. As they are turned the patch Bank and number might jump around a lot; this is because the patches are not relocated when the Find By option is changed.

Browse parameters: page 2

Control	Parameter	Range	Description
1	Bank [1]	A–H	Jump to adjacent bank
2	Compare	8 banks x 128 patches	Compare active patch to another
3	Favorite Assign	(access)	Press Control button 2 to assign Favorites [2]

[1] The Bank parameter is hidden when the Find By option is set to Category.

[2] Patches are assigned to the Favorites banks on this page. See [Favorite Assign... \(p. 75\)](#).

Compare

The patch shown in edit field 2 of page 2 can be used to compare the current state of an edited patch with its unedited version (the default selection) or with any other Hydrasynth Explorer patch. Control knob 2 is used to scroll through the patches, which are always displayed here in their original order (by Bank and number). To jump through that list 10 patches at a time, hold [SHIFT] while turning Control knob 2.

Once the desired patch number appears in edit field 2, use Control button 2 to make the patch active. Toggle that button as often as needed to compare it to the edited patch. Note that temporary edits can be made to the comparison patch, but those edits will be lost as soon as Control button 2 is toggled back to the patch being edited.

Favorite Assign...

There are times when it is very useful to group certain patches together without having to relocate them. This feature helps you to prepare by designating certain patches as Favorites. It makes them available for rapid selection later.

There are eight banks of Favorites containing four patches each. You can put the same patch in several of those locations if you know you'll need that patch more than once during a performance, for example.

Favorites are *not* selected from inside the Favorites Assign page; this will be explained shortly. So the first step is to select the desired patch on the Home page. After that, here's how to add that patch to the Favorites list.

1. Press [BROWSE] to access the Browse page.
2. Press the Down arrow to reach page 2.
3. Press Control button 2 to access the Favorite Assign page.
4. To assign that patch to the first Favorites slot, press Control button 1. The button will flash quickly to confirm the assignment.
5. Use the Down/Up arrows to select the next group of 4 patches, if the current patch belongs there too.
The Left display indicates which of the 8 groups is selected.
6. Return to the Home page to select another patch, then repeat steps 1-4 to place it in a Favorites group.
7. Repeat steps 1-5 until the Favorites groups are full.

During the steps above the Patch knob is disabled. This helps prevent the accidental replacement of a Favorite within one of the groups.

Browse Favorites

Your Favorite patches can be accessed from any other page.

- Hold [SHIFT] and press [BROWSE] to access the Favorites.
- Use the Page Down/Up arrows to move between the eight groups of Favorites.
- Press one of the Control buttons to select a patch within the current group.

The Control button and the display field for the active patch are brightly lit.

Save the Patch

Patch Protection

There's a Protect setting in System Setup that is on by default. So the first time the [SAVE] button is pressed the Left display might show the message "Protection is On!" This will need to be disabled before a patch can be saved.

It's easy to find: press [SYSTEM SETUP] and the first page will appear. The Protect feature is in edit field 4. Turn Control knob 4 to deactivate or reactivate the feature. Press [EXIT] and the setting will be saved. Note: This setting is remembered when

power is turned off.

If you know you'll be using the Hydrasynth Explorer somewhere that a curious person might have access to it, it's probably a good idea to turn Protect back to On. This is a simple thing to change, and it could prevent the loss of an important patch later.

For now, set protect to Off and then press the [SAVE] button so we can learn about the features of the Save pages.

Save parameters: page 1

Control	Parameter	Range	Description
1	Select target location	8 banks x 128 patches	Scroll to select; [SHIFT] + scroll to jump +/- 10. The big Patch knob is disabled.
2	Patch name	Numbers, letters, symbols	Select up to 16 characters (see below)
3	Category	(various)	Choose patch category (Arp, Bass, FX, etc.)
4	Name of current target	(in memory)	This patch will be replaced if you [SAVE]

It's fairly easy to save a patch. This page presents all of the main functions:

- Use Control knob 1 to select a location in the current bank (or select a different bank on page 2). Use [SHIFT] + Control knob 1 to jump 10 patches at a time.
- Give the patch a name up to 16 characters long. Details are in the next section.
- Select a patch category with Control knob 3.
- Switch to page 2 and specify what will happen with the current Macro settings when the patch is saved (see *Macro Options* below).
- Choose a color for the Patch knob LEDs, and select another bank for the patch if desired.

Name the Patch

The naming of a patch happens in edit field 2. The current character is highlighted. Turn Control knob 2 to select a character. Use [SHIFT] + Control knob 2 to select the first character of the next character group: blank, 0-9, A-Z, a-z, and other characters (!, #, +, -, etc.).

Press Control button 2 to advance to the next character field. Use [SHIFT] + Control button 2 to select the previous character field.

Select a Category

Turn Control knob 3 to select one of the preset patch categories.

Save parameters: page 2

Control	Parameter	Range	Description
1	Macro options	Return, Save, Convert	Process current Macro values (see below)
2	Color	32 colors	Select LED color for Patch knob
4	Bank	A-H	Jump to adjacent bank

Macro Options

Control knob 1 lets you decide what will happen with the current settings of the Macro knobs and buttons when the patch is saved.

Return

This option returns all Macro knobs to zero and sets the Macro buttons to Off.

Save

This option preserves the positions of all Macro knobs and the status of all Macro buttons (On or Off).

Convert

This option converts the positions of all Macro knobs and buttons into new values for the parameters they control.

Here's what else happens with the Macro Convert option:

- After the patch is saved, the depth of all Macro knobs returns to zero and all buttons are set to Off.
- If the current relative value of a parameter exceeds that parameter's range, the value will be limited to the lowest or highest possible value depending on its current state. The Left display will show a warning when this is true.
- External CV and MIDI parameters under Macro control will be returned to their zero values.

Choose a Color

As an added degree of personalization, you can choose one of 32 colors when saving a patch. The selection affects the LED ring around the Patch knob.

Patch Backup

Whenever you get to the point where you'd hate to lose something you've created on the Hydrasynth Explorer, be it a patch or a list of Favorites, that's the time to back them up to your computer.

Our free ASM Manager application is the best way to do this: It will send or receive a single patch, several patches, a full bank, or the entire memory quickly and easily. You'll find ASM Manager at <https://www.ashunsoundmachines.com/downloads>.

Operational Notes

Navigation

The System Setup pages work the same way all other modules do, but here are some reminders:

- To access the next or previous page, use the Page Down / Up arrows.
- Cycle forward to the desired page quickly by pressing [SYSTEM SETUP] repeatedly.
- Use [SHIFT] + the Page Down / Up arrows to jump to the last page or back to first page.

Access, Action

- Some fields have Control buttons that execute a function, such as the Factory Reset. These are indicated by the word (action) in the charts.
- Some pages have access buttons that open another page. These are indicated by the word (access) in the charts. Follow the instructions in the Left display to calibrate the selected item.

Saving the Settings

Press [EXIT] or any module button to save System Setup changes. The message "System saving..." will be shown in the Left display for about 1 second. Note that sound output is silenced while the settings are being saved.

Save System State

You can specify which patch you see first when the Hydrasynth Explorer is powered up. It's a simple process:

- Select your favorite patch (that's the hard part).
- Hold [SAVE] and press [SYSTEM SETUP].
- The display shows "STATE SAVED!" to confirm the action.

Notes About Notes

Some parameters are self-explanatory, but others have additional information below the chart.

Master: Page 1

Control	Parameter	Range	Description
1	Transpose	- / +11 semitones	Transposes keyboard chromatically
2	Tuning	380 to 500 Hz	Sets center tuning frequency
3	O'Scope	On, Off	Toggles waveform animation in Left display
4	Memory protect	On, Off	Prevents overwriting of patches

Master: Page 2

Control	Parameter	Range	Description
1	Left contrast	0 to 127	Sets contrast for Left display
2	Right contrast	0 to 127	Sets contrast for Right display
3	Light menu	(access)	LED brightness for specific items
4	Light show	Off, 10 / 30 seconds, 1 / 5 / 15 / 30 minutes	Sets timeout period for onset of light show

Light Menu

The Light menu lets you set independent brightness levels for the Tap Tempo LED, the Patch knob, and all other LEDs as a group.

- Press [SYSTEM SETUP] twice to reach page 2.
- Press Control button 3 to enter the Light Menu.
- Use Control knobs 1-3 to set the brightness levels as shown in this table.

Control	Parameter	Settings	Description
1	LED Dim	On, Off	Dims all LEDs except the Patch knob and Tap Tempo button
2	Patch Dim	Off, Dim 1-4, Kill	Controls the Patch knob LED ring
3	Tap Dim	Off, Dim 1-4, Kill	Controls the brilliance of the Tap Tempo button

The LED levels change with each value so you can set the proper lighting for the current environment.

Master: Page 3

Control	Parameter	Range	Description
1	Knob Mode	Absolute, Pickup, Scale	How Variable knobs edit values when moved
2	Knob Speed	Slow, Medium, Fast	Sets Control knob response speed
3	Tempo Lock	On, Off	Selects Global tempo or per-patch tempo
4	Macro Button	Toggle, Trigger, Switch, Reset	Determines behavior of Macro Buttons

Knob Mode

This setting governs the response of the [Variable knobs \(p. 17\)](#) in the Filter and Arpeggiator sections, not the [Selection knobs \(p. 17\)](#).

- **Absolute:** the parameter value jumps to the physical position of the knob
- **Pickup:** the knob must pass through the parameter value before an edit will happen
- **Scale:** parameter value edit begins from the current knob position; the remaining throw of the knob covers the remaining range of the parameter. After the knob reaches its minimum or maximum position the parameter value range conforms to the physical position of the knob (see Absolute).

Knob Speed

This determines the response speed of the Control knobs only. It also affects the finer [SHIFT] + scroll movements. With a setting of **Slow** a full turn is required to cover the full parameter range; with a setting of **Fast** it takes less than half a turn, which can also sacrifice parameter resolution.

Tempo Lock

Each patch stores its own Tempo setting. Setting Tempo Lock to On enables the tempo to remain the same while selecting patches.

Macro Button

These settings are described in the [Macro Button Response \(p. 67\)](#).

Master: Page 4

Control	Parameter	Range	Description
1	Safe Edit	On, Off	Prevents accidental loss of edited patch
2	Battery type	Alkaline, Ni-MH	Specify the type of batteries being used
3	FxBypass Menu	(access)	Global bypass of specific FX modules in all patches
4	Microtun menu...	(access)	Opens Microtuning Menu (p. 80)

Safe Edit

When this parameter = On, if you try to select another patch before saving an edited patch, a message will ask for confirmation first. If a Macro control was the only thing changed, the message is not shown.

Note: This does not prevent Hydrasynth Explorer from responding to MIDI program changes.

Battery type

It's important to specify the type of batteries you're using so the battery level indicator will be accurate. An icon in the upper right corner of the Left display indicates the power source type and battery levels (when used).

Important notes about battery power:

- Use only 1.5V alkaline or 1.2V Ni-MH rechargeable batteries.
- DO NOT MIX BATTERY TYPES; all 8 batteries must match.
- The Hydrasynth Explorer does not recharge the Ni-MH batteries.
- Replace all batteries at the same time with fresh batteries.
- Be sure to observe the +/- polarity markings inside the battery compartment.
- Always remove the batteries once they are depleted, or if the unit will not be used for an extended period of time.

FX Bypass Menu

There are times when you may need to defeat one or more of the active effects for all patches. Some effects are integral to the character of a patch, such as flange or distortion. On the other hand, some effects are useful for setting a creative mood, but are less desirable when tracking parts in a studio. For example, you might want to disable the reverb but keep the delay for its rhythmic contributions. However, if you want to change the song tempo later, a recorded delay could be problematic.

For maximum flexibility, Hydrasynth Explorer has the ability to enable and disable the Pre-FX, Post-FX, Delay, and/or Reverb as needed. These settings are global; i.e., they affect all patches the same way.

- Press [SYSTEM SETUP] four times to reach page 4.
- Press Control button 3 to enter the FxBypass Menu.
- Use Control knobs 1-4 to enable or disable the desired FX module. Their LED buttons toggle off and on to indicate the settings.

Control	Parameter	Settings
1	Pre-FX	On, Bypass [1]
2	Delay	On, Bypass
3	Reverb	On, Bypass
4	Post-FX	On, Bypass [1]

[1] A Pre-/Post-FX module can have its FX Type set to Bypass. That setting only affects the current patch, not all patches, so the module LED stays lit. See [Pre- and Post-FX \(p. 50\)](#) for more information.

Microtuning Menu

The microtuning scale is selected in the [Voice Parameters: page 5 \(p. 58\)](#) menu. This section describes how to send and receive them.

After accessing the microtuning menu the following options are shown in the Right display:

Control	Parameter	Range	Description
Knob 1	Scale select	1–32	Selects the Microtuning scale location
2 (view only)	Scale name	1–16 characters	Define with third-party software (Scala, etc.)
Button 3	Receive Scale	(action)	Puts Hydrasynth Explorer into Scale Receive mode (send scale from computer)
Button 4	Send Scale	(action)	Press to send selected scale sys-ex from Hydrasynth Explorer via MIDI / USB

Scale Select

Use this field to choose the scale location that will receive a new scale or send its scale via MIDI / USB.

Scale Name

The scale name is shown in this field. It cannot be edited here. When creating your own scales, be sure to set the scale name in the third-party software before exporting it as an MTS file (MIDI Tuning Standard). In Scala, for example, the name is taken from the Description section for the scale, not from the file name. Note that Hydrasynth Explorer only uses the first 16 characters in the name.

Receive Scale

Press Control button 3 to put the Hydrasynth Explorer into sys-ex waiting mode. At this point, you can send the sys-ex scale file from your computer.

Send Scale

Press Control button 4 to send your scale via sys-ex.

Keys: Page 5

Control	Parameter	Range	Description
1	Velocity	On, Fix 60 / 80 / 100 / 110 / 127	Select velocity response or fixed value
2	Velocity Curve	Very Soft, Soft, Medium, Hard, Very Hard, NeoSoft, Neo, NeoHard	Select velocity response
3	Aftertouch	On, Off	Toggle aftertouch sensitivity [1]
4	Aftertouch Curve	6 options from Softer to Harder	Select aftertouch response [2]

[1] This will also disable or enable polyphonic aftertouch.

[2] See the Aftertouch settings section on the next page for information.

Velocity settings

To disable keyboard velocity sensitivity, select a fixed value (Fix 60, Fix 80, etc.). This only affects local response and outgoing MIDI; incoming velocity response is unaffected.

Velocity Curve defines the amount of force needed to reach maximum velocity, and also the curve from zero to maximum. The Very Soft through Very Hard curves vary from exponential to logarithmic. Neo curves are based on a new velocity calculation that allows for a more sophisticated response.

Keys: Page 6

Control	Parameter	Range	Description
1	Aftertouch Delay	0-400 ms	(see description below)
2	Aftertouch Fade	0-400 ms	(see description below)
3	Aftertouch Offset	- 4 to + 4	(see description below)
4	Aftertouch Release	0-400 ms	(see description below)

Aftertouch settings

- Aftertouch **Delay**: the time that transpires between note on and the onset of aftertouch.
- Aftertouch **Fade**: the time it takes to ramp aftertouch to its current value from 0.
- Aftertouch **Curve**: determines the amount of force required to reach maximum aftertouch values.
- Aftertouch **Offset**: reduces the dynamic range of the aftertouch. Positive values set a higher minimum point, so it takes more pressure to start the aftertouch. Negative values set a lower maximum point, so it takes less pressure to reach the maximum aftertouch value.
- Aftertouch **Release**: more like a compressor than an envelope, this applies to all upwards movements. This can help avoid unwanted modulation “wobble” while pressure is applied, and can sustain even after note off.

MIDI: Page 7

Control	Parameter	Range	Description
1	Clock Sync	Internal, USB, MIDI In, Auto	Clock source for Arp, LFOs, Envelopes, Delay FX (see below)
2	Local	On, Off [remembered]	Disconnect keyboard from internal engine
3	MIDI TX	1-16	Set MIDI transmission channel
4	MIDI RX	Omni, 1-16	Set MIDI receive channel

Clock Sync

- **INT RUN:** selects Hydrasynth Explorer as the master tempo clock. Sync signals are sent to MIDI, USB, and the CV Clock output.
- **USB:** selects the DAW as the clock master. CV Clock signals are sent to the CV Clock output at the selected rate. Tempo cannot be changed from the Hydrasynth Explorer.
- **MIDI In:** slaves the Hydrasynth Explorer to incoming MIDI clock data. CV Clock signals are sent to the CV Clock output at the selected rate. Tempo cannot be changed from the Hydrasynth Explorer.

- **AUTO:** Hydrasynth Explorer sets the clock source automatically to the first source that arrives. If the clock signal is interrupted, another is selected. Order of priority: USB > MIDI > Internal.

Local

When working with a DAW, setting Local to Off can prevent a MIDI loop. Most DAWs have the ability to prevent this also.

The On/Off setting is remembered when power is turned off. The Left display alerts you when Local = Off during power-up and on the Home page.

MIDI: Page 8

Control	Parameter	Range	Description
1	Aftertouch transmit	Off, Mono, Poly	Send channel, polyphonic, or no aftertouch data to USB / MIDI
3	Mod wheel transmit (MIDI CC #1)	On, Off	Send mod strip data via USB / MIDI
4	Mod wheel receive (MIDI CC #1)	On, Off	Receive mod wheel data via USB / MIDI

Aftertouch Transmit

Polyphonic aftertouch is an amazingly expressive tool. But it also generates a lot of control information, which can clog the MIDI data stream. Setting this to Off still allows both forms of aftertouch to be used locally but stops them from being transmitted. Mono enables Channel aftertouch values to be sent (one value for all active voices); Poly allows polyphonic aftertouch values to be sent.

MIDI: Page 9

Control	Parameter	Range	Description
1	Sustain pedal transmit	On, Off	Send sustain pedal data via USB / MIDI
2	Sustain pedal	+, -, Auto	Set polarity of sustain pedal or detect on power-up
4 [1]	MPE	On, Off	Send / receive MPE data

[1] This will lock out, change or disable some system parameters (see note).

What is MPE?

MPE stands for "MIDI Polyphonic Expression". It's a newer MIDI protocol used mainly by alternate controllers like Roli instruments, Haken

Continuum, and LinnStrument. When active, the voices of your Hydrasynth Explorer break into individual channels so each note can have its own pitch bend, timbre and pressure control.

Hydrasynth Explorer already supports polyphonic aftertouch, so MPE pressure is mapped automatically to Poly aftertouch. When the Hydrasynth has MPE set to ON, any patch that uses PolyAftT

as a mod source should respond automatically to pressure sent by an MPE controller.

There are also several mod sources dedicated to MPE. For a list, see [Modulation Sources \(p. 70\)](#).



Enabling MPE will lock out, change or disable certain system parameters:

- MIDI page 4: MIDI Tx & MIDI Rx = MPE Lock
- MIDI page 5: At TX = MPE Lock
- MIDI page 6: Overflow = MPE Lock (disabled).

MIDI: Page 10

Control	Parameter	Range	Description
Knob 1	Param TX	Off, NRPN, CC [1]	Select data format sent by controls
Knob 2	Param RX	Off, NRPN, CC [1]	Select data format received by parameters
Button 3	Send Patch	(action)	Sends sys-ex of the current patch via MIDI
Button 4	Send All Patches	(action)	Sends sys-ex of all patches and banks via MIDI

[1] These settings do not affect System MIDI controls such as Mod wheel (CC #1), Volume (CC #7), or Sustain (CC #64). For a full list of System MIDI controls, see the [MIDI CC Charts \(p. 94\)](#).

Parameter send/receive options

These settings determine if the Hydrasynth Explorer will transmit (TX) or receive (RX) 7-bit MIDI CC's or NRPNs while editing parameters. This allows for automation on DAWs that do not support the MIDI NRPN standard. The list of MIDI CC assignments is on [MIDI CC Charts \(p. 94\)](#).

Note: MIDI controls such as Mod wheel (CC #1), Volume (CC #7), and Sustain (CC #64) are not affected by the Param Tx/Rx settings. Some of those can be configured independently; see [MIDI: Page 8 \(p. 82\)](#) and [MIDI: Page 9 \(p. 82\)](#).

What's a NRPN?

NRPN stands for Non-Registered Parameter

MIDI: Page 11

Control	Parameter	Range	Description
1	Overflow [1]	Off, On	Connect two Hydrasynth models for extra polyphony
2	Arp TX [1][2]	Off, On	Send Arp note on/off messages via MIDI / USB
3	Pgm Chg TX	Off, On	Send MIDI Program Change upon patch selection
4	Pgm Chg RX	Off, On	Receive MIDI Program Change commands

[1] The Arp TX setting has no effect when Overflow = On. Overflow must = Off to send arpeggiator notes.

[2] This also toggles the arpeggiator response to incoming MIDI/USB notes.

Overflow

Two Hydrasynth models can act like a single unit using Overflow mode. We'll assume you're using two 8-voice Hydrasynth Explorers for this example.

Number. It's a way for higher-resolution control data to be sent and received. Each manufacturer uses different methods.

Send Patch / All Patches

These actions transmit sys-ex data via 5-pin MIDI or via USB to your computer. You can send one patch to any Hydrasynth or all patches to any Hydrasynth except a Deluxe.

But the best way to organize and share your patches is with our free ASM Manager application (<https://www.ashunsoundmachines.com/downloads>). It lets you share them between all Hydrasynth models, too.

It's simple: Connect a MIDI cable from the MIDI Out of one unit (the "master") to the MIDI In of the other unit (the "slave"). Next, enable Overflow on the master. Connect both sets of audio outputs to your sound system, and set good levels for each.

Now play 9 notes on the master: it plays voices 1-8 and voice 9 comes from the slave. After that the slave will cycle through voices 9-16

Here are some other things to know about Overflow mode:

- If both units have identical patch banks, enable PgmChgTX on the master and PgmChgRX on the slave. When you select a polyphonic patch, you'll have a 16-voice Hydrasynth!
- Set the master ParamTX and slave ParamRX to NRPN. Then almost every edit you make on the master will also be made on the slave.
- When both units have Mono or Unison patches selected, their voices are stacked as a single instrument (i.e., no overflow).

- If the slave doesn't have a certain patch, you can send it from the master to the slave via sys-ex (see the previous section). Warning: This overwrites the current patch location on the slave, so be sure to select an available location on the slave first.

- Overflow only works over the 5-pin MIDI connection, not USB MIDI.

Arp TX

Set this parameter to On if you want the arpeggiator to transmit note on/off commands over MIDI / USB. It also toggles the arpeggiator response to incoming notes. See [The Arpeggiator & MIDI \(p. 65\)](#) for more info. Sync information is sent whether Arp TX is On or Off.

Pgm Chg TX / RX

These parameters let the Hydrasynth Explorer send (TX) and/or receive (RX) MIDI program changes. This table shows which MIDI CC values to use to access a specific patch bank.

Patch Bank	CC# 0 (MSB)	CC# 32 (LSB)	Decimal	Hexadecimal
A-H	00	00-07	1-8	00-07

Note: To change banks, both types of Bank Select messages and a program change are needed, or else the Hydrasynth will only select patches within the current bank.

CV – Pitch Gate: Page 12

These settings are compatible with most modular synthesizer equipment. Please refer to the specifications of other devices and match those settings on the Hydrasynth Explorer.

Control	Parameter	Range
1	Control Voltage Range [1]	Octave (0-5V, +/-5V); Hz 0-5V; Octave 1.2V
2	Reference note [2]	C-1 to G9
3	Control Voltage Offset	-99 cents to +99 cents

[1] Octave = Volt per octave, Hz = Hz/Volt

[2] 1V reference note for Hz/V, or lowest V reference note for V/Oct.

CV – Pitch Gate: Page 13

Control	Parameter	Range
1	Gate Type	V-trig, S-trig

Control	Parameter	Range
2	Gate Volt	3V, 5V

CV – Clock: Page 14

These are the settings required to synchronize with most non-MIDI devices. Please refer to the specifications of other devices and match those settings on the Hydrasynth Explorer.

Control	Parameter	Range
1	Clock CV	3V, 5V
2	Clock Rate	1 PPS, 2 / 24 / 48 PPQ

Control	Parameter	Range
3	Clock Division	Off, 1/2, 2, 4
4	Clock Offset	-100ms to +100ms

PPS (Pulse Per Step) sends a single cycle of the clock output with every Arpeggiator step, or every time [TAP TEMPO] is pressed when the Tap Trig parameter is active on Arp Edit page 2. PPS works well with modular synths: the clock output behaves a bit like a Gate output (with Tap Trig) or even as a square wave LFO.

PPQ stands for Pulse Per Quarter note. Between these three options and the Clock Division value

it is possible to generate a wide variety of clock signals from 1/2 PPQ to 96 PPQ.

Clock Division

This subdivides or multiplies the clock output: 1/2 divides by 0.5, so the clock speeds up (to double tempo); 2 and 4 slow down the clock to half tempo and one-quarter tempo, respectively. A setting of Off = no change.

CV – Mods: Page 15

These settings enable the use of devices with different CV standards. For example, Output Mod 1 can be set to +/- 5V while Output Mod 2 are set to 0-5V. The Offset ranges are independent, which allows the voltages to be fine-tuned to compensate for the idiosyncrasies of individual devices.

Control	Parameter	Range
1	OM1 Range (Mod 1 output)	+/- 5V, 0-5V, 0-1V
2	OM2 Range (Mod 2 output)	+/- 5V, 0-5V, 0-1V
3	OM1 Offset (Mod 1 output)	+/- 3.0V
4	OM2 Offset (Mod 2 output)	+/- 3.0V



The allowable range for output voltages is from -5V to 5V. If an output value attempts to exceed the range, it will be clipped automatically to the lowest or highest possible value depending on which value has been exceeded.

Calibration: Page 16

Control	Parameter	Range	Description
1	Calibrate Strips	(access)	Full-range motion of the pitch and mod strips

Calibrate Strips

Press Control button 1 to access the calibration page and follow the instructions on the Left display. Move each strip slowly through its entire range, then press [EXIT]

System: Page 17

Control	Parameter	Range	Description
1	Self Test	(action)	Hold the button and all LEDs and displays are lit at maximum for visual inspection.
2	Factory Reset	(action)	Resets all parameters in System Setup to their default values. This does not erase the patch banks.

OS: Page 18

There is only one item on this page: The firmware version. Please include that in any communications you might have with our Technical Support department.

And always install the latest firmware in your Hydrasynth Explorer so you can take advantage of new features as they are added!

CONTROL COMBINATIONS

[INIT] + Button X

The following modules can be initialized by holding [INIT] and pressing the Access button.

- Amp
- Env (1-5)
- Macro Assign
- Mutant (1-4)
- Pre-FX
- Voice
- Arp On
- Filter (1, 2)
- Mixer
- Osc (1, 2, 3)
- Reverb
- Delay
- LFO (1-5)
- Mod Matrix
- Post-FX
- Ring-Noise

[INIT] + Control Button X

These parameters can be initialized by holding [INIT] and pressing the appropriate Control button.

Location	Parameter
Arp	Time Div, Swing, Gate, OctMode, Range, Mode, Length, Ratchet, Chance
Voice	Density, Detune, AnalogFL, StWidth, PitchBnd, Vib Amt, Vib Rate, GlidTime, GlidCurv, VoiceMod Edit
Voice / Scale Edit	Note 2-8
Voice / VoiceMod Edit	Voice 1-8
Macro / Assign Edit	Depth (or turn Control knob to initialize Depth value)
Mod Matrix	Depth (or turn Control knob to initialize Depth value)
Osc	Wave, Semi, Cents, WaveScan, Wavelist Edit, Density, Detune, Keytrack
Wavelist Edit	Wave 1-8
Mutant	Smooth, Ratio, Depth, Window, Feedback, Dry/Wet
Mutator / Custom Edit	Warp 1-8
Ring Noise	RMDepth, RingVol, NoiseType, NoiseVol
Mixer	Osc1Pan, Osc2Pan, RingPan, NoisePan, Osc1Filt, Osc2Filt, RingFilt, NoisFilt
Filter	Type, Morph, Cutoff, Resonance, Drive, Control, Env1Amt, LFO1Amt, Keytrack
Amp	LFO2Amt, AmpLevel
Pre-FX	[Param1-5], Dry/Wet
Delay	Time, Feedback, HiDamp, LoDamp, PreDelay, Dry/Wet
Reverb	Size, Time, Tone, HiDamp, LoDamp, PreDelay, Dry/Wet
Post-FX	[Param1-5], Dry/Wet
Env	Attack, Decay, Sustain, Release, Delay, Hold, AtkCurve, DecCurve, SusCurve, RelCurve, Repeat
LFO	Wave, Rate, TrigSync, Delay, Fade In, Phase, Level, Steps, Smooth, Step Edit
LFO / Step Edit	Step 1-8

[RANDOM] + Button X

The following modules can be randomized by holding [RANDOM] and pressing the Access button.

Button	Button	Button	Button
Amp	LFO (1-5)	Osc (1, 2, 3)	Ring-Noise
Arp On	Macro Assign	Post-FX	Voice
Delay	Mixer	Pre-FX	< or > (select random patch)
Env (1-5)	Mod Matrix	Reverb	-
Filter (1, 2)	Mutant (1-4)		-

[SHIFT] + Button X

These shortcuts are available by holding [SHIFT] and pressing the button.

Button	Function
Octave Down	Jump to lowest octave (-4)
Octave Up	Jump to highest octave (+4)
Arp On	Access Arp Edit page
Arp Latch	Sustain Hold toggle
Browse	Access Browse Favorites page
Home	Send All Notes Off command to engine, USB, and MIDI; turn off all voices and end all Envelopes; set all Gates to Off
Page Up	Jump to top page
Page Down	Jump to bottom page
Random (2x)	Press [RANDOM] twice. After the second press a random selection of values is pulled from other patches.

[SHIFT] + Control Knob X

The following value jumps are available by holding [SHIFT] and turning the appropriate Control knob.

Location	Control knob	Behavior
Arp	Tempo	Fine-tune by 0.1
Arp	Length	Jump to the closest special value [1, 2, 4, 8, 16, 32]
Browse	Patch	Jump by 10
Browse	Compare	Jump by 10
Patch	Save Patch #	Jump by 10
Voice	Pitchbend	Jump to the closest special value [0, 2, 4, 5, 7, 12, 24]
Macro Assign	Edit Destination Module	Jump to the closest first group of each type
Mod Matrix	Source	Jump to the closest first modulator of each group
Mod Matrix	Destination Module	Jump to the closest first group of each type
Osc X	Wave	Jump to the closest first wave of each group
Osc X	Semi	Jump to the closest special value [-36, -24, -12, 0, 12, 24, 36]
Osc X	Wavescan	Jump to the point of Wave position shown in inverted color [1.0, 2.0, 3.0, 4.0, 5.0, 6.0, 7.0, 8.0]
Mutant X	Ratio	Jump to the closest special value [0.25, 0.5, 1, 2, 3, 4, 5, 6, 7... 64]

[SHIFT] + Control Button X

Location	Control Button	Behavior
Home	Macro	Depends on settings on System Setup page 3. See Macro Button Response (p. 67) .
Reverb	Time	Toggle activation of Time Freeze
Envelope	Delay, Attack, Hold, Decay, or Release	Duration of holding the button determines the time value.
LFO	Rate, Delay, Fade In	Duration of holding the button determines the time value.

Preset Standard Scales

Below are the notes of each preset scale relative to the key of C. An "x" means that note is in the scale; a dash means it is not.

Scale	C	C#/D \flat	D	D#/E \flat	E	F	F#/G \flat	G	G#/A \flat	A	A#/B \flat	B
Chromatic	x	x	x	x	x	x	x	x	x	x	x	x
Major	x	-	x	-	x	x	-	x	-	x	-	x
BeBop Maj	x	-	x	-	x	x	-	x	x	x	-	x
BeBop	x	-	x	-	x	x	-	x	-	x	x	x
Mixolydian	x	-	x	-	x	x	-	x	-	x	x	-
Harmonic Major	x	-	x	-	x	x	-	x	x	-	-	x
Lydian	x	-	x	-	x	-	x	x	-	x	-	x
Lydian Aug	x	-	x	-	x	-	x	-	x	x	-	x
Acoustic	x	-	x	-	x	-	x	x	-	x	x	-
Pentatonic Maj	x	-	x	-	x	-	-	x	-	x	-	-
Locrian Maj	x	-	x	-	x	x	x	-	x	-	x	-
Prometheus	x	-	x	-	x	-	x	-	-	x	x	-
Whole Tone	x	-	x	-	x	-	x	-	x	-	x	-
Melodic Minor [1]	x	-	x	x	-	x	-	x	x	x	x	x
Half Diminished	x	-	x	x	-	x	x	-	x	-	x	-
Aeolian	x	-	x	x	-	x	-	x	x	-	x	-
Dorian	x	-	x	x	-	x	-	x	-	x	x	-
Harmonic Minor	x	-	x	x	-	x	-	x	x	-	-	x
Algerian	x	-	x	x	-	x	x	x	x	-	-	x
Gypsy	x	-	x	x	-	-	x	x	x	-	x	-
Hungarian	x	-	x	x	-	-	x	x	x	-	-	x
Ukranian	x	-	x	x	-	-	x	x	-	x	x	-
Dim. Whole Tone	x	x	-	x	x	-	x	-	x	-	x	-
Locrian	x	x	-	x	-	x	x	-	x	-	x	-
Neapolitan Major	x	x	-	x	-	x	-	x	-	x	-	x

[1] For the Melodic Minor scale both the ascending and descending scales are included.

Scale	C	C#/D \flat	D	D#/E \flat	E	F	F#/G \flat	G	G#/A \flat	A	A#/B \flat	B
Neapolitan Minor	x	x	-	x	-	x	-	x	x	-	-	x
Phrygian	x	x	-	x	-	x	-	x	x	-	x	-
Flamenco	x	x	-	-	x	x	-	x	x	-	-	x
Persian	x	x	-	-	x	x	x	-	x	-	-	x
Phrygian Dominant	x	x	-	-	x	x	-	x	x	-	x	-
Enigmatic	x	x	-	-	x	-	x	-	x	-	x	x
Tritone	x	x	-	-	x	-	x	x	-	-	x	-
In	x	x	-	-	-	x	-	x	x	-	-	-
Insen	x	x	-	-	-	x	-	x	-	-	x	-
Augmented	x	-	-	x	x	-	-	x	x	-	-	x
Blues	x	-	-	x	-	x	x	x	-	-	x	-
Pentatonic Minor	x	-	-	x	-	x	-	x	-	-	x	-
Hirajoshi	x	-	-	-	x	-	x	x	-	-	-	x

Preset Microtuning Scales

Micro scale #	Name	Scale	Name
1	1/4 Tone	17	Diaphonic 12-tone
2	19 Tone	18	Eikosany 1 3-11
3	31 Tone	19	Greek Aeolic
4	Al-Farabi SynChrom	20	H. Partch 43-note
5	Arabic 12-tone	21	Harmonic A 1-60
6	Archytas Chromatic	22	Hexany 1 3 5 9
7	Archytas Enharmonic	23	Hexany 1 3 7 11
8	Belafon Singapore	24	Hexany 13 11 13
9	Belafon W. Africa	25	Indian Raga
10	Bendeler Well-Tempered	26	Japanese Koto
11	Bohlen 11-tone	27	Just Major C
12	Chinese 300 B.C.	28	Just Minor C
13	Chinese DiziFlute	29	Mean tone C
14	Crysanthos Byzantine	30	Pelog / Slendro
15	Dekany 1 3 5 11-3	31	Sk8board 17-65 Tun
16	Dekany 1 3 5 7 11	32	W. Carlos Harmonic

Hydrasynth Phrases 1-16

Ashun Sound Machines

$\bullet = 120$

Phrase 01: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 02: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 03: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 04: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 05: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 06: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 07: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 08: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 09: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 10: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 11: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 12: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 13: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 14: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 15: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Phrase 16: Treble clef, 4/4 time. Notes: G4, A4, B4, C5, B4, A4, G4, F4, E4, D4, C4.

Hydrasynth Phrases 17-32

Ashun Sound Machines

♩ = 120

Phrase 17

Phrase 18

Phrase 19

Phrase 20

Phrase 21

Phrase 22

Phrase 23

Phrase 24

Phrase 25

Phrase 26

Phrase 27

Phrase 28

Phrase 29

Phrase 30

Phrase 31

Phrase 32

Hydrasynth Phrases 33-48

Ashun Sound Machines

Phrase 33 $\text{♩} = 120$

Phrase 34

Phrase 35

Phrase 36

Phrase 37

Phrase 38

Phrase 39

Phrase 40

Phrase 41

Phrase 42

Phrase 43

Phrase 44

Phrase 45

Phrase 46

Phrase 47

Phrase 48

The image displays a musical score for 16 phrases, numbered 33 through 48. Each phrase is written on a single staff in 4/4 time. The tempo is marked as quarter note = 120. The key signature is one flat (B-flat). The phrases consist of various rhythmic patterns and melodic lines, often featuring eighth and sixteenth notes. Some phrases include rests or specific articulation marks like accents. The notation is clean and professional, typical of a digital audio workstation (DAW) score.

Hydrasynth Phrases 49-64

Ashun Sound Machines

$\bullet = 120$

Phrase 49

Phrase 50

Phrase 51

Phrase 52

Phrase 53

Phrase 54

Phrase 55

Phrase 56

Phrase 57

Phrase 58

Phrase 59

Phrase 60

Phrase 61

Phrase 62

Phrase 63

Phrase 64

Sorted by Module

Module	Parameter	
Amp	Amp LFO2amt	62
ARP	ARP Division	106
ARP	ARP Gate	107
ARP	ARP Mode	108
ARP	ARP Ratchet	109
ARP	ARP Chance	110
ARP	ARP Octave	120
ARP	ARP Length	122
Delay	Delay Feedback	14
Delay	Delay Time	15
Delay	Delay Wet tone	63
Delay	Delay Dry/Wet	92
ENV 1	ENV1 Attack	81
ENV 1	ENV1 Decay	82
ENV 1	ENV1 Sustain	83
ENV 1	ENV1 Release	84
ENV 2	ENV2 Attack	85
ENV 2	ENV2 Decay	86
ENV 2	ENV2 Sustain	87
ENV 2	ENV2 Release	88
ENV 3	ENV3 Attack	89
ENV 3	ENV3 Decay	90
ENV 3	ENV3 Sustain	96
ENV 3	ENV3 Release	97
ENV 4	ENV4 Attack	25
ENV 4	ENV4 Decay	27
ENV 4	ENV4 Release	124
ENV 4	ENV4 Sustain	125
ENV 5	ENV5 Attack	102
ENV 5	ENV5 Decay	103
ENV 5	ENV5 Sustain	104
ENV 5	ENV5 Release	105
Filter 1	Filter 1 Drive	50
Filter 1	Filter 1 Keytrack	51
Filter 1	Filter 1 LFO1amt	52
Filter 1	Filter 1 Vel Env	53
Filter 1	Filter 1 ENV1amt	54
Filter 1	Filter 1 Res	71
Filter 1	Filter 1 Cutoff	74

Filter 2	Filter 2 Cutoff	55
Filter 2	Filter 2 Res	56
Filter 2	Filter 2 Type	57
Filter 2	Filter 2 Keytrack	58
Filter 2	Filter 2 LFO1amt	59
Filter 2	Filter 2 Vel Env	60
Filter 2	Filter 2 ENV1amt	61
LFO 1	LFO1 Gain	70
LFO 1	LFO1 Rate	72
LFO 2	LFO2 Gain	28
LFO 2	LFO2 Rate	73
LFO 3	LFO3 Gain	75
LFO 3	LFO3 Rate	76
LFO 4	LFO4 Gain	77
LFO 4	LFO4 Rate	78
LFO 5	LFO5 Gain	79
LFO 5	LFO5 Rate	80
Macros	Macro 1	16
Macros	Macro 2	17
Macros	Macro 3	18
Macros	Macro 4	19
Macros	Macro 5	20
Macros	Macro 6	21
Macros	Macro 7	22
Macros	Macro 8	23
Mixer	Noise Vol	03
Mixer	Noise Pan	08
Mixer	Ring Mod Vol	09
Mixer	Ring Mod Pan	10
Mixer	RM12 Depth	43
Mixer	OSC1 Vol	44
Mixer	OSC1 Pan	45
Mixer	OSC2 Vol	46
Mixer	OSC2 Pan	47
Mixer	OSC3 Vol	48
Mixer	OSC3 Pan	49
Mixer	OSC 3 FRate	114
Mixer	Noise FRate	115
Mixer	Ring Mod FRate	116
Mixer	OSC1 FRate	118

Sorted by CC Number

Mixer	OSC2 FRate	119
Mutator 1	Mutator1 Ratio	29
Mutator 1	Mutator1 Depth	30
Mutator 1	Mutator1 Dry/Wet	31
Mutator 2	Mutator2 Ratio	33
Mutator 2	Mutator2 Depth	34
Mutator 2	Mutator2 Dry/Wet	35
Mutator 3	Mutator3 Ratio	36
Mutator 3	Mutator3 Depth	37
Mutator 3	Mutator3 Dry/Wet	39
Mutator 4	Mutator4 Ratio	40
Mutator 4	Mutator4 Depth	41
Mutator 4	Mutator4 Dry/Wet	42
OSC 1	OSC1 wavscan	24
OSC 1	OSC 1 Cent	111
OSC 2	OSC2 WavScan	26
OSC 2	OSC 2 Cent	112
OSC 3	OSC 3 Cent	113
Post-fx	POST-FX Param1	68
Post-fx	POST-FX Param2	69
Post-fx	POST FX Mix	94
Pre-fx	PRE-FX Param1	12
Pre-fx	PRE-FX Param2	13
Pre-fx	PRE-FX Mix	93
Reverb	Reverb Time	65
Reverb	Reverb Tone	67
Reverb	Reverb Dry/Wet	91
System	Bank select MSB	00
System	Modulation wheel.	01
System	Master Volume	07
System	Expression pedal	11
System	Bank select LSB	32
System	Sustain pedal	64
System	All notes off	123
Voice	GlidTime	05
Voice	Glide	66
Voice	Detune	95
Voice	StWidth	117

Module	Parameter	
System	Bank select MSB	00
System	Modulation wheel.	01
Mixer	Noise Vol	03
Voice	GlidTime	05
System	Master Volume	07
Mixer	Noise Pan	08
Mixer	Ring Mod Vol	09
Mixer	Ring Mod Pan	10
System	Expression pedal	11
Pre-fx	PRE-FX Param1	12
Pre-fx	PRE-FX Param2	13
Delay	Delay Feedback	14
Delay	Delay Time	15
Macros	Macro 1	16
Macros	Macro 2	17
Macros	Macro 3	18
Macros	Macro 4	19
Macros	Macro 5	20
Macros	Macro 6	21
Macros	Macro 7	22
Macros	Macro 8	23
OSC 1	OSC1 wavscan	24
ENV 4	ENV4 Attack	25
OSC 2	OSC2 WavScan	26
ENV 4	ENV4 Decay	27
LFO 2	LFO2 Gain	28
Mutator 1	Mutator1 Ratio	29
Mutator 1	Mutator1 Depth	30
Mutator 1	Mutator1 Dry/Wet	31
System	Bank select LSB	32
Mutator 2	Mutator2 Ratio	33
Mutator 2	Mutator2 Depth	34
Mutator 2	Mutator2 Dry/Wet	35
Mutator 3	Mutator3 Ratio	36
Mutator 3	Mutator3 Depth	37
Mutator 3	Mutator3 Dry/Wet	39
Mutator 4	Mutator4 Ratio	40
Mutator 4	Mutator4 Depth	41
Mutator 4	Mutator4 Dry/Wet	42

Mixer	RM12 Depth	43
Mixer	OSC1 Vol	44
Mixer	OSC1 Pan	45
Mixer	OSC2 Vol	46
Mixer	OSC2 Pan	47
Mixer	OSC3 Vol	48
Mixer	OSC3 Pan	49
Filter 1	Filter1 Drive	50
Filter 1	Filter1 Keytrack	51
Filter 1	Filter1 LFO1amt	52
Filter 1	Filter1 Vel Env	53
Filter 1	Filter1 ENV1amt	54
Filter 2	Flt2 Cutoff	55
Filter 2	Flt2 Res	56
Filter 2	Flt2 Type	57
Filter 2	Filter2 Keytrack	58
Filter 2	Filter2 LFO1amt	59
Filter 2	Filter2 Vel Env	60
Filter 2	Filter2 ENV1amt	61
Amp	Amp LFO2amt	62
Delay	Delay Wet tone	63
System	Sustain pedal	64
Reverb	Reverb Time	65
Voice	Glide	66
Reverb	Reverb Tone	67
Post-fx	POST-FX Param1	68
Post-fx	POST-FX Param2	69
LFO 1	LFO1 Gain	70
Filter 1	Filter1 Res	71
LFO 1	LFO1 Rate	72
LFO 2	LFO2 Rate	73
Filter 1	Filter1 Cutoff	74
LFO 3	LFO3 Gain	75
LFO 3	LFO3 Rate	76
LFO 4	LFO4 Gain	77
LFO 4	LFO4 Rate	78
LFO 5	LFO5 Gain	79
LFO 5	LFO5 Rate	80
ENV 1	ENV1 Attack	81
ENV 1	ENV1 Decay	82
ENV 1	ENV1 Sustain	83
ENV 1	ENV1 Release	84

ENV 2	ENV2 Attack	85
ENV 2	ENV2 Decay	86
ENV 2	ENV2 Sustain	87
ENV 2	ENV2 Release	88
ENV 3	ENV3 Attack	89
ENV 3	ENV3 Decay	90
Reverb	Reverb Dry/Wet	91
Delay	Delay Dry/Wet	92
Pre-fx	PRE-FX Mix	93
Post-fx	POST FX Mix	94
Voice	Detune	95
ENV 3	ENV3 Sustain	96
ENV 3	ENV3 Release	97
ENV 5	ENV5 Attack	102
ENV 5	ENV5 Decay	103
ENV 5	ENV5 Sustain	104
ENV 5	ENV5 Release	105
ARP	ARP Division	106
ARP	ARP Gate	107
ARP	ARP Mode	108
ARP	ARP Ratchet	109
ARP	ARP Chance	110
OSC 1	OSC1 Cent	111
OSC 2	OSC2 Cent	112
OSC 3	OSC3 Cent	113
Mixer	OSC3 FRate	114
Mixer	Noise FRate	115
Mixer	RM12 FRate	116
Voice	StWidth	117
Mixer	OSC1 FRate	118
Mixer	OSC2 FRate	119
ARP	ARP Octave	120
ARP	ARP Length	122
System	All notes off	123
ENV 4	ENV4 Release	124
ENV 4	ENV4 Sustain	125

DECLARATION OF CONFORMITY

USA

Important Notice:
DO NOT MODIFY THE UNIT!

This product, when installed as indicate in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Ashun Sound Machines could void your FCC authorization to use this product in the USA.

IMPORTANT: When connecting this product to accessories and/or another product, use only high-quality shielded cables. The cable(s) supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

NOTE: This product has been tested and found to comply with the limit for a Class B Digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide a reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and may radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interferences harmful to the

operation to other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, which can be determined by turning the equipment off and on, please try to correct the interference by one or more of the following measures:

- Relocate either this product or the device that is affected by the interference.
- Use power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter(s).
- In the case of radio or TV interference, relocate and/or reorient the antenna. If the antenna lead-in is a 300 ohm ribbon lead, change the lead-in to the coaxial cable.
- If these corrective measures do not achieve satisfactory results, please consult the dealer or an experienced radio/TV technician for help.

The above statements apply **ONLY** to those products distributed in the USA.

CANADA

NOTICE: This class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulation.

AVIS: Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

EUROPE



This product complies with the requirements of European Directive 89/336/EEC

This product may not work correctly as a result of electro-static discharge. If that happens, simply restart the product.